

Manuals.plus / > Bajaj / > Bajaj ABS MX40C 2000 Watts Steam Iron User Manual

Bajaj MX40C

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

Bajaj ABS MX40C 2000 Watts Steam Iron User Manual

Model: MX40C

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Bajaj ABS MX40C Steam Iron. Retain this manual for future reference.

- Always ensure the iron is unplugged from the power outlet before filling or emptying the water tank, and when not in use.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Keep the iron out of reach of children and pets.
- Use the iron only for its intended purpose, which is ironing clothes.
- Never leave a hot iron unattended.
- Exercise caution when handling hot surfaces and steam to prevent burns.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged. Contact authorized service personnel for repair.
- The iron must be used and rested on a stable, heat-resistant surface.
- Ensure the voltage indicated on the iron matches your local mains voltage before connecting.

2. PRODUCT OVERVIEW

The Bajaj ABS MX40C is a 2000 Watts steam iron designed for efficient garment care. It features a ceramic soleplate, anti-drip, and anti-scale technology.

Components Included:

- 1N - Bajaj ABS MX40C Steam Iron
- 1N - Measuring Cup
- 1N - Warranty Card
- 1N - Instruction Manual (this document)

Iron Parts Diagram:



Figure 2.1: Front view of the Bajaj ABS MX40C Steam Iron, showing the handle, water tank, soleplate, and control panel.





Figure 2.2: Close-up of the iron's control panel, including the temperature dial, steam control, spray button, and steam burst button.





Figure 2.3: Underside view of the iron, highlighting the ceramic soleplate with steam vents.

3. SETUP

3.1 Initial Preparation

1. Unpack the iron and all accessories. Remove any protective films or labels from the soleplate or body.
2. Ensure the iron is in good condition and free from any visible damage.

3.2 Filling the Water Tank



Figure 3.1: Close-up of the water tank filling inlet with the cover open.

1. Ensure the iron is unplugged from the power outlet and cooled down.
2. Open the water tank inlet cover, usually located on the front of the handle.
3. Using the provided measuring cup, carefully pour clean tap water into the water tank. Do not exceed the 'MAX' fill line (water tank capacity is approximately 380ml).
4. Close the water tank inlet cover securely to prevent leakage.

Note: For areas with hard water, it is recommended to use a mixture of 50% tap water and 50% distilled water to prolong the life of the iron and prevent scale buildup.

3.3 Connecting to Power

1. Place the iron on a stable, heat-resistant ironing board or surface.
2. Plug the power cord into a suitable 230V, 50Hz AC power outlet. The iron is equipped with a 360-degree swivel cord for ease of use.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

1. Turn the temperature control dial to the desired setting based on the fabric type. Refer to the garment care label for recommended ironing temperatures.
2. The indicator light will illuminate, indicating that the iron is heating up. It will turn off once the set temperature is reached.

4.2 Steam Ironing

1. Ensure the water tank is filled (refer to Section 3.2).
2. Set the temperature dial to a steam-appropriate setting (usually indicated by the steam symbol or higher temperature settings like Cotton, Linen).
3. Once the indicator light turns off, adjust the variable steam control lever to the desired steam output.
4. Move the iron over the fabric. Steam will be released through the soleplate vents.

4.3 Dry Ironing

1. Ensure the water tank is empty or set the steam control lever to the 'DRY' or '0' position.
2. Set the temperature dial to the desired fabric setting.
3. Wait for the indicator light to turn off before beginning to iron.

4.4 Vertical Ironing (Steam Burst)

The vertical ironing feature is suitable for removing creases from hanging garments, curtains, or drapes.

1. Ensure the water tank is filled and the iron is heated to a high temperature setting (e.g., Cotton, Linen).
2. Hold the iron vertically, a few centimeters away from the fabric.
3. Press the steam burst button repeatedly to release powerful bursts of steam.

4.5 Spray Function

The spray function helps to dampen stubborn creases.

1. Ensure the water tank is filled.
2. Point the iron towards the fabric and press the spray button to release a fine mist of water.

4.6 Anti-Drip and Anti-Scale Technology

- **Anti-Drip:** This system prevents water from dripping from the soleplate when the iron's temperature is too low for steam production.
- **Anti-Scale:** The integrated anti-scale system helps to reduce the buildup of mineral deposits inside the iron, prolonging its lifespan and maintaining steam performance.

5. MAINTENANCE AND CLEANING

5.1 After Each Use

1. Unplug the iron from the power outlet.
2. Allow the iron to cool down completely.
3. Empty any remaining water from the tank by opening the water inlet cover and tilting the iron over a sink.

5.2 Cleaning the Soleplate

To clean the ceramic soleplate:

- Ensure the iron is cool and unplugged.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner, if necessary.
- Do not use abrasive scouring pads or harsh chemicals, as these can damage the ceramic coating.

5.3 Descaling (Anti-Scale Feature)

The iron has a built-in anti-scale system. However, regular maintenance can further prevent mineral buildup, especially in hard water areas.

- Periodically, fill the water tank with a mixture of water and white vinegar (1:1 ratio).
- Heat the iron to a medium setting and allow it to steam for a few minutes.
- Unplug, cool, and empty the tank. Rinse thoroughly with clean water.
- Iron over an old cloth to remove any residue before ironing garments.

5.4 Storage

Store the iron upright on its heel rest in a cool, dry place, with the cord neatly wrapped.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; temperature dial set to 'OFF' or too low.	Check power connection; test outlet with another appliance; turn temperature dial to a higher setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'DRY' or '0'; mineral buildup.	Fill water tank; set temperature to steam-appropriate level; adjust steam control; descale the iron (refer to Section 5.3).
Water leaks from soleplate.	Temperature too low for steam (anti-drip engaged); water tank overfilled.	Increase temperature setting; do not overfill water tank.
White flakes on clothes.	Mineral deposits (scale) in the iron.	Descal the iron (refer to Section 5.3); use distilled water or a water/distilled water mixture.

7. SPECIFICATIONS

Feature	Specification
Model Number	MX40C
Wattage	2000 Watts
Voltage	230 Volts
Frequency	50 Hz
Water Tank Capacity	380 ml
Soleplate Material	Ceramic
Item Weight	1100 Grams
Product Dimensions (L x W)	30.5L x 12.8W Centimeters

Feature	Specification
Special Features	Anti-Drip, Anti-Scale, Vertical Ironing, Variable Steam Output, Thermal Fuse, 360 Degree Swivel Cord

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Bajaj ABS MX40C Steam Iron comes with a **2-year warranty** from the date of purchase. Please retain your purchase receipt and the included warranty card for any warranty claims. The warranty covers manufacturing defects under normal household use.

The warranty does not cover damage resulting from misuse, neglect, accidental damage, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For service, repairs, or any product-related queries, please contact Bajaj Electricals Ltd. customer service.

Manufacturer/Importer: Bajaj Electricals Ltd.

Address: 45/47, Veer Nariman Road, Mumbai-400001

Please visit the official Bajaj website or refer to your warranty card for the most current contact details and service center locations.

© 2026 Bajaj Electricals Ltd. All rights reserved.

Related Documents - MX40C

	Bajaj Pulsar NS 200 Fi Training Notes Comprehensive training guide for service personnel covering maintenance, safety procedures, and technical specifications for the Bajaj Pulsar NS 200 Fi motorcycle.
---	--

Bajaj Dominar 400 BS VI Owner's Manual

Comprehensive owner's manual for the Bajaj Dominar 400 BS VI motorcycle, covering technical specifications, maintenance schedules, safety guidelines, and operating instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Bajaj MX40C manuals, gui

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options

Privacy Policy · DMCA