



Manuals.plus / > Borosil / > Borosil Quick Press 750-Watt Dry Iron User Manual

Borosil BDI750WMB11

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Borosil Quick Press 750-Watt Dry Iron User Manual

Model: BDI750WMB11

INTRODUCTION

Thank you for choosing the Borosil Quick Press 750-Watt Dry Iron. This appliance is designed for efficient and safe ironing of various fabrics. Please read this manual carefully before first use and keep it for future reference. This iron features a durable metal body, a thick American Heritage non-stick soleplate, a cool-touch plastic handle, and a 360-degree swivel power cord for ease of use. A thermal fuse is integrated for enhanced safety.



Figure 1: Borosil Quick Press 750-Watt Dry Iron

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. Read all instructions before using this iron.

- Always ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not leave the iron unattended while it is switched on or connected to the power supply.
- Keep the iron and its cord out of reach of children and pets when it is switched on or cooling down.

- Do not immerse the iron, power cord, or plug in water or any other liquid.
- Avoid touching hot surfaces. Use handles or knobs.
- Unplug the iron from the outlet when not in use and before cleaning. Allow it to cool completely before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The iron is equipped with a thermal fuse for safety, which will cut off power in case of overheating.
- Use the iron only for its intended household use.
- Do not let the cord touch hot surfaces.
- Always place the iron on a stable, heat-resistant surface when resting.

PRODUCT COMPONENTS

The Borosil Quick Press 750-Watt Dry Iron package includes the following items:

- 1N Borosil Quick Press 750-Watt Dry Iron
- 1N Instruction Manual

DIMENSIONS



Figure 2: Side view of the iron showing approximate dimensions (21.5 cm length, 10.5 cm height)

SETUP

1. **Unpacking:** Carefully remove the iron and all packaging materials from the box. Retain the packaging for future storage or transport.
2. **Initial Inspection:** Check the iron for any signs of damage. Do not use the appliance if it appears damaged.
3. **First Use Preparation:** Before using for the first time, wipe the soleplate with a slightly damp cloth to remove any manufacturing residues. Ensure the soleplate is completely dry before plugging in.

4. **Placement:** Place the iron on a stable, heat-resistant ironing board or surface.

OPERATING INSTRUCTIONS

1. **Plug In:** Insert the power plug into a suitable wall socket. The iron is designed for 230V, 50Hz AC supply.
2. **Heating Up:** The iron will begin to heat up immediately. There is no temperature control dial on this model; it operates at a fixed temperature suitable for most fabrics.
3. **Indicator Light:** A small indicator light (often red) will illuminate to show that the iron is heating. It may cycle on and off as the iron maintains its temperature.
4. **Ironing:** Once the iron is hot, you can begin ironing your garments. The American Heritage non-stick soleplate ensures smooth gliding over fabrics.
5. **Cord Swivel:** The 360-degree swivel power cord allows for flexible movement during ironing, preventing tangles.
6. **Resting the Iron:** When not actively ironing, always place the iron upright on its heel rest on the ironing board.
7. **After Use:** Once ironing is complete, unplug the iron from the wall socket.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your iron.

- **Cool Down:** Always allow the iron to cool down completely before cleaning or storing.
- **Cleaning the Soleplate:**
 - For light stains, wipe the soleplate with a damp cloth and a mild, non-abrasive cleaner.
 - Do not use abrasive scouring pads, powders, or harsh chemicals as these can damage the non-stick coating.
 - Never use metal objects to clean the soleplate.
- **Cleaning the Body:** Wipe the exterior of the iron with a soft, damp cloth. Dry thoroughly.
- **Storage:** Store the cooled iron upright on its heel rest in a dry, safe place. Ensure the power cord is neatly wrapped and not tightly coiled around the hot soleplate.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in correctly; power outage; faulty outlet; thermal fuse tripped.	Check power plug and outlet. Ensure power supply is active. If the thermal fuse has tripped due to overheating, the iron may require servicing. Do not attempt to repair yourself.
Iron is not gliding smoothly.	Soleplate is dirty or has residue build-up.	Clean the soleplate as per the "Maintenance and Cleaning" section.
Power cord appears damaged.	Wear and tear; improper handling.	Immediately unplug the iron. Do not use. Contact customer service for repair or replacement.

If you encounter problems not listed here, or if the suggested solutions do not resolve the issue, please contact Borosil customer support.

SPECIFICATIONS

Brand	Borosil
Model Name	Quick Press
Model Number	BDI750WMB11
Type	Dry Iron
Power	750 Watts
Voltage/Frequency	230V AC, 50 Hz
Soleplate Coating	American Heritage Non-Stick
Body Material	Metal body with cool-touch plastic handle
Safety Features	Thermal fuse
Cord	Longer power cord with 360-degree swivel
Item Weight	540 Grams

Included Components	1N Iron & 1N Instruction Manual
---------------------	---------------------------------

WARRANTY

The Borosil Quick Press 750-Watt Dry Iron comes with a **2-year warranty** on the product from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

CUSTOMER SUPPORT

For any queries, service requests, or warranty claims, please contact Borosil Customer Service:

Manufacturer: Borosil Limited

Address: 1101, Crescenzo, G-Block, Opp, MCA Club, Bandra Kurla Complex, Bandra East, Mumbai - 500 051, Maharashtra, India

Toll-Free Number: 1800-120-8499, 1800-224-550

You may also visit the official Borosil website for more information and support.

Related Documents - BDI750WMB11

	Borosil Prima 48 L Oven Toaster Griller (OTG) User Manual BOTG48CRS15 User manual for the Borosil Prima 48 L Oven Toaster Griller (OTG), model BOTG48CRS15. Contains instructions on safety, parts identification, controls, functions, cleaning, maintenance, and warranty.
	Borosil PRO 42 L Oven Toaster Griller (BOTG42CRB11) User Manual Comprehensive user manual for the Borosil PRO 42 L Oven Toaster Griller (Model BOTG42CRB11). Includes detailed safety instructions, parts identification, control functions, operation guides, cleaning and maintenance tips, and warranty information.
	Borosil Prima 30 L Oven Toaster Griller User Manual Comprehensive user manual for the Borosil Prima 30 L Oven Toaster Griller (Model

	BOTG30CRS13), covering important safeguards, parts identification, controls, functions, cleaning, maintenance, and warranty information.
	Borosil Prime Grill Sandwich Maker BGRILLPS11 User Manual User manual for the Borosil Prime Grill Sandwich Maker (Model BGRILLPS11), providing instructions on usage, safety, cleaning, and warranty information.
	Borosil Prima 42 L Oven Toaster Griller (BOTG42CRS14) User Manual Comprehensive user manual for the Borosil Prima 42 L Oven Toaster Griller (Model BOTG42CRS14), covering safety instructions, parts identification, functions, cleaning, maintenance, and warranty information.
	Borosil Smart Home Appliances Product Catalogue 2023 Explore the 2023 product catalogue from Borosil, featuring a wide range of smart home appliances including mixer grinders, choppers, juicers, OTGs, sandwich makers, air fryers, and more.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

BOROSIL BDI750WMB11

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Borosil BDI750WMB11 mæ

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

[AliExpress Manuals](#)

[Video Guides](#)

[Login](#)

FOLLOW

[@manualsplus](#)

[YouTube](#)

[LinkedIn](#)

[Facebook](#)

[Login](#)

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options

[Privacy Policy](#) · [DMCA](#)