

Manuals.plus / > Philips / > Philips Steam&Go Handheld Garment Steamer GC365/80 User Manual

Philips GC365/80

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Philips Steam&Go Handheld Garment Steamer

Model: GC365/80

Advertisements

User Manual

1. INTRODUCTION

Thank you for choosing the Philips Steam&Go Handheld Garment Steamer. This manual provides essential information for the safe and effective use of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: Philips Steam&Go Handheld Garment Steamer GC365/80. This image shows the compact, black and copper design of the steamer.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

Advertisements

- Read all instructions carefully before use.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance and its cord out of reach of children.

- Do not touch the hot steam plate or steam nozzle during operation, as they can cause burns.
- Only use distilled or demineralized water to prevent mineral buildup.
- Unplug the appliance before filling with water, cleaning, or when not in use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.

3. PACKAGE CONTENTS

Check the contents of your package. It should include:

Advertisements

- Philips Steam&Go Handheld Garment Steamer
- Brush attachment
- Storage bag
- Protective glove



Image 3.1: The Philips Steam&Go steamer shown with its included brush attachment and storage bag.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Philips Steam&Go:

Advertisements

1. Steam plate / Nozzle
2. Water tank (removable)
3. Power button / Steam trigger
4. Power cord

5. Brush attachment (for thicker fabrics)

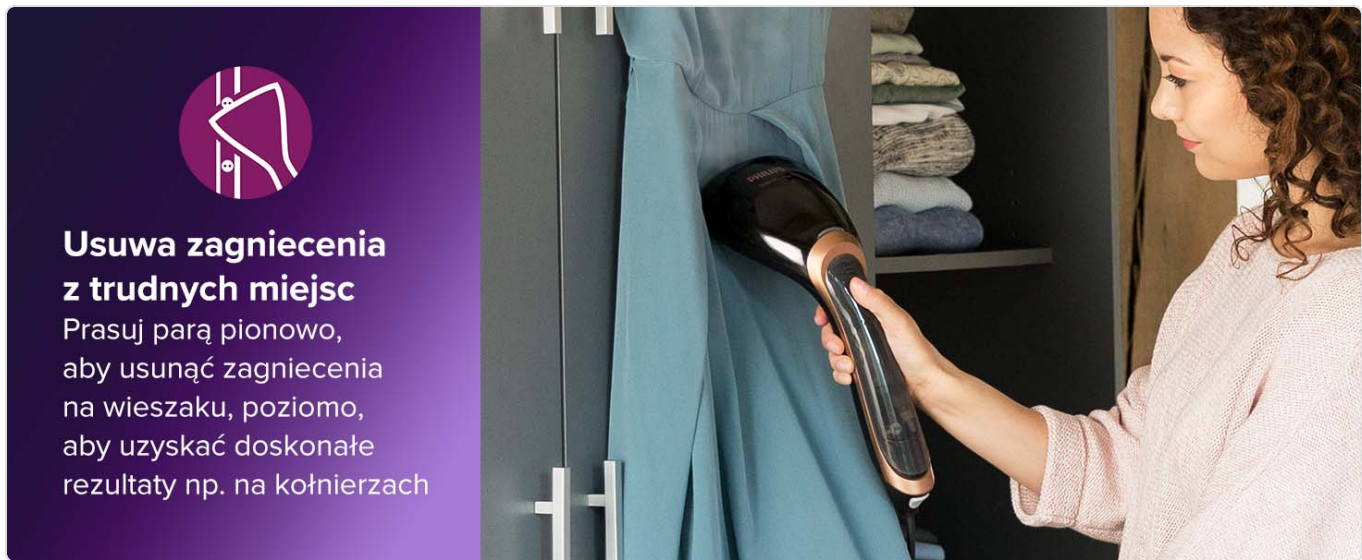


Image 4.1: Close-up view of the Philips Steam&Go, highlighting the SmartFlow heated plate and steam vents.

5. SETUP

1. **Fill the Water Tank:** Remove the detachable water tank. Open the rubber cap and fill the tank with up to 70 ml of distilled or demineralized water. Close the cap securely and reattach the tank to the steamer.
2. **Attach Brush (Optional):** For thicker fabrics like coats or upholstery, attach the brush accessory to the steam plate. This helps steam penetrate deeper and removes lint.
3. **Power On:** Plug the power cord into a suitable electrical outlet. The indicator light will illuminate.
4. **Heat Up:** The steamer heats up quickly, typically within 1 minute. The indicator light will change or stop blinking when it's ready for use.

Advertisements

6. OPERATING INSTRUCTIONS


The Philips Steam&Go is designed for both vertical and horizontal steaming, offering flexibility for various garments and situations.

6.1 Vertical Steaming

Ideal for clothes hanging on a hanger, such as shirts, dresses, and jackets.

1. Hang the garment on a hanger.
2. Hold the steamer upright and press the steam trigger.
3. Gently press the steam plate against the fabric and move it downwards, allowing the steam to relax the fibers and remove wrinkles.

Advertisements

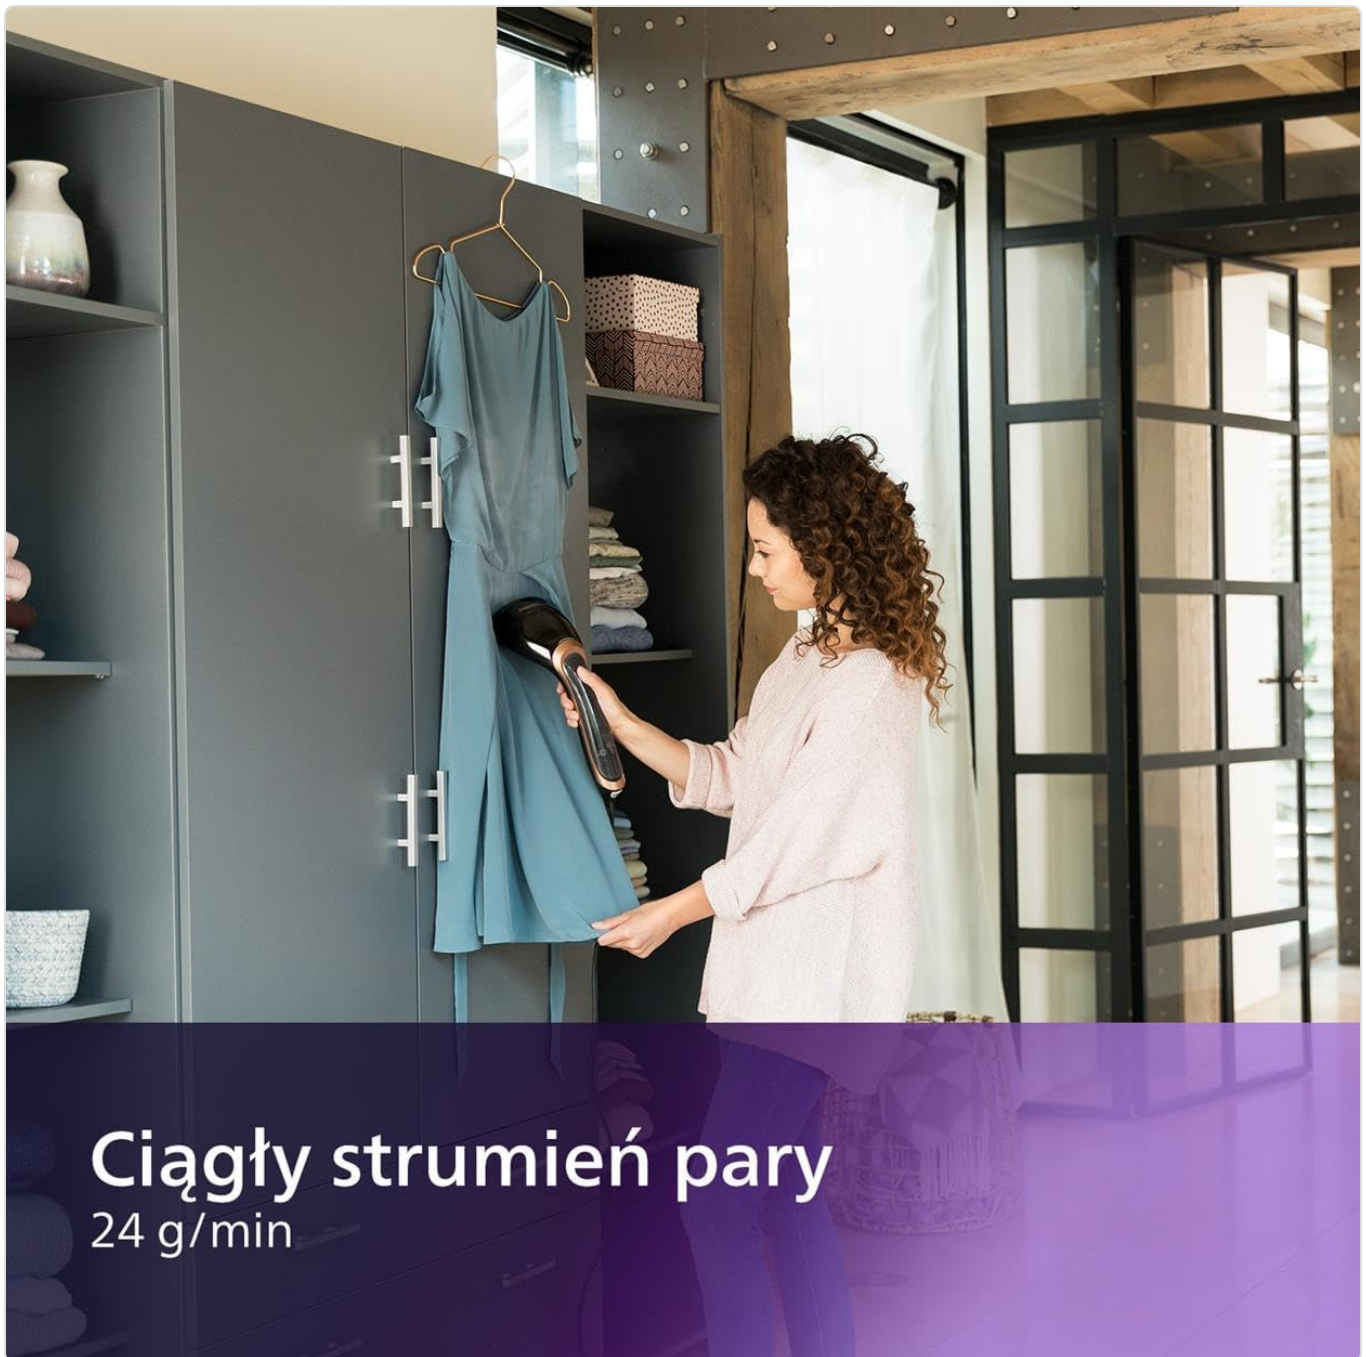

Ciągły strumień pary

24 g/min

Image 6.1: A user demonstrating vertical steaming on a dress, utilizing the continuous steam flow of 24 g/min.

6.2 Horizontal Steaming

Useful for collars, cuffs, or other areas that require a flat surface for better results.

1. Place the garment on a flat, heat-resistant surface (e.g., an ironing board or bed).
2. Press the steam trigger and move the steamer across the fabric. The SmartFlow heated plate ensures optimal temperature and prevents water spots.

Advertisements



Image 6.2: The Philips Steam&Go being used for horizontal steaming on a garment laid flat, demonstrating the heated plate's effectiveness.

6.3 Refreshing Garments

The continuous steam flow not only removes wrinkles but also helps to refresh clothes by eliminating odors and killing up to 99.9% of bacteria, extending the life of your garments between washes.



Image 6.3: Steaming a purple shirt, illustrating the safe application of the steamer on various fabrics without risk of burning.

Advertisements

Note: The SmartFlow heated plate is safe for all ironable fabrics and guarantees no burns, even on delicate materials like silk.

7. MAINTENANCE

7.1 Cleaning the Water Tank

After each use, or when the appliance is cool, remove the water tank and empty any remaining water. Rinse the tank with fresh water and allow it to air dry before storing.

7.2 Cleaning the Steamer Body

Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents. For the steam plate, gently wipe with a damp cloth when cool.

Advertisements

7.3 Descaling

If you notice reduced steam output or mineral residue, descale the appliance. Consult the Philips support website for specific descaling instructions for your model.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or not properly inserted. Appliance is not heated up. Mineral buildup.	Fill the water tank and ensure it is securely attached. Wait for the appliance to heat up (approx. 1 minute). Descale the appliance.
Water leakage from the steam plate.	Appliance not hot enough. Water tank not securely attached.	Allow the appliance to fully heat up before use. Ensure the water tank is firmly in place.
Water tank detaches easily.	Tank not securely seated.	Ensure the water tank is pushed firmly into its slot until it clicks into place.

If the problem persists, please contact Philips customer support.

9. SPECIFICATIONS

Brand	Philips
Model Number	GC365/80
Color	Black-Copper
Product Dimensions	38 x 15 x 12.8 cm
Weight	1.2 kg
Water Tank Capacity	70 ml
Power	1300 W
Voltage	240 Volts
Continuous Steam Output	24 g/min
Heating Time	1 minute
Special Features	Automatic steam regulation, Continuous steam, Vertical steam function, SmartFlow heated plate, Quick heat-up, Removable water tank

10. WARRANTY AND SUPPORT

Philips offers a standard manufacturer's warranty for this product. For detailed warranty terms and conditions, please refer to the warranty card included in your package or visit the official Philips website.

Advertisements

For product support, frequently asked questions, or to register your product, please visit the Philips support page:

www.philips.com/support

© 2025 Philips. All rights reserved.

Advertisements

Advertisements

	Philips Garment Steamer User Manual (GC360-GC365) This user manual provides comprehensive instructions, safety guidelines, and maintenance tips for Philips garment steamers, models GC360, GC361, GC362, GC363, GC364, and GC365. Learn how to effectively steam garments for wrinkle-free results.
	Philips 1000 Series Handheld Garment Steamer User Manual This user manual provides detailed instructions for operating and maintaining the Philips 1000 Series handheld garment steamer (model STH1000). It covers setup, usage, safety precautions, cleaning, and troubleshooting.
	Philips 1000 Series Handheld Garment Steamer STH1010 User Manual User manual for the Philips 1000 Series Handheld Garment Steamer (STH1010), providing instructions for use, safety precautions, and maintenance.
	Philips STE3170 Garment Steamer User Manual - Assembly, Operation, Maintenance Get detailed instructions for your Philips STE3170 garment steamer. Learn about assembly, how to fill the water tank, steaming techniques, descaling, cleaning, and support. This manual is optimized for SEO and accessibility.
	Philips Easy Touch Stand Steamer GC487/86: Effortless Garment Care Discover the Philips Easy Touch Stand Steamer GC487/86 for efficient de-wrinkling. Features 1800W power, 35g/min steam, large steam plate, and compact design for everyday convenience.
	Philips STH3000 Series Garment Steamer User Manual and Instructions Comprehensive user manual for the Philips STH3000, STH3010, and STH3020 handheld garment steamers, covering setup, usage, maintenance, and troubleshooting.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

PHILIPS GC365/80

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Philips GC365/80 manuals

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

[Home](#)[About Us](#)[Privacy Policy](#)[Login](#)

GUIDES

[Amazon Manuals](#)[AliExpress Manuals](#)[Video Guides](#)[Login](#)

FOLLOW

[@manualsplus](#)[YouTube](#)[LinkedIn](#)[Facebook](#)[Login](#)

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

[Open login options](#)

[Privacy Policy](#) · [DMCA](#)