

Manuals.plus / > Crompton / > Crompton Desire Plus 1100 W 1.5 KG Heavyweight Iron User Manual

Crompton ACGEI-DESIREP

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Crompton Desire Plus 1100 W 1.5 KG Heavyweight Iron

MODEL: ACGEI-DESIREP

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, maintenance, and care of your Crompton Desire Plus 1100 W 1.5 KG Heavyweight Iron. Please read this manual thoroughly before using the appliance and retain it for future reference.

Advertisements

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

- Always ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not leave the iron unattended while it is connected to the power supply or on an ironing board.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron, cord, or plug in water or any other liquid.
- Unplug the iron from the outlet when filling with water, emptying, or when not in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use the iron only for its intended household use.
- The soleplate can become extremely hot. Avoid direct contact with the hot soleplate.

PRODUCT OVERVIEW

Familiarize yourself with the components and key features of your Crompton Desire Plus iron.



A front view of the Crompton Desire Plus 1100W Heavyweight Iron, showcasing its sleek black design and ergonomic handle.



An image illustrating the iron's heavyweight design, held by a hand, which aids in effortless wrinkle removal.

Advertisements





A detailed view of the Weilburger German Coated Non-Stick Soleplate, designed for smooth gliding and enhanced durability.



This image highlights the iron's 1100 Watt powerful heating element, ensuring quick and efficient heating for effective ironing.

Advertisements





The thermostatic dial control offers 6 distinct fabric settings, allowing precise temperature adjustment for various garment types.



An illustration demonstrating the 360-degree swivel cord, providing flexibility and ease of movement during ironing.

Advertisements



SETUP

1. **Unpacking:** Carefully remove the iron from its packaging. Retain the packaging for storage or if the product needs to be returned.
2. **Inspect:** Check the iron for any signs of damage. Do not use if damaged.
3. **First Use:** Before first use, wipe the soleplate with a soft, damp cloth to remove any manufacturing residues. It is normal for a slight odor or smoke to be emitted during the

first few minutes of use as the heating element cures.

Advertisements



4. **Placement:** Place the iron on a stable, heat-resistant surface, such as an ironing board with a heat-resistant cover.

OPERATING INSTRUCTIONS

Temperature Control and Fabric Settings

The Crompton Desire Plus iron features a thermostatic dial with 6 fabric settings to ensure optimal ironing temperature for different materials.

1. **Sort Laundry:** Separate garments according to their fabric type (e.g., linen, cotton, wool, silk, satin, woven).
2. **Set Temperature:** Turn the temperature control dial to the appropriate setting for the fabric you wish to iron. Start with lower temperature settings for delicate fabrics and gradually increase for heavier materials.
3. **Pre-heating:** Plug the iron into a suitable power outlet. The indicator light will illuminate, indicating the iron is heating. Once the desired temperature is reached, the light will turn off.
4. **Ironing:** Begin ironing. The heavyweight design (1.5 kg) provides additional pressing power, reducing effort. The Weilburger non-stick soleplate ensures smooth gliding.
5. **Auto Shutoff:** The iron is equipped with an auto shutoff feature for safety. If left stationary for a period, it will automatically turn off. Move the iron to reactivate heating.
6. **After Use:** Once ironing is complete, turn the temperature dial to the 'OFF' position and unplug the iron from the power outlet. Allow the iron to cool down completely before

storing.

Advertisements



Fabric Settings Guide

Setting	Fabric Type	Recommendation
Low	Silk, Satin	Iron quickly, preferably on the reverse side.
Medium	Wool, Woven	Use a damp cloth for best results.
High	Cotton, Linen	Can be ironed while slightly damp for easier wrinkle removal.

MAINTENANCE AND CARE

- **Cleaning the Soleplate:** To clean the soleplate, ensure the iron is unplugged and completely cool. Wipe the soleplate with a damp cloth and a non-abrasive cleaner. Do not use harsh scouring pads or metallic cleaners as they can damage the non-stick coating.

Advertisements



- **Cleaning the Body:** Wipe the exterior of the iron with a soft, damp cloth. Do not use abrasive cleaners.
- **Storage:** Always store the iron upright on its heel rest to prevent damage to the soleplate. Ensure the cord is neatly wound around the cord winder (if applicable) or secured to prevent tangling. Store in a dry, safe place away from children.

TROUBLESHOOTING

If you encounter issues with your iron, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outage; temperature dial set to 'OFF' or too low; auto shutoff activated.	Check power connection; verify power supply; turn dial to desired temperature; move iron to reactivate.
Soleplate is sticking to fabric.	Temperature too high for fabric; soleplate is dirty.	Reduce temperature setting; clean the soleplate as per maintenance instructions.
Indicator light not working.	Iron has reached desired temperature (light turns off); faulty indicator light.	This is normal operation if iron is hot. If iron is cold and not heating, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Crompton
Model Number	ACGEI-DESIREP
Wattage	1100 Watts

Feature	Detail
Item Weight	1.5 Kilograms
Product Dimensions	31L x 14.8W Centimeters
Soleplate Type	Weilburger German Coated Non-Stick Aluminium
Special Features	Auto Shutoff, Even Heat Distribution, Heavyweight Design, Temperature Control, 360 Degree Swivel Cord
Colour	Black
Country of Origin	India

WARRANTY AND SUPPORT

Your Crompton Desire Plus iron comes with a 2-year warranty. Please refer to the warranty card included in the box for detailed terms and conditions.

Advertisements



For customer support, service, or warranty claims, please contact Crompton Greaves Consumer Electricals Limited:

Email: consumer.support@crompton.co.in

Phone: 9228880505

Address: Crompton Greaves Consumer Electricals Limited, Equinox Business Park, 1st Floor, Tower 3, LBS Marg, Kurla (W), Mumbai 400070, Maharashtra, India

Advertisements



Related Documents - ACGEI-DESIREP

	Crompton ARMOR Series Submersible Pump Controller Installation & Operation Manual Installation and operation guide for the Crompton ARMOR Series single-phase digital submersible pump controller. Includes troubleshooting, settings, and wiring diagrams.
	Crompton IntelliAgri GSM Controller: Installation and Operation Manual Comprehensive installation and operation manual for the Crompton IntelliAgri GSM Controller, a smart solution for remote pump operation and protection. Covers specifications, features, installation, commissioning, modes of operation, settings, SMS/Call commands, troubleshooting, factory reset, free installation offer, and warranty terms.
	Crompton CSR Annual Action Plan FY 2025-2026 Annual Action Plan for Corporate Social Responsibility (CSR) initiatives by Crompton Greaves Consumer Electricals Limited for the fiscal year 2025-2026, detailing programs, activities, implementation, and impact assessment.
	Crompton Greaves Consumer Electricals Limited ESG Databook FY 2024-25 Comprehensive ESG (Environmental, Social, and Governance) Databook for Crompton Greaves Consumer Electricals Limited, covering FY 2024-25. Details include financial

8/20/26, 7:16 PM	Crompton Desire Plus 1100 W 1.5 KG Heavyweight Iron User Manual
	performance, social initiatives, governance practices, risk management, and environmental sustainability efforts.
	Crompton LED Product Explorer 2018 Catalog Explore the 2018 LED lighting catalog from Crompton Greaves Consumer Electricals Limited, featuring a wide range of indoor, industrial, street, and landscape lighting solutions.
	Crompton Large Kitchen Appliances Catalog 2026 Ovens, Chimneys, Hobs & More Explore the comprehensive 2026 catalog from Crompton, featuring a wide range of high-performance kitchen appliances including chimneys, hobs, built-in ovens, microwaves, and dishwashers. Discover innovative designs and quality craftsmanship.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Advertisements



CROMPTON ACGEI-DESIREP**KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.**

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Crompton ACGEI-DESIREP

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options

Privacy Policy · DMCA