

Manuals.plus / > Russell Hobbs / > Russell Hobbs RGS2000SP Garment Steamer User Manual

Russell Hobbs RGS2000SP

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

Russell Hobbs RGS2000SP Garment Steamer User Manual

Model: RGS2000SP

Advertisements

[Safety Instructions](#) [Components](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for purchasing the Russell Hobbs RGS2000SP Garment Steamer. This manual provides important information regarding the safe operation, setup, use, and maintenance of your appliance. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

Advertisements

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot water.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance is for household use only.
- Do not direct steam at people, animals, or electrical appliances.
- Always ensure the water tank is securely in place before operating.
- Use distilled or de-mineralized water to prevent mineral buildup.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Russell Hobbs RGS2000SP Garment Steamer.

Advertisements



Figure 1: Fully assembled Russell Hobbs RGS2000SP Garment Steamer.
This image shows the main unit with wheels, adjustable pole, steam hose, and steamer head with an integrated ironing board.



Figure 2: Close-up of the steamer's base unit, highlighting the control dial for steam levels and the wheels for mobility.



Figure 3: Image illustrating the removal of the 1.8L detachable water tank from the main unit for easy refilling.



Figure 4: Detailed view of the hose connection point on the steamer's base, showing the secure attachment mechanism.

- **Main Unit:** Contains the water reservoir, heating element, and control panel. Equipped with wheels for portability.
- **Detachable Water Tank:** 1.8L capacity for extended steaming sessions.
- **Adjustable Pole:** Allows height adjustment from 1.0M to 1.5M.
- **Steam Hose:** Connects the main unit to the steamer head.
- **Steamer Head:** Delivers steam to garments.
- **Integrated Ironing Board:** Flexible board for horizontal and vertical steaming.
- **Control Dial:** For selecting 9 adjustable steam levels.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Assemble the Pole:** Insert the adjustable pole into the designated slot on the main unit until it clicks securely into place.
3. **Attach the Steamer Head:** Secure the steamer head onto the top of the adjustable pole.
4. **Connect the Hose:** Attach the steam hose to the main unit's steam outlet and the steamer head. Ensure both connections are tight to prevent steam leakage. Refer to Figure 4 for hose connection.
5. **Fill the Water Tank:** Remove the 1.8L detachable water tank (Figure 3). Fill it with distilled or de-mineralized water. Do not overfill. Reinsert the tank firmly into the main unit.

6. **Adjust Height:** Adjust the height of the pole to your desired working level (between 1.0M and 1.5M) using the locking mechanism on the pole.

Advertisements

OPERATING INSTRUCTIONS

Follow these steps for effective garment steaming.

1. **Power On:** Plug the power cord into a suitable electrical outlet. The power indicator light on the main unit will illuminate.
2. **Select Steam Level:** Turn the control dial on the main unit to select one of the 9 available steam levels. Choose a lower setting for delicate fabrics like silk and a higher setting for heavier materials like wool or cotton.
3. **Pre-heating:** Allow the steamer to pre-heat for approximately 45 seconds. The indicator light may change or turn off when ready, depending on the model. Steam will begin to emit from the steamer head.
4. **Prepare Garment:** Hang the garment on a hanger or place it on the integrated ironing board. For best results, gently pull the fabric taut with one hand while steaming with the other.
5. **Steaming:** Hold the steamer head a few inches away from the fabric and move it slowly over the wrinkled areas. For stubborn wrinkles, you may press the steamer head lightly against the fabric.
6. **Using the Ironing Board:** The flexible ironing board can be used in both horizontal and vertical positions to provide a flat surface for more precise steaming or light pressing.
7. **Finishing:** Once steaming is complete, turn the control dial to the "OFF" position and unplug the appliance. Allow the garment to cool and dry completely before wearing or storing.

Tips for Best Results:

- Always test on an inconspicuous area of the fabric first.
- For delicate fabrics, use a lower steam setting and keep the steamer head slightly further away.
- Steam from top to bottom for optimal wrinkle removal.
- Empty the water tank after each use to prevent mineral buildup.

Advertisements

CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your garment steamer.

- 1. Before Cleaning:** Always unplug the steamer from the power outlet and allow it to cool completely before cleaning.
- 2. Empty Water Tank:** Remove the water tank and empty any remaining water. Rinse the tank with fresh water and allow it to air dry.
- 3. Clean Exterior:** Wipe the exterior of the main unit and steamer head with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- 4. Descaling (if necessary):** If you notice reduced steam output or mineral deposits, descaling may be required. Mix a solution of equal parts white vinegar and water. Pour into the water tank and run the steamer until half the solution is used. Turn off, unplug, and let it sit for 30 minutes. Then run the remaining solution through. Finish by running two full tanks of clean water to flush out any vinegar residue.
- 5. Storage:** Store the steamer in a cool, dry place. Ensure the water tank is empty and the hose is not kinked.

TROUBLESHOOTING GUIDE

Refer to this guide for common issues and their solutions.

Advertisements

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty. Appliance not plugged in or not turned on. Mineral buildup (scaling). Hose kinked or blocked.	Refill water tank. Ensure power cord is securely plugged in and power is on. Perform descaling procedure (see Maintenance section). Straighten the hose and check for obstructions.
Water leaking from steamer head.	Overfilling the water tank. Condensation in the hose. Steamer head not fully heated.	Do not overfill the water tank. Hold the steamer head upright to allow condensation to drain back into the unit. Allow the steamer to fully pre-heat before use.
Appliance not heating.	No power. Faulty power outlet.	Check power connection and ensure the appliance is switched on. Test the outlet with another appliance.

If the problem persists after trying these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

- **Model:** RGS2000SP
- **Brand:** Russell Hobbs
- **Power:** 2000 Watts
- **Water Tank Capacity:** 1.8 Litres
- **Steam Levels:** 9 Adjustable
- **Adjustable Height:** 1.0M - 1.5M
- **Product Dimensions:** 5L x 5W x 5H Centimeters *(Note: These dimensions appear generic and may not represent the full assembled unit size.)*
- **Item Weight:** 1 Kilogram
- **Included Components:** Garment Steamer (main unit, water tank, adjustable pole, steam hose, steamer head with ironing board)

WARRANTY AND SUPPORT

The Russell Hobbs RGS2000SP Garment Steamer comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and faults under normal household use.

 
 
 
 
 
Advertisements

For warranty claims, technical support, or service inquiries, please contact Russell Hobbs customer service. Keep your purchase receipt as proof of purchase.
For more information, visit the official Russell Hobbs website or contact their customer support line.

© 2024 Russell Hobbs. All rights reserved.

Advertisements

Advertisements

	Russell Hobbs RHC2674 Handheld Garment Steamer: User Manual, Safety & Warranty Official user manual for the Russell Hobbs RHC2674 handheld garment steamer. Includes detailed safety instructions, operating guide, parts list, troubleshooting tips, and warranty information for optimal use and care.
	Russell Hobbs 28040-56 Garment Steamer User Manual User manual for the Russell Hobbs 28040-56 Garment Steamer, covering safety, usage, care, and troubleshooting. Features include multiple attachments and a ceramic heated plate.
	Russell Hobbs Steam Genie Essential Garment Steamer User Manual Discover the Russell Hobbs Steam Genie Essential garment steamer. This comprehensive user manual provides instructions on setup, usage, care, and troubleshooting for model 25592-56. Refresh and de-wrinkle clothes with ease.
	Russell Hobbs 25600-56 Garment Steamer User Manual User manual for the Russell Hobbs 25600-56 handheld garment steamer. Provides instructions on usage, safety precautions, attachments, maintenance, and troubleshooting for effective fabric care.
	Russell Hobbs RHC2760 Handheld Garment Steamer User Manual and Guide Comprehensive user manual and guide for the Russell Hobbs RHC2760 handheld garment steamer, covering setup, usage, care, maintenance, troubleshooting, and warranty information.
	Russell Hobbs Steam Genie Essential 25592-56 Garment Steamer User Manual User manual for the Russell Hobbs Steam Genie Essential Garment Steamer (Model 25592-56). Learn about its features, safe operation, filling, usage, and maintenance for efficient wrinkle removal.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

RUSSELL HOBBS RGS2000SP

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Russell Hobbs RGS2000SF

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options