



[Manuals.plus](#) / > [Philips](#) / > Philips Series 3000 Handheld Garment Steamer STH3020/10 User Manual

Philips STH3020/10

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Philips Series 3000 Handheld Garment Steamer User Manual

Model: STH3020/10

1. INTRODUCTION

Welcome to your new Philips Series 3000 Handheld Garment Steamer. This appliance is designed for quick and easy wrinkle removal, refreshing garments, and eliminating odors. Its compact and foldable design makes it ideal for both home use and travel. Please read this manual carefully before first use and keep it for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance in water or any other liquid.
- Keep the steam away from hands, face, and body when operating. Steam is hot and can cause burns.
- Always unplug the appliance before filling or emptying the water tank, and before cleaning.
- Use only clean tap water or demineralized/distilled water. Do not use perfumed water, vinegar, starch, descaling agents, ironing aids, or other chemicals, as these may cause water spitting, brown stains, or damage the appliance.
- The steam plate can be pressed against any ironable fabric without risk of burning. However, always test on an inconspicuous area first for delicate fabrics.
- Do not leave the appliance unattended when it is switched on.
- Keep out of reach of children.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Philips Series 3000 Handheld Garment Steamer.



Figure 3.1: Main view of the Philips Series 3000 Handheld Garment Steamer.



Figure 3.2: The removable 120 ml water tank for easy refilling.



Liviano y compacto

Se dobla para guardar

Figure 3.3: The lightweight and compact design, showing the foldable handle for storage.



Figure 3.4: Product dimensions: 13.8 x 12.6 x 23.3 cm.

Key Features:

- **Automatic Continuous Steam:** Up to 20 g/min for quick and simple wrinkle removal.
- **Refresh Without Washing:** Eliminates odors and kills 99.9% of germs, keeping garments fresh between washes.
- **No Burns Guaranteed:** Safe to use on all ironable fabrics, including delicate ones like silk.
- **Compact and Portable:** Lightweight and foldable design for easy use, storage, and travel.
- **Removable Water Tank:** 120 ml capacity for convenient refilling.

4. SETUP

1. **Unpack the Appliance:** Carefully remove the steamer and all accessories from the packaging.
2. **Fill the Water Tank:**
 - Remove the 120 ml water tank from the main unit.
 - Open the water tank cap.
 - Fill the tank with clean tap water or demineralized/distilled water up to the MAX indication.
 - Close the cap securely and reattach the water tank to the steamer unit.
3. **Connect to Power:** Plug the power cord into a suitable electrical outlet (220V).

5. OPERATING INSTRUCTIONS

5.1. Getting Started

1. After filling the water tank and plugging in, press the power button. The indicator light will illuminate.
2. Wait approximately 30 seconds for the steamer to heat up. The indicator light may change or stop blinking when ready.

5.2. Steaming Garments

The steamer provides continuous steam at 20 g/min for effective wrinkle removal.

Advertisements



- Hang the garment on a hanger.
- Hold the steamer upright, with the steam plate facing the garment.
- Gently pull the garment taut with your free hand.
- Move the steam plate slowly downwards over the garment, allowing the steam to penetrate the fabric.
- For stubborn wrinkles or areas like cuffs and collars, you can press the steam plate directly against the fabric and steam horizontally.
- The steamer is safe for all ironable fabrics, including delicate materials like silk.



Figure 5.1: Steaming a garment directly on a hanger, eliminating the need for an ironing board.

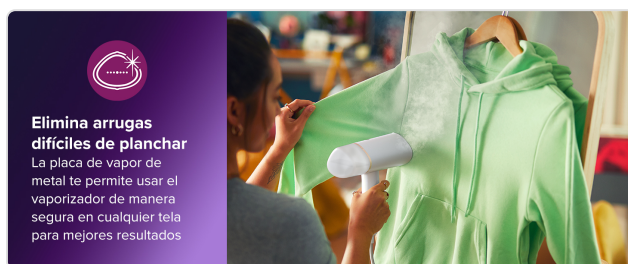


Figure 5.2: Effective wrinkle removal on various fabrics.

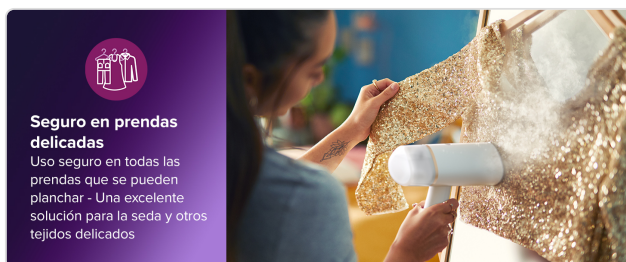


Figure 5.3: Safe and gentle steaming for delicate garments.

5.3. Refreshing Garments

The powerful steam helps to refresh clothes and eliminate odors without the need for washing, making it ideal for garments worn once or stored for a long time.



Figure 5.4: Refreshing clothes between washes, eliminating odors and germs.

6. MAINTENANCE

6.1. After Each Use

- Unplug the appliance from the power outlet.
- Allow the steamer to cool down completely before handling or storing.
- Remove the water tank and empty any remaining water.
- Wipe the steam plate and outer casing with a soft, damp cloth.

Advertisements



6.2. Storage

The Philips Series 3000 Handheld Garment Steamer features a foldable handle for compact storage.

- Fold the handle down for reduced size.
- Store the appliance in a dry, safe place, away from direct sunlight and moisture.
- The included travel pouch can be used for convenient storage and transport.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or insufficient steam.	Water tank is empty or not properly inserted. Appliance not heated up.	Refill water tank and ensure it is correctly inserted. Wait for the appliance to heat up (approx. 30 seconds).
Water spitting or brown stains.	Using perfumed water or hard tap water. Mineral buildup.	Only use clean tap water or demineralized/distilled water. Do not use additives. If buildup occurs, clean the appliance as per maintenance instructions.
Appliance makes gurgling noise.	Normal operation as water is drawn and heated.	This is normal and indicates the appliance is functioning correctly.
Water tank empties quickly.	Continuous steam usage. Small tank capacity for portability.	The 120ml tank is designed for quick touch-ups. Refill as needed.

8. SPECIFICATIONS

Feature	Specification
Model Number	STH3020/10
Power	1000 W
Voltage	220 V
Continuous Steam Output	Up to 20 g/min
Water Tank Capacity	120 ml
Heat-up Time	30 seconds
Product Dimensions (L x W x H)	13.8 x 12.6 x 23.3 cm
Product Weight	890 g
Material	Plastic

9. WARRANTY AND SUPPORT

For warranty information and product support, please refer to the warranty card included with your purchase or visit the official Philips website. You can also find frequently asked questions and contact information for customer service there.

Advertisements



Official Philips Website: www.philips.com

© 2024 Philips. All rights reserved.

Advertisements



Related Documents - STH3020/10

	Philips 3000 Series Garment Steamer User Guide A comprehensive guide to using the Philips 3000 Series portable garment steamer, including setup, operation, and maintenance instructions.
	Philips STH3000 Series Garment Steamer User Manual and Instructions Comprehensive user manual for the Philips STH3000, STH3010, and STH3020 handheld garment steamers, covering setup, usage, maintenance, and troubleshooting.
	Philips 3000 Series Garment Steamer STH3000/STH3020 User Manual Comprehensive user manual for the Philips 3000 Series Garment Steamer (models STH3000, STH3020). Learn how to use, maintain, and troubleshoot your garment steamer for effective garment care.