 



10

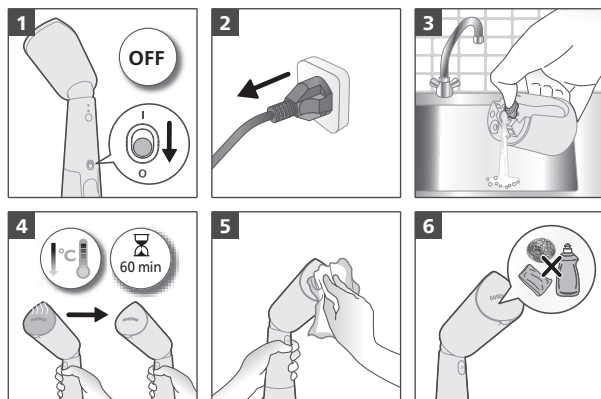


12



 STH5030

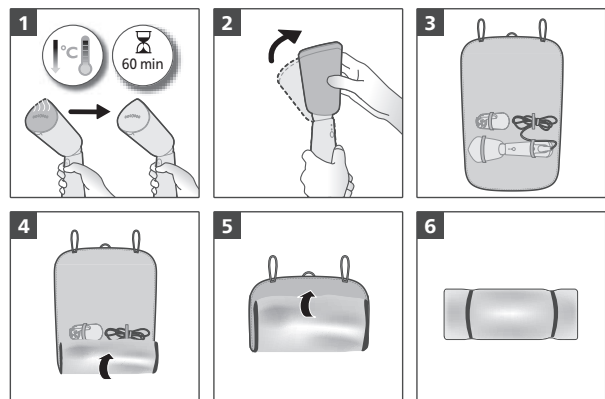


13

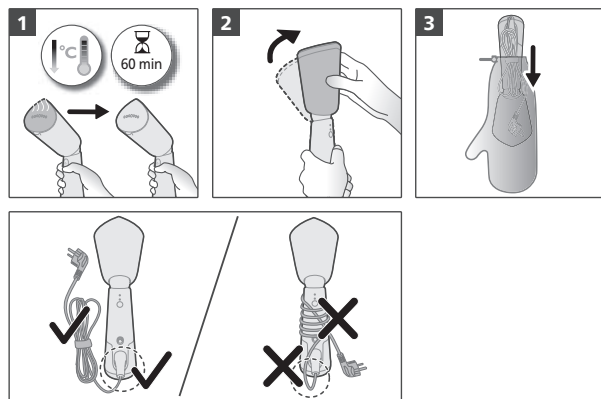 STH5020
STH5030

11



 STH5010

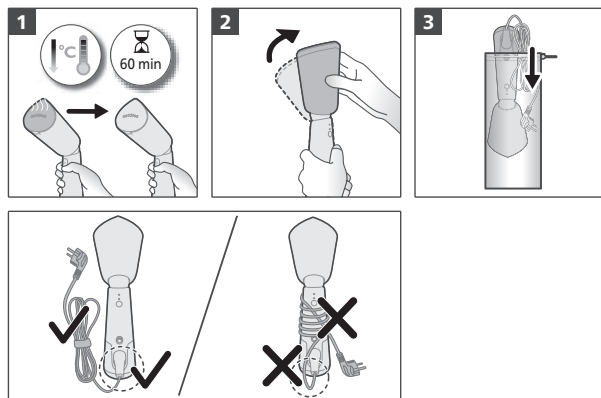

EN Welcome, Get started! **AZ** Xoş gəldiniz, başlayın! **BG** Добре дошли, да започваме!
CS Vítáme vás v sekci Začínáme! **DA** Velkommen, kom godt i gang! **DE** Willkommen! Legen Sie los!
EL Καλωσήρθατε, ας ξεκινήσουμε! **ES** ¡Hola, empecemos! **ET** Tere tulemast, alustage!
FI Tervetuloa, aloitetaan! **FR** Bienvenue, débutez ! **HR** Dobro došli, započnite! **HU** Üdvözlünk!
 Kezdjük is hozzá! **HY** Բարի գալուստ, սկսեք: **ID** Selamat datang, silakan memulai! **IT** Ti diamo il benvenuto. Iniziamo!
KA მოგესალმებით, დაიწყეთ მუშაობა! **KK** Қош келдіңіз, ал бастайық!
KO 환영합니다. 지금 시작하세요! **KY** Кош келиңиз, баштадык! **LT** Sveiki, pradėkite naudoti!
LV Laipni lūgti, viss gatavs lietošanai! **MK** Добре дојдовте, започнете со употреба!
MS-MY Selamat datang, mari bermula! **NL** Welkom, aan de slag! **NO** Velkommen, kom i gang!
PL Witaj, zacznajmy! **PT** Bem-vindo, vamos começar! **PT-BR** Bem-vindo, vamos começar!
RO Bine ai venit, începe! **RU** Добро пожаловать, приступим! **SK** Vitajte, začíname!
SL Dobrodošli, začnite! **SQ** Mirë se vini, fillojmë! **SR** Dobro došli, započnite! **SV** Välkommen. Nu sätter vi igång!
TG Хуш омадед, оғоз кунед! **TH** ยินดีต้อนรับสู่การใช้งาน! **TK** Hoş geldiniz, başlayın!
TR Hoş geldiniz, haydi başlayalım! **UK** Вітаємо, розпочнімо! **UZ** Xush kelibsiz, boshlang!
VI Chào mừng, Bắt đầu! **SC** 欢迎您，让我们开始吧! **TC** 歡迎，馬上開始！
FA خوش آمدید، شروع کنید! **AR** أهلا بك، تفضل وابدأ الاستخدام!

EN Registration and Benefits **AZ** Qeydiyyat və Üstünlüklər **BG** Регистрация и предимства
CS Registrace a výhody **DA** Registrering og fordele **DE** Registrierung und Vorteile **EL** Δήλωση και πλεονεκτήματα **ES** Registro y ventajas **ET** Registreerimine ja eelised **FI** Rekisteröinti ja edut
FR Enregistrement et avantages **HR** Registracija i prednosti **HU** Regisztráció és előnyök **HY** Գրանցում և արտոնություններ **ID** Pendaftaran dan Manfaat **IT** Registrazione e vantaggi **KA** რეგისტრაცია და უპირატესობები **KK** Тіркелу және артықшылықтар **KO** 등록 및 혜택 **KY** Каттоо жана пайдалар **LT** Registracija ir privalumai **LV** Reģistrācija un priekšrocības **MK** Регистрација и поволности **MS-MY** Pendaftaran dan Manfaat **NL** Registratie en voordelen **NO** Registrering og fordeler **PL** Rejestracja i korzyści **PT** Registo e vantagens **PT-BR** Registro e vantagens **RO** Înregistrare și beneficii **RU** Регистрация и преимущества **SK** Registrácia a výhody **SL** Registracija in ugodnosti **SQ** Regjistrimi dhe përfitimet **SR** Registracija i prednosti **SV** Registrering och fördelar **TG** Бақайдирӣ ва имтиёзо **TH** การลงทะเบียนและสิทธิประโยชน์ **TK** Bellige alýş we peýdalary **TR** Kayıt ve Avantajlar **UK** Реєстрація та переваги **UZ** Ro'yxatdan o'tish va imtiyozlar **VI** Đăng ký và lợi ích **SC** 注册和权益 **TC** 註冊與權益 **FA** ثبتنام و فواید آن **AR** التسجيل والمزايا

EN Digital manual **AZ** Rəqəmsal təlimat kitabçası **BG** Дигитално ръководство **CS** Digitální příručka **DA** Digital manual **DE** Digitales Handbuch **EL** Ψηφιακό εγχειρίδιο **ES** Manual digital **ET** Digitaalne kasutusjuhend **FI** Digitaalinen käyttöopas **FR** Manuel numérique **HR** Digitalni priručnik **HU** Digitális kézikönyv **HY** Թվային ձեռնարկ **ID** Manual digital **IT** Manuale digitale **KA** ციფრული სახელმძღვანელო **KK** Цифрлық нұсқаулық **KO** 디지털 설명서 **KY** Санариптик, кол менен **LT** Skaitmeninis vadovas **LV** Digitālā rokasgrāmata **MK** Дигитално упатство **MS-MY** Manual digital **NL** Digitale handleiding **NO** Digital håndbok **PL** Elektroniczna instrukcja obsługi **PT** Manual digital **PT-BR** Manual digital **RO** Manual digital **RU** Цифровое руководство **SK** Digitálna príručka **SL** Digitalni priročnik **SQ** Manuali digjital **SR** Digitalno uputstvo **SV** Digital användarhandbok **TG** Роҳнамои рақамӣ **TH** คู่มือดิจิทัล **TK** Sanly gollanma **TR** Dijital kılavuz **UK** Цифровий посібник **UZ** Raqamli qo'llanma **VI** Hướng dẫn kỹ thuật số **SC** 电子说明书 **TC** 電子說明書 **FA** راهنمای دیجیتالی **AR** الدليل الرقمي

PHILIPS

STH5000 series

 
STH5010, STH5020
STH5030Welcome,
Get started!

home.id/welcome


Registration
and Benefits

Digital manual


1

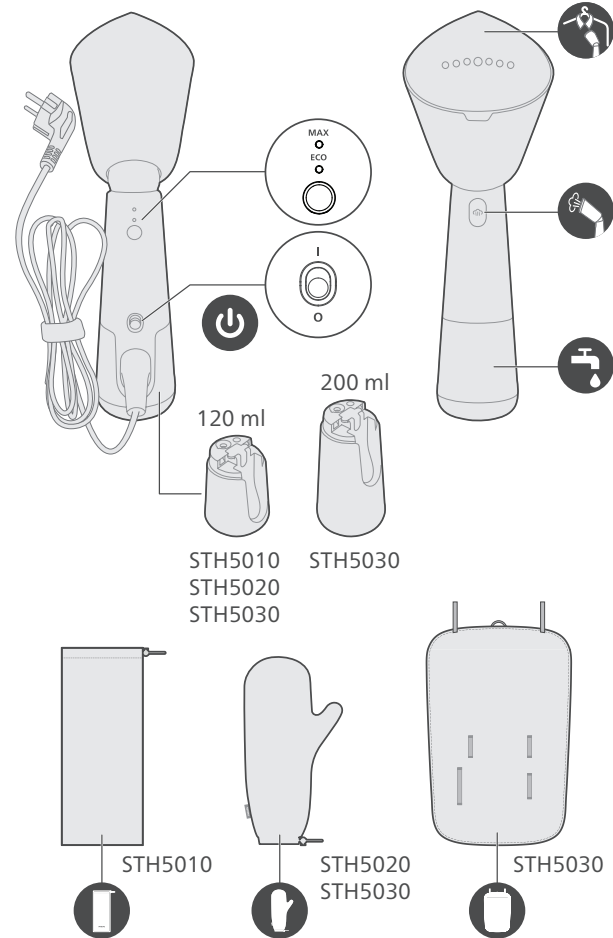


2

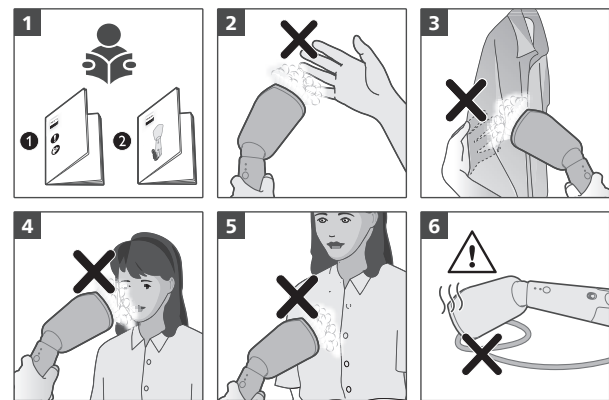 


3

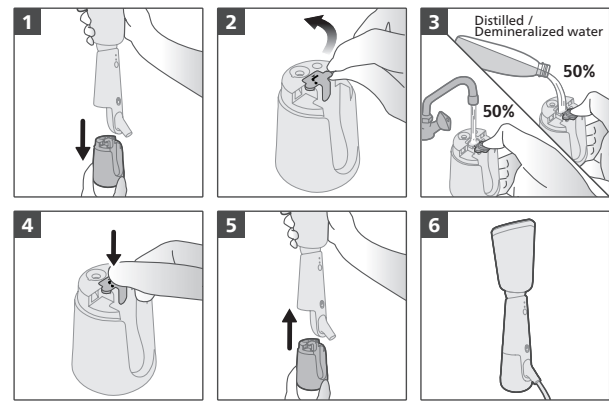 


4

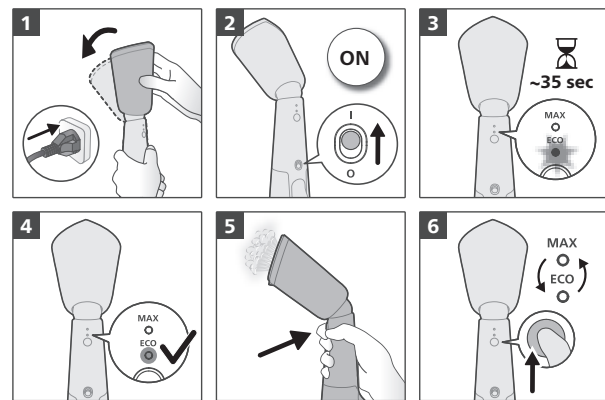 


5

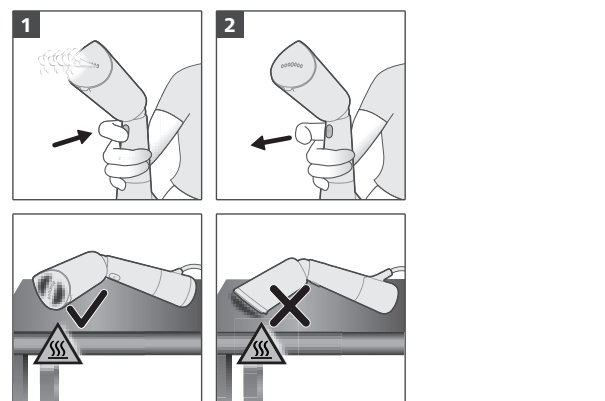 


6

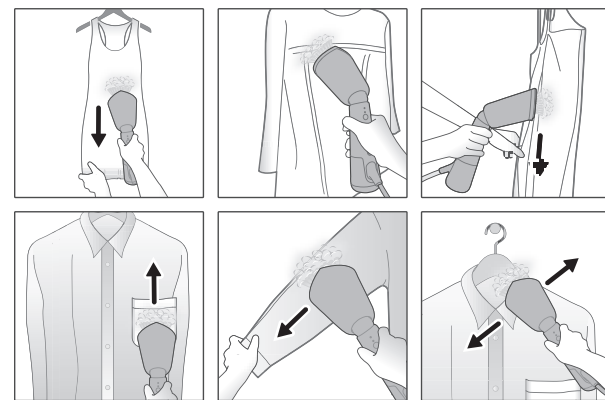 

7

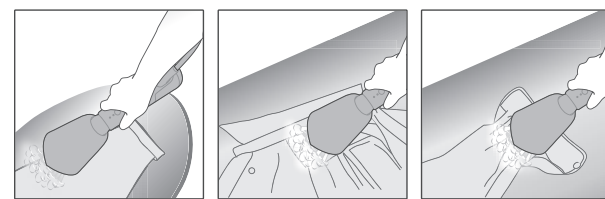 


8

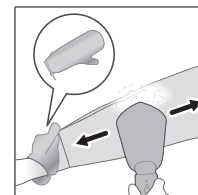 

9



 STH5030

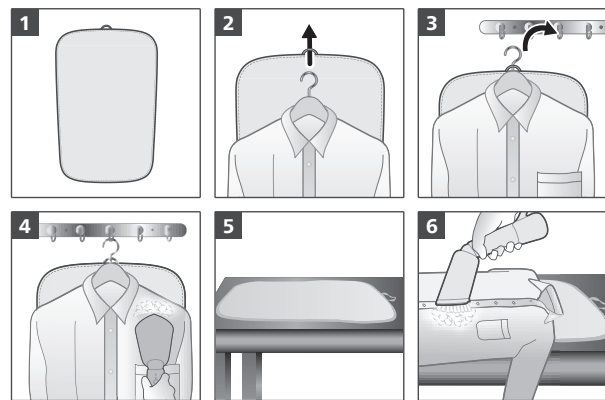

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product. 2024 © Versuni Holding B.V. 642001017672 (24/07/2024)



 
PHILIPS

STH5000 series

STH5010, STH5020
STH5030



Lea cuidadosamente el instructivo antes de usar su aparato

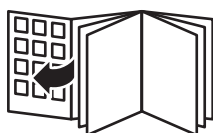


English 6
Azərbaycanca 21
Bahasa Indonesia 36
Bahasa Melayu 51
Čeština 66
Dansk 81
Deutsch 96
Eesti 112
Español 127
Français 143
Hrvatski 158
Italiano 173
Latviešu 188
Lietuviškai 203
Magyar 219
Nederlands 234
Norsk 249
O'zbek 264
Polski 279
Português 294
Português do Brasil 309
Română 324
Shqip 339
Slovenščina 354
Slovensky 369
Srpski 384
Suomi 399
Svenska 414
Tiếng Việt 429
Türkçe 444
Türkmençe 459
Ελληνικά 474
Български 489
Кыргызча 504
Македонски 519
Русский 534

Тоҷикӣ 550
Українська 565
Қазақша 581
Հայերեն 596
ગુજરાતી 612
ქართული ენა 629
简体中文 645
繁體中文 661
한국어 676
العربية 691
فارسی 706

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. Read this user manual, the important information leaflet, and the quick start guide carefully before you use the appliance. Save them for future reference.

 Product overview

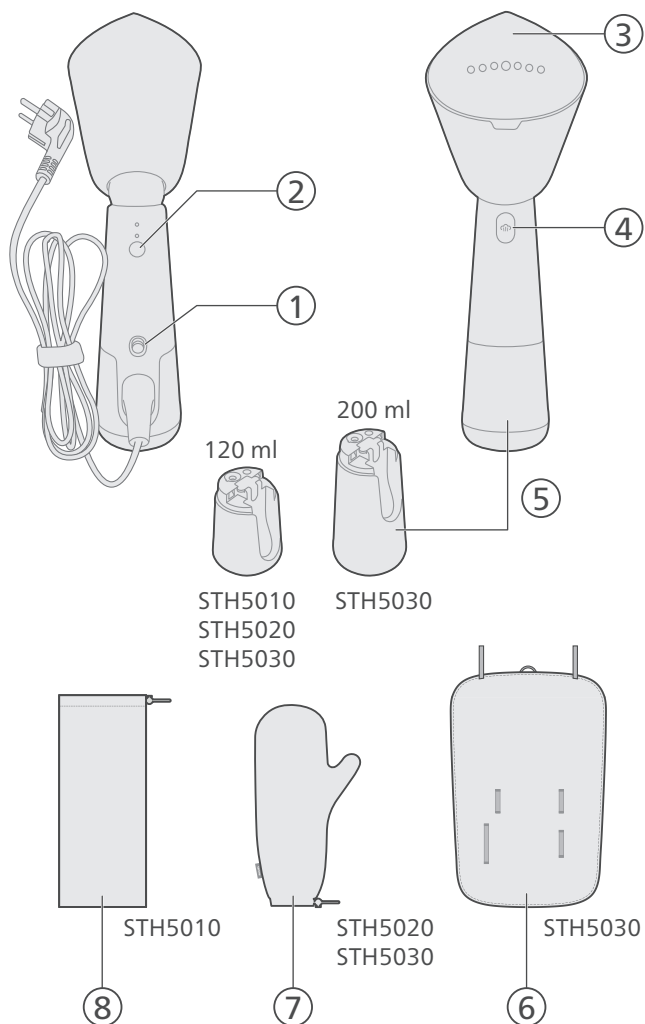

- 1 Power button
- 2 Steam selector button
- 3 Steam plate
- 4 Steam trigger button
- 5 Detachable water tank
- 6 StyleMat
- 7 Glove pouch
- 8 Pouch


Preparing for use

Type of water to use

The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent fast scale build up and prolong the lifetime of the appliance.

Do not add perfume, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water spitting, brown staining or damage to your appliance.

Warnings

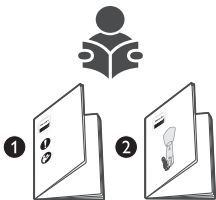


- 1 Please refer to the Quick Start Guide and the Important Information Leaflet on how to use the appliance.




- 2 Beware of hot steam that comes out of the steamer. Steam can cause burns.


8 English

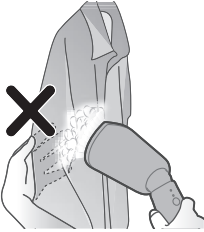


3 Do not use your bare hand as a supporting surface when you steam.

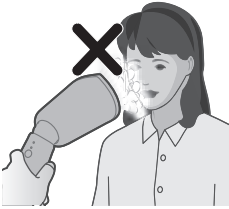

4 Do not position the appliance towards your/ another person's face.

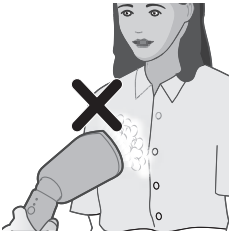

5 Do not position the appliance towards yourself/ another person.

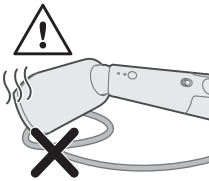


6 Do not place the steamer head on the power cord after use.



7 Stretch the sides of the garment.


Filling water tank

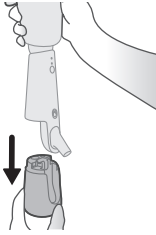

- 1** Pull the water tank downwards to detach it from the appliance.




- 2** Locate the water tank lid on top of the water tank. Gently lift the water tank lid to open it.

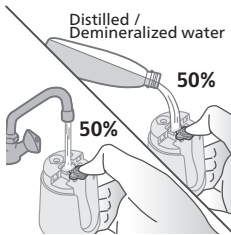


- 3** Fill 50% tap water and 50% distilled/ demineralized water into the water tank.



- 4** Close the water tank lid firmly.

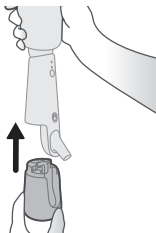


- 5** Holding the appliance on one hand, attach the water tank back to the appliance.

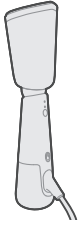

- 6 Ensure water tank is attached firmly onto the appliance.


Using the appliance

- 1 Connect the mains plug to a earth wall socket.

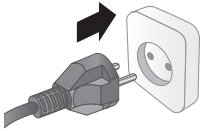


- 2 Adjust the steamer head to tilted angle for steaming.


Note: At the default position, the steamer head is at uplift position. Do not adjust the steamer head when steamer head is hot.

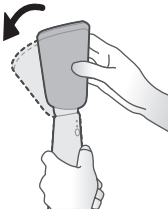


- 3 The steamer head is now tilted and suitable for steaming.

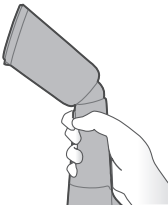


- 4 Turn on power button by sliding it up.

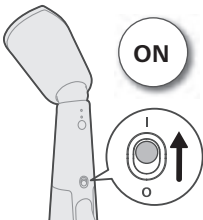


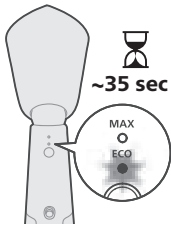

- 5 Steam ready light will blink indicating the appliance is heating up. The appliance is ready to be used in approximately 35 seconds.

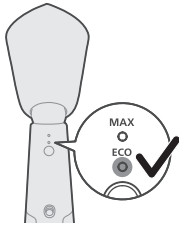

- 6 When the steam ready light has turned steady, it indicates the appliance is ready to be used.

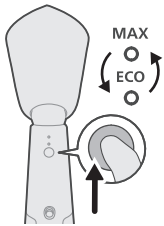

- 7 Toggle the steam selector button to choose the steam setting, either ECO or MAX.


ECO setting: Minimum constant steam is delivered continuously for garments with less creases. This setting also saves energy.

MAX setting: Maximum constant steam is delivered continuously for stubborn creases.




- 8 Press and hold the steam trigger button to emit steam.


Note: Position the steamer head away from the garment, press and hold the steam trigger button for a few seconds, as the initial steam may contain water droplets.

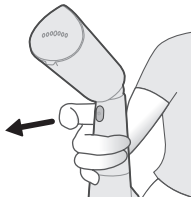

- 9 Release the steam trigger button to stop steam from emitting.

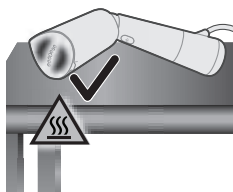


- 10** Lay the appliance sideways on the surface to avoid direct contact of the steam plate with the surface.

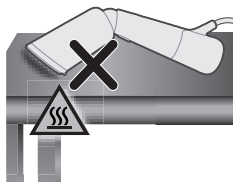


- 11** Place a heat-resistant layer (e.g. silicone mat) on the surface if you need to rest the appliance/ steamer head on the surface.


Vertical steaming

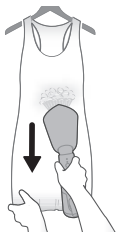

- 1** Ensure the steamer head is in its tilted angle before power on for vertical steaming.
- 2** Hang the garment on a hanger. Stretch the sides/ bottom of the garment for a better result.

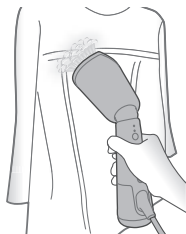


- 3** Keep the steamer head a slight distance away from shirt, or dresses with frills, ruffles, runching or sequins. Use only the steam to loosen the fabric. You can also steam from the inside.

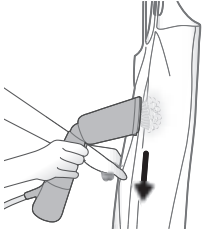


- 4** When you are steaming, press the steamer head against the garment and stretch the sides of the garment with your hand.


Note: The appliance can be used for creating a natural look and for quick touch-ups. For garments with tough wrinkles or for elevating your attire to a more formal level, it is recommended to use an iron in conjunction with this appliance.

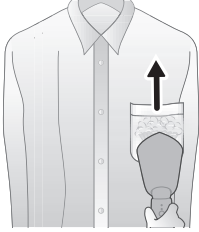

- 5** For shirt pockets, move the steamer head upwards while pressing against the fabric.

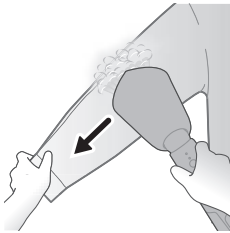


- 6** To steam sleeves, start from the shoulder area and move the steamer head downwards. Steam while you stretch the sleeve diagonally down with the other hand.

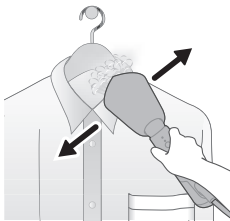


- 7** For garment with buttons such as shirts, jackets and pants, fasten the first button to help straighten the fabric.


Horizontal steaming

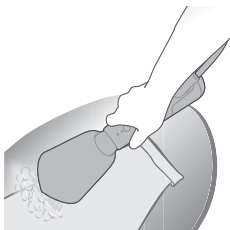

- 1** Ensure the steamer head is tilted angle for horizontal steaming.
- 2** Garment may be placed on a horizontal surface (e.g. ironing board, sofa, mattress) to make crisp pleats on sleeves and pants and better remove creases on difficult areas such as shirt collar or cuffs.

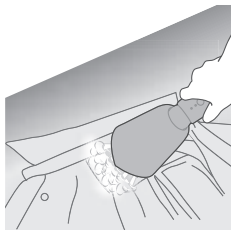


- 3 To steam the inside of the collar, unbutton the garment and lay the collar flat on the surface. Steam the back of the collar horizontally.

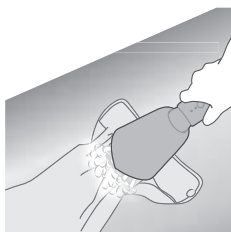

- 4 To steam the cuff, unbutton the garment and lie it flat. Steam along the cuff to straighten it.

Using the glove pouch

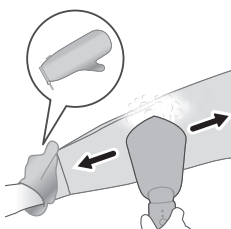

- 1 Put the glove pouch on the hand you are using to hold a garment. The glove pouch protects your hand against the steam from the steamer head.

Steaming with StyleMat in vertical position



- 1 Position StyleMat vertically, with the back of the StyleMat facing you.

Note: The elastic band should not be facing you.



- 2 Hang the garment through the loop of the StyleMat.




- 3 Together with the StyleMat and the garment, hang it on a hanging rack/ hook/ back of your door.



- 4 Ensure the steamer head is at tilted angle. Press the steamer head against the garment and steam the garment.


Steaming with StyleMat in horizontal position

- 1 Lay the StyleMat on a flat horizontal surface.
- 2 Place the garment on top of the StyleMat.

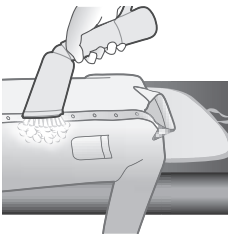


- 3 Ensure the steamer head is at tilted angle. Press the steamer head against the garment and steam the garment.

Cleaning and maintenance

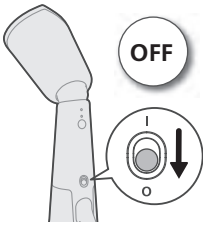


- 1 Turn off the power button by sliding it downwards

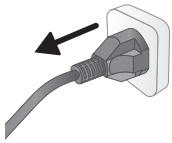

- 2 Unplug the appliance from the earthed wall socket.



- 3 Detach the water tank and empty any residual water from it.

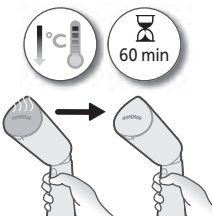

- 4 Let the appliance cool down for approximately 60 minutes.




- 5 Wipe off any flakes or other deposits on the steam plate with a damp cloth.



- 6** To keep the steam plate smooth, avoid hard contact with metal objects.
Never use a scouring pad, vinegar or other chemicals to clean the steam plate.


Storage with pouch

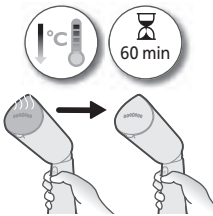

- 1** Ensure the appliance is cooled down.




- 2** Ensure the steamer head is at uplift position, which is the default position.

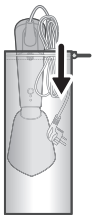

- 3** Wind up the power cord, and store the appliance in the pouch, ensuring that the steamer head is placed inside first.


Storage with StyleMat

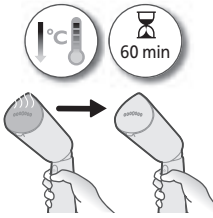

1 Ensure the appliance is cooled down.



2 Ensure the steamer head is at uplift position, which is the default position.

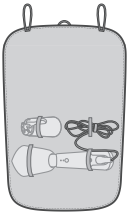

3 Store both the appliance and the water tank into the elastic bands of the StyleMat.



4 Roll the StyleMat to cover the appliance.




5 Continue roll over the StyleMat to cover water tank and cable.

- 6 Secure the StyleMat by looping the elastic bands at both sides of StyleMat.



Storage with glove pouch


- 1 Ensure the appliance is cooled down.

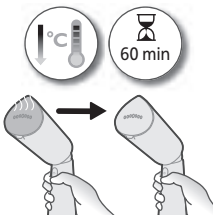

- 2 Ensure the steamer head is at uplift position, which is the default position.



- 3 Wind up the power cord. Store the appliance into the pouch, with the steamer head first

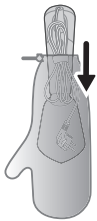

Trouble shooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
---------	----------------	----------

20 English

The appliance does not heat up.	The appliance is not plugged in properly or not switched on.	Check if the mains plug is inserted properly and its wall socket is working. Check if the appliance is switched on.
The appliance does not produce any steam.	The appliance is not plugged in properly or not switched on.	Check if the mains plug is inserted properly and its wall socket is working. Check if the appliance is switched on.
	The appliance has not heated up sufficiently.	Let the appliance heat up 35 seconds ('steam-ready' light will be on). When the appliance is ready for use, the light turns steady.
	You have not pressed the steam trigger fully.	Press the steam trigger fully for a few seconds.
	The water level in the water tank is too low or it has all been used up.	Unplug the appliance and refill the water tank.
	Steam plate is placed in a horizontal position (STH5010 only).	Use the appliance vertically, wait for a few seconds for the steam to be released.
Water droplets drop from the appliance steamer head.	The appliance has not been fully heated up.	To allow the appliance to fully heat up.
The appliance produces a pumping sound/the handle vibrates.	Water is pumped to the steamer head to be converted into steam.	This is normal.
	The water level in the water tank is too low or it has all been used up.	Unplug the appliance and refill the water tank.
Steamer head and/or handle is wet.	Water tank lid is not fully inserted.	Detach the tank and ensure water tank lid has been fully inserted.
	Residual water accumulation due to overflow during filling of the water tank.	Wipe off the residual water left on tank.