



Manuals.plus / > Orient Electric / > Orient Electric 1440 W Steam Iron (Model SI114GE) Instruction Manual

Orient Electric SI114GE

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Orient Electric 1440 W Steam Iron (Model SI114GE) Instruction Manual

1. INTRODUCTION

Welcome to the instruction manual for your new Orient Electric 1440 W Steam Iron, Model SI114GE. This appliance is designed to efficiently remove wrinkles from your garments, providing a smooth and crisp finish. Please read this manual thoroughly before first use to ensure safe and optimal operation, and retain it for future reference.

Key features of your steam iron include a non-stick Weilburger double coating for effortless gliding, a powerful 15 gm/min steam output for effective wrinkle removal, and a 360-degree swivel cord for flexible movement during ironing.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the iron is unplugged from the power outlet before filling or emptying the water tank, cleaning, or when not in use.
- Do not immerse the iron, power cord, or plug in water or any other liquid.
- Keep the iron out of reach of children and pets, especially when it is hot or connected to power.
- Use the iron only for its intended purpose as described in this manual.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged. Contact authorized service personnel for repair.
- Place the iron on a stable, heat-resistant surface when not in use or when cooling down.
- Never touch the hot soleplate or allow it to come into contact with flammable materials.
- Use caution when turning the iron upside down, as there may be hot water in the reservoir.
- For optimal performance and to prevent mineral buildup, use distilled or demineralized water for steaming.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Orient Electric Steam Iron:

- **Water Tank:** Holds up to 200 ml of water for steam generation.
- **Water Filling Inlet:** For adding water to the tank.
- **Spray Nozzle:** Emits a fine mist to dampen fabrics.
- **Steam Burst Button:** Releases a powerful burst of steam.
- **Temperature Control Dial:** Adjusts the soleplate temperature for different fabric types.
- **Non-stick Weilburger Soleplate:** Provides smooth gliding and even heat distribution.
- **Pilot Light:** Indicates when the iron is heating up or has reached the set temperature.
- **360-degree Swivel Cord:** Allows for flexible movement and prevents tangling.



Figure 1: Orient Electric 1440 W Steam Iron highlighting steam output, power, and water tank capacity.

Advertisements





Powerful steam burst
smooths out tough wrinkles in a glide



Figure 2: Front view of the steam iron.

Advertisements



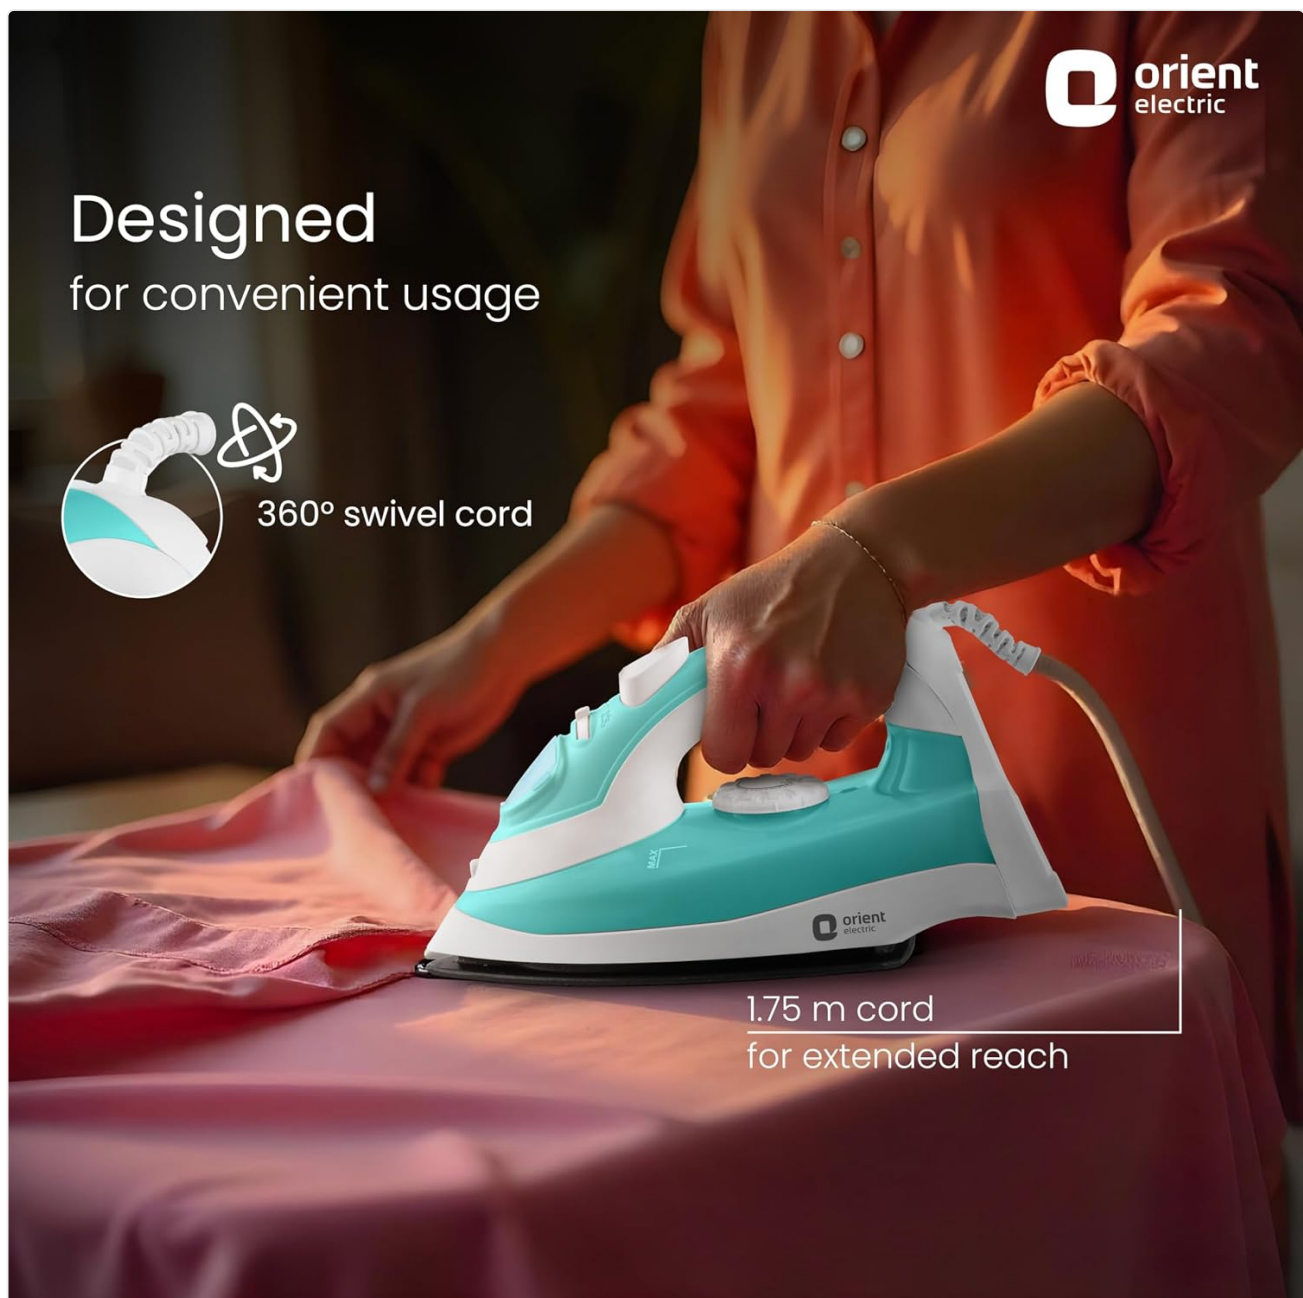


Figure 3: Steam iron in use, demonstrating the 360-degree swivel cord for ease of movement.

4. SETUP

1. **Unpack:** Carefully remove the iron and all accessories from the packaging. Check for any damage.
2. **First Use Preparation:** Before using for the first time, wipe the soleplate with a damp cloth to remove any manufacturing residue. It is normal for a slight odor or smoke to be emitted during the first few minutes of operation; this will dissipate.
3. **Fill Water Tank (for steam ironing):** Ensure the iron is unplugged. Open the water filling inlet and slowly pour distilled or demineralized water into the tank up to the 'MAX' level indicator. Do not overfill. Close the inlet securely.
4. **Position:** Place the iron on a stable, heat-resistant ironing board or surface.
5. **Connect Power:** Plug the power cord into a suitable grounded electrical outlet (240V).

5. OPERATING INSTRUCTIONS

5.1. Temperature Selection

Turn the temperature control dial to select the appropriate heat setting for your fabric. Refer to the fabric care labels on your garments. The pilot light will illuminate, indicating the iron is heating. It will turn off once the desired temperature is reached.

Advertisements

- **Low Temperature:** Synthetics, Silk
- **Medium Temperature:** Wool
- **High Temperature:** Cotton, Linen

5.2. Dry Ironing

For dry ironing, ensure the water tank is empty. Select the desired temperature and wait for the pilot light to turn off. Iron the fabric as usual.

5.3. Steam Ironing

Ensure the water tank is filled with distilled water. Set the temperature control dial to a steam-appropriate setting (usually between wool and linen, indicated on the dial). Wait for the pilot light to turn off, indicating the iron is hot enough to produce steam. You can then use continuous steam or steam bursts.

Advertisements

- **Continuous Steam:** The iron will automatically produce steam when held horizontally at the correct temperature setting.
- **Steam Burst:** Press the steam burst button for an extra powerful shot of steam to tackle stubborn wrinkles. Wait a few seconds between bursts to allow the iron to reheat.
- **Vertical Steaming:** The iron can be used in a vertical position to steam hanging garments, curtains, or drapes. Hold the iron a few inches away from the fabric and press the steam

burst button.

5.4. Spray Function

Press the spray button to emit a fine mist of water onto the fabric. This is useful for dampening dry areas or stubborn creases before ironing.



Figure 4: Precision tip designed to glide effortlessly around buttons and collars.

6. MAINTENANCE AND CARE

6.1. Cleaning

- Always unplug the iron and allow it to cool completely before cleaning.
- Wipe the exterior of the iron with a damp cloth. Do not use abrasive cleaners or solvents.

- To clean the soleplate, use a damp cloth and a mild, non-abrasive cleaner if necessary. Avoid scratching the non-stick coating.
- Never use steel wool or metallic scouring pads on the soleplate.

Advertisements

6.2. Descaling (Self-Clean Function)

Regular descaling helps maintain steam performance. If your iron has a self-clean function (refer to specific markings on your iron), follow these steps:

1. Fill the water tank with distilled water to the MAX level.
2. Set the temperature to maximum and plug in the iron.
3. Once the pilot light turns off, unplug the iron.
4. Hold the iron horizontally over a sink and activate the self-clean function (usually a dedicated button or a setting on the steam dial). Hot water and steam will flush out mineral deposits.
5. Shake the iron gently until the water tank is empty.
6. Plug in the iron again, let it heat up, and iron an old cloth to dry the soleplate.

6.3. Storage

After each use, empty any remaining water from the tank. Allow the iron to cool completely. Store the iron upright on its heel rest in a safe, dry place, away from direct sunlight and moisture. Secure the power cord to prevent damage.

Advertisements

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron not heating	Not plugged in; power outage; faulty outlet; temperature dial set to 'OFF' or too low.	Check power connection; test outlet; adjust temperature dial.
No steam or insufficient steam	Water tank empty; temperature too low for steam; steam vents clogged; iron not held horizontally.	Fill water tank; set temperature higher; perform descaling; hold iron horizontally.
Water leaking from soleplate	Temperature too low for steam; water tank overfilled; self-clean function activated unintentionally.	Increase temperature; do not overfill; ensure self-clean is off.
Iron sticking to fabric	Soleplate dirty; temperature too high for fabric type.	Clean soleplate; adjust temperature according to fabric care label.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model Number:** SI114GE
- **Brand:** Orient Electric
- **Wattage:** 1440 W
- **Voltage:** 240 Volts
- **Steam Output:** Up to 15 gm/min
- **Water Tank Capacity:** 200 ml
- **Soleplate:** Non-stick Weilburger Double Coating
- **Product Dimensions (L x W):** 27.4 cm x 11 cm
- **Item Weight:** 950 Grams
- **Special Features:** Auto Shutoff, Lightweight, 360-degree Swivel Cord
- **Included Components:** 1 N Steam Iron Unit, 1 N User Manual, 1 N Water Filling Cup

9. WARRANTY AND SUPPORT

Your Orient Electric 1440 W Steam Iron (Model SI114GE) comes with a **2-year warranty** from the date of purchase, covering manufacturing defects under normal household use. Please retain your purchase receipt as proof of purchase for warranty claims.



Figure 5: The steam iron is backed by a 2-year warranty.

Customer Support

For any queries, service requests, or warranty claims, please contact Orient Electric customer support. You can find contact details on the official Orient Electric website or through your retailer.

Manufacturer Address: 295/78, Village Johron, Trilokpur Road, Tehsil Nahan, District Sirmaur, Kala Amb (H.P.) - 173030, India, A.R. industries

Advertisements



Documents - Orient Electric – SI114GE

no relevant documents

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.