

Havells BT8700

Havells BT8700 Beard Trimmer Instruction Manual

Model: BT8700

[Safety](#)[Overview](#)[Charging](#)[Setup](#)[Operating](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Havells BT8700 Beard Trimmer. Retain this manual for future reference.

- This appliance is designed for trimming facial hair only. Do not use it for any other purpose.
- Keep the appliance dry when not in use. Although it is IPX7 washable, ensure the charging port is dry before connecting to power.
- Do not immerse the charging adapter or cord in water or other liquids.
- Always check the blades before use. If blades are damaged or broken, do not use the trimmer to prevent injury.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Unplug the trimmer from the power source before cleaning or performing any maintenance.
- Use only the charging cable provided with the trimmer.
- Do not expose the trimmer to extreme temperatures or direct sunlight for extended periods.

2. PRODUCT OVERVIEW

The Havells BT8700 Beard Trimmer is designed for precise and comfortable facial hair grooming. It features durable titanium blades and an IPX7 washable body for easy cleaning.



Image 2.1: Front and side view of the Havells BT8700 Beard Trimmer, showcasing its ergonomic design and power button.

Components:

- **Trimmer Body:** Ergonomically designed for comfortable grip.
- **Titanium Blades:** Self-sharpening blades for precise cutting.
- **Power Button:** To turn the trimmer ON/OFF.
- **Charging Indicator:** LED light to show charging status.
- **Adjustable Comb Attachment:** For varying beard lengths.
- **USB Charging Cable:** For convenient charging.

3. CHARGING THE TRIMMER

The Havells BT8700 Trimmer operates cordlessly and requires charging before use. A full charge provides up to 2 hours of runtime.

1. Ensure the trimmer is switched OFF before charging.
2. Locate the charging port on the trimmer. Ensure it is dry and free from water or debris.
3. Connect the USB charging cable to the trimmer's charging port.

4. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer.
5. The charging indicator light will illuminate, indicating that the trimmer is charging.
6. Allow the trimmer to charge fully. The indicator light may change color or turn off once fully charged (refer to specific product details for exact indicator behavior).
7. Disconnect the charging cable once charging is complete.

Note: For optimal battery life, it is recommended to fully charge the trimmer before its first use.

4. SETUP AND PREPARATION

Before using your Havells BT8700 Trimmer, follow these steps for proper setup.

1. **Initial Charge:** Ensure the trimmer is fully charged as described in Section 3.
2. **Attach Comb Attachment:** If you wish to trim to a specific length, slide the adjustable comb attachment onto the trimmer head until it clicks into place.
3. **Adjust Length Setting:** Use the integrated adjustment mechanism on the comb to select your desired trimming length. Refer to the markings on the comb for guidance.
4. **Inspect Blades:** Before each use, visually inspect the titanium blades for any damage or debris. Ensure they are clean and properly aligned.

5. OPERATING THE TRIMMER

Follow these instructions for effective and safe trimming.

1. **Power On:** Press the power button to turn the trimmer ON.
2. **Trimming without Comb:** For precise edging or a very close trim, remove the comb attachment. Hold the trimmer with the blades flat against your skin and move it gently against the direction of hair growth.
3. **Trimming with Comb:** With the comb attachment set to your desired length, place the flat top of the comb against your skin. Move the trimmer slowly and steadily against the direction of hair growth. Ensure the comb remains in full contact with your skin for an even trim.
4. **Styling:** For shaping and detailing, use the trimmer without the comb attachment. Use light, controlled strokes.
5. **Power Off:** After use, press the power button to turn the trimmer OFF.

Tip: For best results, ensure your beard is clean and dry before trimming. Trim in small sections and check your progress frequently.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your trimmer. The Havells BT8700 is IPX7 washable.



Image 6.1: The Havells BT8700 Beard Trimmer being rinsed under a running tap, demonstrating its IPX7 washable feature.

1. After Each Use:

- Turn off the trimmer and disconnect it from any charging cable.
- Remove the comb attachment.
- Rinse the trimmer head and blades under running water. The IPX7 rating allows for full immersion in water up to 1 meter for 30 minutes, but rinsing under a tap is sufficient for daily cleaning.
- Shake off excess water and allow the trimmer to air dry completely before storing or recharging.

2. **Blade Lubrication (Optional):** Periodically, apply a small drop of light machine oil (not included) to the blades to maintain smooth operation. Turn the trimmer on for a few seconds to distribute the oil. Wipe off any excess.

3. **Storage:** Store the trimmer in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Havells BT8700 Trimmer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Trimmer does not turn ON.	Battery is depleted.	Charge the trimmer fully.
Trimmer does not turn ON.	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Poor trimming performance.	Blades are dirty or clogged with hair.	Clean the blades thoroughly as per Section 6.

Problem	Possible Cause	Solution
Poor trimming performance.	Blades are dull or damaged.	Contact customer support for blade replacement or service.
Charging indicator not working.	Charging cable or adapter issue.	Try a different USB port or adapter. Ensure the cable is securely connected.

If the problem persists after trying these solutions, please contact Havells customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	BT8700
Brand	Havells
Blade Material	Titanium
Waterproof Rating	IPX7 (True)
Runtime	Up to 2 Hours
Charging Type	USB
Minimum Cutting Length	0.5 Millimetres
Product Dimensions (LxWxH)	6 x 7 x 18 Centimeters
Item Weight	240 Grams
Special Features	Rechargeable, Portable, Waterproof
Recommended Uses	Beard Styling, Trimming

9. WARRANTY AND CUSTOMER SUPPORT

Havells products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Havells website.

For technical assistance, troubleshooting, or service inquiries, please contact Havells customer support:

- **Email:** customercare@havells.com

- **Phone:** 08045771313

- **Manufacturer Address:** Havells India Ltd. 904, Surya Kiran Building, K.G Marg, New Delhi, (India)

Please have your product model number (BT8700) and purchase details ready when contacting support.