

[Manuals.plus](#) /

› [Braun](#) /

› Braun Silk-Epil 9 Flex Epilator SES9-060 3D User Manual

Braun SES9-060 3D

Braun Silk-Epil 9 Flex Epilator SES9-060 3D User Manual

Comprehensive instructions for safe and effective use.

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- This appliance is suitable for use in a bath or shower. For safety reasons, it can only be operated cordless.
- Do not use the appliance on irritated skin, open wounds, moles, or varicose veins. Consult a doctor if you have a skin condition or are taking medication that affects the skin.
- Keep the appliance dry when not in use and store it in a safe place, out of reach of children.
- The power supply unit is equipped with a special cord set. Do not exchange or modify any part of it.
- This appliance contains batteries that are non-replaceable.

2. PRODUCT OVERVIEW AND WHAT'S IN THE BOX

The Braun Silk-Epil 9 Flex is designed for efficient hair removal with a fully flexible head for enhanced maneuverability.



You will receive your Braun in one of these two packages for a limited time

Figure 1: Key features of the Braun Silk-Epil 9 Flex epilator, highlighting its flexible head, SensoSmart technology, and waterproof design.

Your Braun Silk-Epil 9 Flex package includes the following components:

Silk-épil 9 Flex

Smooth skin
for weeks,
not just days



Figure 2: Contents of the product box, including various attachments for different grooming needs.

- **Epilator Unit:** The main device with a fully flexible head.
- **Exfoliation Brush:** For deep body exfoliation.
- **Shaver Head:** For sensitive areas or quick trims.
- **Trimmer Cap:** For precise trimming.
- **Facial Cap:** For epilation on the face.
- **Skin Contact Cap:** For optimal skin contact and comfort.

3. SETUP AND CHARGING

3.1 Initial Charging

Before first use, fully charge your epilator. The device operates cordless and requires approximately 1 hour for a full charge, providing up to 50 minutes of operating time.

1. Connect the power supply unit to the epilator and plug it into an electrical outlet.
2. The charging indicator light will illuminate.
3. Once fully charged, unplug the device.

3.2 Attaching and Removing Heads

To change attachments, ensure the device is switched off.

1. To remove a head, press the release buttons on the sides of the epilator and gently pull the head upwards.
2. To attach a head, align it with the epilator body and push down until it clicks into place.

4. OPERATING INSTRUCTIONS

4.1 General Epilation Guidelines

For optimal results, ensure your skin is clean and dry, or use in the shower for a gentler experience.

- **Flexible Head:** The fully flexible head adapts to your body contours, allowing for easier navigation over tricky areas.
- **SensoSmart Technology:** This feature guides your epilation, ensuring the right amount of pressure is applied. A red light indicates if you are pressing too hard.
- **Smart Light:** The integrated Smart Light reveals even the finest hairs for thorough removal.
- **Speed Settings:** The epilator offers two speed settings. Start with the lower speed for sensitive areas or initial use, and increase as comfort allows.



Vol Share in 2015-2016, leading market research institutes

Figure 3: The flexible head pivots to follow body contours.

4.2 Epilation Technique

Hold the epilator at a 90-degree angle to your skin and move it slowly against the direction of hair growth. Stretch your skin taut with your free hand to minimize discomfort.



Figure 4: Recommended areas for epilator use.

4.3 Using Attachments

- **Exfoliation Brush:** Use this brush on wet skin with your favorite body wash to gently exfoliate before epilation, helping to prevent ingrown hairs.
- **Shaver Head:** Ideal for quick hair removal in sensitive areas or for trimming longer hairs before epilation.
- **Trimmer Cap:** Use with the shaver head for precise hair length control.
- **Facial Cap:** Reduces the epilation area for precise hair removal on the face.
- **Skin Contact Cap:** Ensures maximum skin contact for efficient hair removal, especially useful for beginners.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your epilator.

1. **After Each Use:** Switch off the appliance and remove the head. Tap the head gently to remove loose hairs.

2. **Rinsing:** Since the epilator is 100% waterproof, you can rinse the epilator head and the main body under running water. Ensure all hair residues are removed.
3. **Drying:** Allow all parts to air dry completely before reassembling or storing.
4. **Storage:** Store the epilator and its attachments in a clean, dry place, preferably in the provided pouch.

6. TROUBLESHOOTING

If you encounter issues with your Braun Silk-Epil 9 Flex, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is discharged.	Charge the appliance for at least 1 hour.
Epilator does not remove hair effectively.	Incorrect epilation angle or speed. Hair too short/long.	Ensure the epilator is held at a 90-degree angle. Move slowly against hair growth. Optimal hair length is 0.5-5mm.
Red light illuminates during use.	Too much pressure is being applied (SensoSmart).	Reduce pressure on the skin. The epilator works best with gentle contact.
Skin irritation after epilation.	Sensitive skin, lack of exfoliation, or improper technique.	Exfoliate regularly. Use the epilator in the shower. Apply a soothing lotion after epilation.

7. SPECIFICATIONS

- **Model:** SES9-060 3D
- **Power Source:** Rechargeable Lithium Ion Battery (1 included)
- **Operating Time:** Up to 50 minutes (cordless)
- **Charging Time:** Approximately 1 hour
- **Water Resistance:** Waterproof (suitable for wet & dry use)
- **Dimensions (LxWxH):** 26 x 7 x 19.7 cm
- **Weight:** 179 g
- **Manufacturer:** Procter & Gamble

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Braun Silk-Epil 9 Flex epilator comes with a **2-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For any questions, assistance, or warranty claims, please contact Braun Customer Care:

- **Phone:** 1800 – 202 – 1364
- **Email:** intouch.im@pg.com