

[Manuals.plus](#) /

> [Gillette](#) /

> Gillette ProGlide Styler 4-in-1 Trimmer User Manual

Gillette 81743121

Gillette ProGlide Styler 4-in-1 Trimmer User Manual

Model: 81743121

PRODUCT OVERVIEW

The Gillette ProGlide Styler 4-in-1 is a versatile grooming tool designed for men. It functions as a trimmer, shaver, precision edger, and body groomer. Featuring Braun technology, this styler is waterproof and can be used in the shower, offering convenience and flexibility for your grooming routine.





Image: Front view of the Gillette Styler 4-in-1 packaging, highlighting its four main functions: trim, shave, edge, and body. The packaging also shows the styler unit and a blade refill.



Image: The Gillette Styler 4-in-1 trimmer unit displayed with its included accessories: three comb attachments of varying lengths and one ProGlide blade cartridge.

PACKAGE CONTENTS

Your Gillette ProGlide Styler package includes the following items:

- 1x Gillette ProGlide Styler Trimmer Unit
- 1x ProGlide Blade Cartridge
- 3x Interchangeable Comb Attachments (for different hair lengths)
- 1x AA Battery (Note: Batteries are not always included, please check packaging)





Image: Side view of the product packaging, visually listing the contents: the trimmer, three comb attachments, one blade, and one battery.

SETUP

1. **Install Batteries:** Open the battery compartment (usually at the bottom of the handle) and insert the required batteries (AA, not always included). Ensure correct polarity.
2. **Attach Comb:** Select the desired comb attachment based on your preferred hair length. Slide the comb onto the trimmer head until it clicks securely into place.
3. **Attach Blade (for shaving/edging):** If you intend to shave or precision edge, attach a ProGlide blade cartridge to the designated slot on the trimmer head.

OPERATING INSTRUCTIONS

General Usage Tips:

- For easier hair trimming, it is recommended to groom after a shower.
- After drying your beard, comb it thoroughly to detangle any knots.
- The styler is waterproof and can be used wet or dry, including in the shower.

Trimming Beard or Body Hair:

1. Ensure the appropriate comb attachment is securely in place.
2. Turn on the trimmer.
3. Begin trimming your facial or body hair using the longest comb first. Adjust to a shorter comb if a closer trim is desired.
4. Move the trimmer across the desired area, following the contours of your face or body.
5. Rinse the trimmer periodically during use to prevent hair buildup and ensure efficient cutting.

Shaving and Precision Edging:

1. For a close shave, apply shaving gel or foam to the area.
2. Use the ProGlide blade cartridge attached to the styler. Shave both with and against the grain for optimal closeness.
3. For precise edging and defining beard lines (e.g., neck, upper lip, sideburns), use the precision trimmer blade.
4. After cleaning your skin, check for symmetry in your beard shape.
5. If you have a mustache, comb it before leveling, then use mustache scissors for finishing touches.



STYLER



TRIMMEN • TAILLE
TRIM • RECORTA
RIFINISCE • APARA



RASIEREN • RASE
SCHEER • AFEITA
RADE • BARBEIA



DEFINIEREN • SCULPTE
CONTOUR • PERFILA
REGOLA • RECORTA



KÖRPER • CORPS
LICHAAM • CUERPO
CORPO • CORPO

4 IN 1 / 4 EN 1 / 4 IN 1 / 4 EN 1 / 4 IN 1 / 4 EM 1

Batteriebetriebener Rasierer mit Präzisionstrimmer / Système de rasage à pile avec tondeuse de précision / Power Scheersysteem met trimmer / Máquina de afeitar a pilas con recortador / Rasoio a bateria com regulabarba / Máquina de Barbear a pilhas com aparador

Made in China / Fabriqué en Chine / Gemaakt in China / Fabricado en China / Prodotto in Cina / Fabricado na China

(DE) 0800 000 5071 (AT) 0800 244 175 (CH) 0800 002 258 (FR) 0800 944 806 Service et appel gratuits (BE) 0800 14592 (NL) 0800 4455388

(ES) T: 900 801 505. (IT) Procter & Gamble S.r.l. Viale Giorgio Ribotta, 11 - 00144 Roma - Italia. T: 800 125 656 (PT) T: 800 780 194 (dias

úteis: das 09:00h às 17:00h). (LU) 800 21172

(EU) Procter & Gamble, 65823 Schwalbach/Ts., Germany

INGREDIENTS: INGREDIENTS Banda lubrificante: / INGREDIENTS Striscia Lubrificante: / INGREDIENTS Banda Lubrificante: PEG-115M, PEG-7M, PEG-100, SILICA, PENTAERYTHRITYL TETRA-DI-T-BUTYL HYDROXYHYDROCINNAMATE, TRIS(DI-T-BUTYL)PHOSPHITE, BHT

Type 2506 / Tipo 2506

(DE)(AT)(CH)(BE)(LU) ACHTUNG: Bitte beiliegende Hinweise beachten ERSTICKUNGSGEFAHR, Kleinteile, Außerhalb der Reichweite von Kindern aufbewahren (FR)(BE)(CH)(LU) AVERTISSEMENT Précautions relatives aux piles:

consultez la notice. RISQUE D'ÉTOUFFEMENT. Petites pièces. Tenir hors de portée des enfants

(BE)(NL) WAARSCHUWING Voor informatie aangaande batterijen, zie instructies binnenin de

verpakking. VERSTIKKINGSGEVAAR. Kleine onderdelen. Buiten het bereik van kinderen houden

(ES) ATENCIÓN: Vea en el interior las indicaciones relacionadas con las pilas. RIESGO DE

ASFIXIA, Partes Pequeñas, Manténgase fuera del alcance de los niños

(IT)(CH) AVVERTENZE: Vedere il foglietto all'interno per le informazioni sulle pile.

RISCHIO DI SOFFOCAMENTO, Piccole Parti, Tenere fuori dalla portata dei bambini

(PT) ATENÇÃO: Informações relacionadas com as pilhas: Ler no interior PERIGO DE

ASFIXIA, Peças Pequenas. Manter fora do alcance das crianças



 
© 2020 Gillette

Gillette
THE BEST A MAN CAN GET™
www.Gillette.com

P&G
www.pg.com



100% recycelbare Verpackung / Emballage 100% recyclable / 100% recyclebare



MIX



Image: The back of the product packaging, illustrating the four primary uses of the Gillette Styler: trimming, shaving, defining edges, and body grooming, with small visual examples for each.

MAINTENANCE

- 1. **Cleaning:** After each use, rinse the trimmer head and comb attachments thoroughly under running water to remove hair and product residue. The styler is fully washable.
- 2. **Drying:** Allow the trimmer and attachments to air dry completely before storing. Do not use a cloth to dry the blades as this may damage them.
- 3. **Storage:** Store the styler and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.
- 4. **Blade Replacement:** Replace the ProGlide blade cartridge when it becomes dull or uncomfortable to use. The styler is compatible with Gillette SkinGuard Sensitive, Fusion5, ProGlide, and ProShield blades.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Gillette ProGlide Styler.

Problem	Possible Cause	Solution
Trimmer not turning on.	Dead or incorrectly installed batteries.	Check battery polarity or replace with fresh AA batteries.
Poor trimming performance.	Hair buildup in the trimmer head or dull blade.	Rinse the trimmer head thoroughly. Replace the blade cartridge if it feels dull.
Skin irritation after shaving.	Dull blade, dry shaving, or improper technique.	Ensure blade is sharp. Use shaving cream/gel. Shave with the grain first, then against if needed.

SPECIFICATIONS

Product Name	Gillette 4-in-1 Body and Beard Precision Trimmer, Shaver and Shaper
Model Number	81743121
Brand	Gillette
Units	1 unit
Dimensions (L x W x H)	10.1 x 3.6 x 20.2 cm
Weight	100 Grams
Power Source	Battery powered
Material	Stainless steel
Special Feature	Waterproof
Recommended Uses	Beard, Face, Body

Hair Type	All
Target Audience	Men
Country of Origin	China (Manufacture), United Kingdom (Brand/Design)

Safety Warnings

- For external use only.
- Avoid contact with eyes.
- Keep away from naked flame or direct heat sources.
- Keep out of reach of children.

Warranty and Support

Specific warranty information for the Gillette ProGlide Styler is not provided in this manual. For details regarding warranty coverage, product support, or to purchase replacement parts, please refer to the official Gillette website or contact Gillette customer service directly. Contact information can typically be found on the product packaging or the brand's official website.