

BEARDO Ape-X Go Trimmer

BEARDO Apex Go Trimmer User Manual

Model: Ape-X Go Trimmer

[Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Overview](#) [Safety](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The BEARDO Apex Go Trimmer is a compact and powerful grooming device designed for versatile use. It features a robust motor, self-sharpening carbon steel blades, and a travel-friendly design, making it suitable for various trimming needs.

Key Features:

- **Travel Friendly:** Ergonomic, compact design for on-the-go grooming.
- **Powerful Motor:** 5500 RPM motor for efficient trimming.
- **Long Run Time:** Up to 80 minutes of continuous use on a single charge.
- **Type-C Charging:** Convenient and modern charging interface.
- **Self-Sharpening Blades:** Carbon steel T-blades with skin-safe technology for precise and smooth grooming.
- **Versatile Styling:** Includes three comb attachments for various hair lengths.
- **Digital Display:** Indicates battery status for user convenience.

What's in the Box:

- 1 x BEARDO Apex Go Trimmer
- 3 x Comb Attachments
- 1 x Charging Cable (Type-C)
- 1 x Protective Cap
- 1 x User Manual



Image: The BEARDO Apex Go Trimmer, showcasing its compact design and included accessories.

2. SAFETY INFORMATION

WARNING: Always unplug the trimmer before use. Using it while plugged in can pose an electric shock risk and damage the device.

- Do not immerse the trimmer in water or other liquids.
- Keep the device away from children.
- Do not use the trimmer if the blades are damaged or bent, as this may cause injury.
- Store the trimmer in a dry place when not in use.
- Use only the provided charging cable and adapter (if included) to charge the device.
- Avoid using the trimmer on irritated or broken skin.

3. SETUP

3.1 Initial Charging

1. Before first use, fully charge the trimmer.

2. Connect the Type-C charging cable to the trimmer's charging port.
3. Plug the other end of the cable into a compatible USB power source (e.g., wall adapter, computer USB port).
4. The digital display will show the charging status. A full charge provides up to 80 minutes of run time.
5. Unplug the trimmer once fully charged.



Image: The trimmer's digital display indicating battery status and Type-C charging port.

3.2 Attaching Comb Attachments

1. Ensure the trimmer is turned off before attaching or detaching combs.
2. Select the desired comb attachment (e.g., 1mm, 2mm, 3mm).
3. Align the comb attachment with the trimmer head and gently push it until it clicks into place.
4. To remove, gently pull the comb attachment away from the trimmer head.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn on the trimmer, press the power button located on the device.

- To turn off the trimmer, press the power button again.

4.2 Trimming Hair and Beard

1. Ensure your hair or beard is clean and dry before trimming.
2. Attach the desired comb attachment for your preferred length (0mm for closest trim without comb, 1mm, 2mm, or 3mm).
3. Hold the trimmer with the blades facing the area to be trimmed.
4. Move the trimmer against the direction of hair growth for an even cut.
5. For detailing or edging, remove the comb attachment and use the bare blade carefully.



Image: Visual guide for trimming hair and beard to various lengths (0mm, 1mm, 2mm, 3mm).



Image: Demonstrating the trimmer's use for hair, beard, and body grooming.

4.3 Digital Display

The integrated digital display shows the current battery level, allowing you to monitor usage and recharge as needed.

5. MAINTENANCE AND CARE

5.1 Cleaning the Trimmer

1. Turn off and unplug the trimmer before cleaning.
2. Remove any attached comb.
3. Use the provided cleaning brush to remove hair clippings from the blades and inside the trimmer head.
4. The blades are self-sharpening carbon steel. For optimal performance, ensure they are kept clean and free of debris.
5. Do not rinse the trimmer under water unless explicitly stated as waterproof (this model is not specified as waterproof).
6. Wipe the body of the trimmer with a dry or slightly damp cloth.



COMPACT CONVENIENT

Simplify your travel **GAME**

Image: Detail of the self-sharpening carbon steel blades, emphasizing precision and skin-safe design.

5.2 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Use the protective cap to cover the blades when not in use to prevent damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or no charge.	Charge the trimmer fully using the Type-C cable.
Trimmer pulls hair or cuts unevenly.	Blades are dirty or dull; comb attachment is not properly secured.	Clean the blades thoroughly. Ensure the comb attachment is securely clicked into place. If blades are dull, contact support for replacement options.

Problem	Possible Cause	Solution
Trimmer gets hot during use.	Extended continuous use; blades may need lubrication or cleaning.	Allow the trimmer to cool down. Ensure blades are clean. If heating persists, reduce usage time or contact support.
Battery life is shorter than expected.	Incomplete charging; battery degradation over time.	Ensure the trimmer is fully charged. Battery performance may decrease over the product's lifespan.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	8906084799453
Brand	BEARDO
Motor Speed	5500 RPM
Run Time	Up to 80 minutes
Charging Type	USB Type-C
Blade Material	Carbon Steel (Self-Sharpening)
Included Components	1 Hair Trimmer, 3 Comb Heads
Product Dimensions (LxWxH)	15 x 15 x 5 cm
Item Weight	205 g
Power Source	Rechargeable Battery (1 x 9V included)
Manufacturer	LCL Group

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact the manufacturer directly.

Manufacturer Contact Information:

LCL Group
B27, 4/F, WING CHEUNG INDBLDG,
58-70 KWAI CHEONG ROAD, KWAI CHUNG, NT,
HONG KONG
Please retain your purchase receipt for warranty claims.

