

[Manuals.plus](#) /

> [BEARDO](#) /

> BEARDO Chrome Beast Multipurpose Full Body Groomer Trimmer Set - Instruction Manual

BEARDO BDTO037

BEARDO Chrome Beast Multipurpose Full Body Groomer Trimmer Set

Model: BDTO037 - Instruction Manual

INTRODUCTION

Thank you for choosing the BEARDO Chrome Beast Multipurpose Full Body Groomer Trimmer Set. This device is designed for versatile grooming, offering precision and flexibility for various trimming needs including beard, hair, body, precision, and ear/nose areas. Please read this manual carefully before use to ensure proper operation and maintenance.

IMPORTANT SAFETY INFORMATION

- Keep this product away from children.
- Do not immerse the main unit in water.
- Ensure the charging port is dry before connecting the charger.
- Do not use if the blades are damaged, as this may cause injury.
- Use only the provided charging cable and adapter.

PACKAGE CONTENTS

Your BEARDO Chrome Beast Trimmer Set includes:

- BEARDO Chrome Beast Trimmer Unit
- Charging Dock
- USB Charging Cable
- 8 Versatile Attachments (e.g., Beard Trimmer, Hair Trimmer, Body Groomer, Precision Trimmer, Ear/Nose Trimmer, various comb guides)
- Cleaning Brush
- Lubricating Oil

GET THE BEAST OUT OF YOU



Image: The BEARDO Chrome Beast Trimmer unit displayed with its various attachments and charging dock.

SETUP AND CHARGING

Initial Charge

1. Before first use, fully charge the trimmer.
2. Connect the USB charging cable to the charging dock and then to a compatible USB power source.
3. Place the trimmer into the charging dock. The LED indicator will show charging status.
4. A full charge takes approximately 90 minutes and provides up to 90 minutes of cordless run time.

SMART TRAVEL LOCK



**Long-press the start button
for 3 seconds to turn it on.**

Image: The BEARDO Chrome Beast Trimmer placed in its charging dock, indicating proper charging setup.

Attaching/Detaching Trimmer Heads

1. Ensure the trimmer is turned off before changing attachments.
2. To attach a head, align the head with the trimmer body and press firmly until it clicks into place.
3. To detach a head, gently pull it upwards from the trimmer body.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button once to turn the trimmer on. Press it again to turn the trimmer off.

Using Attachments and Length Settings

The BEARDO Chrome Beast offers 40 length settings for precise trimming. Select the appropriate attachment for your desired grooming area:

- **Beard/Hair Trimmer:** Use for shaping and trimming facial hair and head hair. Attach the desired comb guide for specific lengths.
- **Body Groomer:** Designed for body hair trimming.

- **Precision Trimmer:** Ideal for detailing and fine lines.
- **Ear/Nose Trimmer:** Gently insert into nostrils or ear canal to trim unwanted hair.

Adjust the length setting using the integrated dial or by changing comb guides as needed. Always start with a longer setting if you are unsure, and gradually reduce it to achieve your desired length.



Image: The BEARDO Chrome Beast Trimmer showcasing its multiple comb attachments for different hair lengths.

MAINTENANCE AND CLEANING

Cleaning the Trimmer

1. Turn off the trimmer and detach the trimmer head.
2. Use the provided cleaning brush to remove any loose hairs from the blades and inside the trimmer head.
3. The detachable blade head can be rinsed under running water. Ensure it is completely dry before reattaching.
4. Do not rinse the main trimmer body under water. Wipe it with a damp cloth if necessary.

Blade Care

For optimal performance and longevity, apply a small drop of lubricating oil to the blades after every few

uses, especially after rinsing. This helps maintain the sharpness and smooth operation of the titanium-coated stainless steel blades.

TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the trimmer is fully charged. Check if the power button is pressed firmly.
- **Poor trimming performance:** Clean the blades and remove any hair buildup. Apply lubricating oil to the blades. Ensure the correct attachment is used for the hair type and length.
- **Battery not charging:** Verify that the USB cable and charging dock are properly connected to a power source and the trimmer. Ensure the charging port on the trimmer is clean and dry.
- **Excessive noise or vibration:** Check if the trimmer head is securely attached. Clean and lubricate the blades. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	BDTO037
Power Source	Battery Powered (1 x 9V battery included)
Blade Material	Titanium-coated Stainless Steel
Run Time	Up to 90 minutes
Charging Time	Approximately 90 minutes
Length Settings	40
Dimensions (LxWxH)	13.8 x 9 x 21.5 cm
Item Weight	715 g
Connector Type	USB
Manufacturer	Hooli Brands Multi Trading PVT LTD
Country of Origin	China

WARRANTY INFORMATION

The BEARDO Chrome Beast Multipurpose Full Body Groomer Trimmer Set comes with a**1-Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your BEARDO Chrome Beast Trimmer, please contact our customer support team. Refer to the contact information provided on the product packaging or the official BEARDO website.

