

[Manuals.plus](#) /

› [Bombay Shaving Company](#) /

› Bombay Shaving Company Power Play NXT Trimmer User Manual

Bombay Shaving Company APPLIANCES_BEARD_TRIMMER_PWR_PLAYNXT_BL

Bombay Shaving Company Power Play NXT Trimmer User Manual

Model: APPLIANCES_BEARD_TRIMMER_PWR_PLAYNXT_BL

Brand: Bombay Shaving Company

INTRODUCTION

Thank you for choosing the Bombay Shaving Company Power Play NXT Trimmer. This manual provides essential information for the safe and effective operation, maintenance, and care of your new trimmer. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Keep away from children.
- Do not immerse the trimmer in water or use it near water sources unless specified for wet use.
- Do not use if the trimmer or charger is damaged.
- Use only the charger supplied with the appliance.
- Unplug the trimmer from the power outlet before cleaning.
- Ensure hands are dry when handling the charger or trimmer.

WHAT'S IN THE BOX

Your Bombay Shaving Company Power Play NXT Trimmer package includes the following items:

- 1 Hair Trimmer
- 6 Combs (attachment combs for different beard lengths)
- 1 Charger (Type C)
- 1 Cleaning Brush



Image: Contents of the Bombay Shaving Company Power Play NXT Trimmer package, including the trimmer, its packaging, and the six distinct comb attachments.

SETUP

Charging the Trimmer

The Power Play NXT Trimmer features convenient Type C charging. Before first use, or when the battery is low, charge the trimmer fully.

1. Connect the Type C end of the charging cable to the trimmer's charging port.
2. Plug the USB end of the charging cable into a compatible USB power adapter (e.g., your phone charger) or a USB port.
3. The charge indicator light on the trimmer will illuminate during charging.
4. A full charge takes approximately 1.5 hours and provides up to 90 minutes of non-stop use.



Image: The trimmer being charged via its Type C port, highlighting its 1.5-hour charge time and 90-minute runtime.

Attaching and Detaching Comb Attachments

The trimmer comes with 6 color-coded comb attachments for various beard lengths (1-12mm).

- To attach: Align the comb attachment with the trimmer blade and gently push until it clicks into place.
- To detach: Hold the trimmer firmly and gently pull the comb attachment away from the blade.

OPERATING INSTRUCTIONS

General Trimming

1. Ensure the trimmer is charged.
2. Select the desired comb attachment based on your preferred beard length.
3. Press the power button to turn on the trimmer.

4. Hold the trimmer with the blade flat against your skin and move it against the direction of hair growth for an even trim.
5. For detailing or shaping, remove the comb attachment and use the bare blade carefully.
6. After use, press the power button to turn off the trimmer.

AWESOME DIY BEARD STYLES AT HOME



Fade your beard like a pro!

Create perfect beard lines

Trim even the hard to reach areas

Image: Demonstrations of various trimming techniques, including fading, shaping beard lines, and reaching difficult areas.

**You said beard styling is such a chore!
We said, Say no more!**

MEET POWER PLAY NXT

6 different comb attachments makes
it so easy to choose a beard length & style



Image: The trimmer displayed with its six different comb attachments, illustrating the ease of choosing beard length and style.

MAINTENANCE

Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and unplug it from the charger.
2. Detach the blade head from the trimmer body.
3. Use the provided cleaning brush to remove any loose hairs from the blade and trimmer body.
4. The detachable blades can be rinsed under running water for thorough cleaning. Ensure they are completely dry before reattaching.
5. Wipe the trimmer body with a clean, dry cloth.
6. Reattach the blade head to the trimmer body.

Blade Care

The trimmer is equipped with self-sharpening stainless steel blades designed for long-lasting sharpness. For

optimal performance and longevity, it is recommended to regularly oil your trimmer blades.

SELF SHARPENING BLADES LAST FOREVER



Image: A detailed view of the self-sharpening stainless steel blades, emphasizing their durability.

TROUBLESHOOTING

If you encounter issues with your trimmer, please refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 1.5 hours.
Trimmer pulls hair or cuts poorly.	Blades are dirty or not oiled.	Clean the blades and apply a drop of oil.

Problem	Possible Cause	Solution
Trimmer makes unusual noise.	Hair caught in blades or internal issue.	Clean blades thoroughly. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	APPLIANCES_BEARD_TRIMMER_PWR_PLAYNXT_BL
Brand	Bombay Shaving Company
Power Source	USB powered (Type C)
Charge Time	1.5 hours
Run Time	90 minutes (non-stop)
Blade Material	Stainless Steel (Self-sharpening)
Comb Attachments	6 (1-12mm range)
Product Dimensions (LxWxH)	12 x 10 x 7 Centimeters
Item Weight	130 Grams
Country of Origin	China
Manufacturer	Visage Lines

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer directly.

- **Manufacturer:** Visage lines personal care Pvt. Ltd
- **Address:** 5th Floor, plot no 272, udhyog vihar, phase II, gurugram, Haryana - 122008
- **Contact Number:** 7303488233

Please retain your proof of purchase for warranty claims.