

[Manuals.plus](#) /

› [Bombay Shaving Company](#) /

› Bombay Shaving Company Beard Trimmer Instruction Manual - Model APPLIANCES_BEARD_TRIMMER_BT1199

Bombay Shaving Company APPLIANCES_BEARD_TRIMMER_BT1199

Bombay Shaving Company Beard Trimmer

Model: APPLIANCES_BEARD_TRIMMER_BT1199

INTRODUCTION

Thank you for choosing the Bombay Shaving Company Beard Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read these instructions thoroughly before first use and keep them for future reference.

SAFETY INFORMATION

Important: For external use only. Do not immerse the trimmer in water. Keep out of reach of children. Ensure the device is switched off before cleaning or maintenance. Do not use if the blades are damaged, as this may cause injury.

WHAT'S IN THE BOX

Your Bombay Shaving Company Beard Trimmer package includes the following items:

- Power Styler Trimmer
- 2 Adjustable Beard Combs
- Type-C Charging Cable
- Cleaning Brush

WHAT'S IN THE BOX

★ Power Styler Trimmer

🔧 2 adjustable beard combs

🔌 C-type charging cable

🪥 Cleaning brush



COMES WITH
**2 YEAR
WARRANTY**

Image: Contents of the product box.


PRODUCT OVERVIEW

The Bombay Shaving Company Beard Trimmer is designed for precise grooming with advanced features for convenience and versatility.

- **38 Length Settings:** Achieve various beard styles from 0.5mm stubble to a 20mm full beard using the integrated dial and two adjustable combs.
- **Smart Lock Technology:** Ensures your selected length setting remains secure during use, preventing accidental changes.
- **Cordless Operation:** Enjoy freedom of movement with a lightweight, ergonomic design.
- **Type-C Charging:** Conveniently charge your trimmer using a universal Type-C cable.
- **Long Runtime:** Up to 120 minutes of cordless operation on a single charge.



Image: Front view of the Bombay Shaving Company Beard Trimmer.

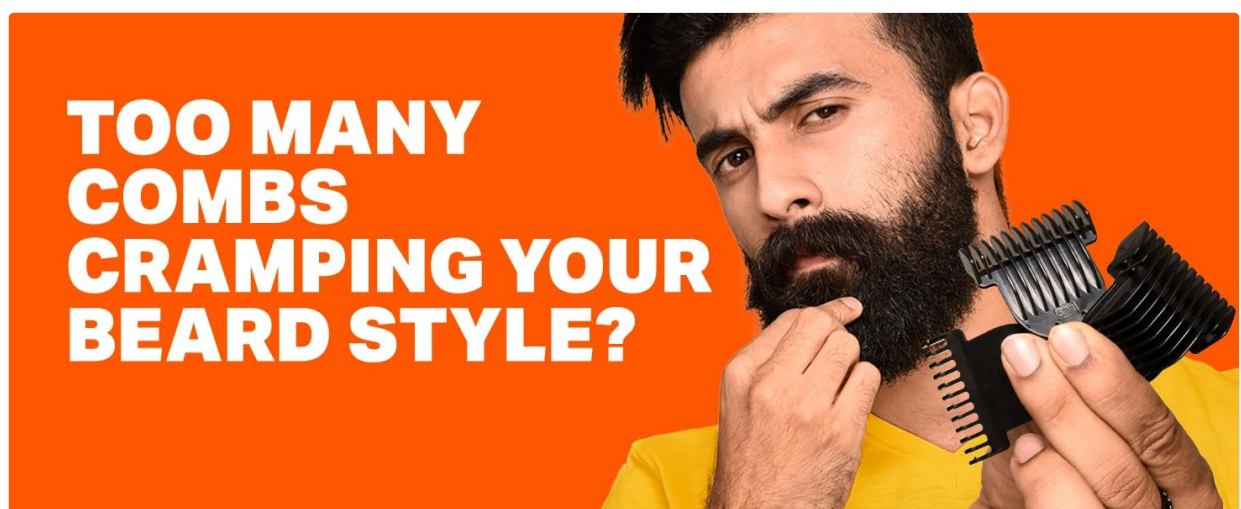

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the trimmer and accessories for any signs of damage. Do not use if damaged.
3. **Charge:** Before first use, fully charge the trimmer. Refer to the 'Charging' section for details.
4. **Attach Comb:** Select the desired comb attachment (1-10mm or 11-20mm) and slide it onto the trimmer head until it clicks into place.



Image: Trimmer with an attached comb.

CHARGING

The trimmer features a Type-C charging port for convenience.

1. **Connect:** Insert the Type-C end of the charging cable into the trimmer's charging port.
2. **Power Source:** Connect the USB end of the cable to a compatible USB power adapter (not included) or a computer USB port.
3. **Indicator:** The charging indicator light will illuminate to show that the trimmer is charging.
4. **Full Charge:** A full charge takes approximately 90 minutes (1.5 hours) and provides up to 120 minutes of runtime.

A quick 5-minute charge can provide enough power for one trim.



Image: Trimmer connected to a Type-C charging cable.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button to turn the trimmer on or off.
2. **Adjust Length:** Rotate the precision dial to select your desired trimming length from 0.5mm to 20mm. The Smart Lock feature will secure your selection.
3. **Trimming:** Hold the trimmer with the blades facing your skin. Move the trimmer against the direction of hair growth for an even trim.

4. **Styling:** For detailed styling or a closer trim, remove the comb attachment and use the bare blades carefully.



Image: Precision dial for adjusting trimming length.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. **Power Off:** Always switch off and unplug the trimmer before cleaning.
2. **Remove Comb:** Detach the comb attachment.
3. **Clean Blades:** Use the provided cleaning brush to remove hair clippings from the blades and the trimmer head.
4. **Rinse (if applicable):** If the blades are washable, rinse them under running water. Ensure the trimmer body does not get wet unless specified as waterproof. *(Note: Product specifications do not explicitly state waterproof, so avoid rinsing the entire unit.)*
5. **Dry:** Allow all parts to air dry completely before reassembling or storing.
6. **Lubricate:** Periodically apply a small drop of light machine oil (not included) to the blades for smooth operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dirty or dull.	Clean the blades. If problem persists, consider blade replacement or contact support.
Charging indicator not lighting up.	Cable not connected properly or faulty power source.	Ensure Type-C cable is securely connected. Try a different USB power adapter or port.
Trimmer heats up excessively.	Prolonged use or dirty blades.	Allow the trimmer to cool down. Clean the blades. If heating persists, discontinue use and contact support.

SPECIFICATIONS

Model Number	APPLIANCES_BEARD_TRIMMER_BTBT1199
Power Source	Battery Powered
Battery Runtime	Up to 120 minutes
Charge Time	Approx. 90 minutes (1.5 hours)
Charging Type	USB Type C
Length Settings	38 (0.5mm to 20mm)
Blade Material	Stainless Steel
Item Weight	200 Grams
Product Dimensions (LxWxH)	25 x 15 x 10 Centimeters
Country of Origin	China

WARRANTY & SUPPORT

This Bombay Shaving Company Beard Trimmer comes with a **2-year manufacturer warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or any product-related inquiries, please contact:

Manufacturer: Visage Lines Personal Care Private Limited

Address: F-213-B, First Floor, Old M.B. Road, Lado Sarai, Delhi-110030

Contact Number: 07303488233