

WARMEX HOME APPLIANCES Detangle and Dry

Groomiist 2-in-1 Electric Hair Dryer & Straightening Brush User Manual

Model: **Detangle and Dry** | Brand: **WARMEX HOME APPLIANCES**

1. INTRODUCTION

Thank you for choosing the Groomiist 2-in-1 Electric Hair Dryer & Straightening Brush. This appliance is designed to dry, detangle, straighten, smooth, add volume, de-frizz, and soften your hair, all in one convenient tool. Featuring advanced Infrared Technology and Black Diamond Oil Infused Bristles, it aims to provide efficient and gentle hair styling. Please read this manual thoroughly before use to ensure safe and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING.**
- Keep away from water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- This appliance is for household use only.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where

the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- The appliance will be hot during use. Allow to cool before storing.

3. PRODUCT OVERVIEW AND FEATURES

The Groomiist 2-in-1 Electric Hair Dryer & Straightening Brush combines multiple styling functions into a single device, designed for ease of use and effective results.

Key Features:

- **Multi-functional Design:** Dries, detangles, adds shine, straightens, smoothes, adds volume, de-frizzes, and softens hair.
- **Infrared Technology:** Helps to smooth hair and prevent stripping natural moisture. This technology uses less heat than traditional dryers, promoting gentler styling while maintaining efficiency.
- **Black Diamond Oil Infused Bristles:** Designed to reduce frizz and enhance shine and luminescence.
- **Ionic System:** Further reduces frizz for a smoother finish.
- **Two Temperature/Speed Settings:** Offers 'LOW' and 'HIGH' options for versatile styling. The infrared technology activates and glows red on the 'HIGH' setting.
- **Removable Brush Head:** For easy cleaning and maintenance.
- **Salon Length 3m Cord:** Provides ample reach for fuss-free styling.
- **Swivel Cord:** Enhances maneuverability during use.



Image: The Groomiist brush highlighting its 8-in-1 functionality including drying, detangling, and straightening.



Image: Detailed view of the brush head removal process and the control switch for heat/speed settings.



Image: The brush in use, illustrating the infrared technology at work, preventing moisture stripping.

4. SETUP

Before first use, ensure the appliance is clean and free from any packaging materials.

1. **Unpack:** Carefully remove the hair dryer brush from its packaging.
2. **Inspect:** Check the appliance for any visible damage. Do not use if damaged.
3. **Connect:** Plug the 3-meter power cord into a suitable 230V, 50Hz AC power outlet. Ensure your hands are dry before plugging in.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and safe hair styling:

1. **Prepare Hair:** For best results, towel-dry your hair to remove excess water. The brush works best on damp, not soaking wet, hair. Detangle hair gently with a regular comb if necessary.
2. **Power On and Select Setting:** Slide the power switch located on the handle to either the 'LOW' or 'HIGH' setting. The 'HIGH' setting activates the infrared technology, indicated by a red glow inside the brush.

3. **Section Hair:** Divide your hair into manageable sections using clips.
4. **Style:** Take one section of hair and place the brush near the roots. Glide the brush slowly downwards towards the ends, maintaining tension. The combination of heat and bristles will dry, detangle, and straighten your hair simultaneously.
5. **Repeat:** Continue with each section until your entire hair is styled as desired.
6. **Power Off:** Once finished, slide the power switch down to the 'OFF' position.
7. **Cool Down:** Allow the appliance to cool completely before storing.



Image: Visual comparison of hair before and after using the straightening brush, demonstrating frizz reduction and straightening.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your appliance.

- **Cleaning:** Ensure the appliance is unplugged and completely cool before cleaning. The brush head can be removed for easier cleaning. Gently remove any trapped hair from the bristles. Wipe the body of the appliance with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the appliance in a cool, dry place, away from moisture. Do not wrap the power cord tightly around the appliance, as this can damage the cord. Use the provided cord tie if available.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in correctly; Power outlet malfunction; Appliance damage.	Ensure the plug is fully inserted. Test the outlet with another device. If still not working, contact customer support.
Low airflow or heat	Air intake/outlet blocked by lint or hair.	Unplug the appliance and allow it to cool. Clean any obstructions from the air vents and bristles.
Hair not straightening effectively	Hair is too wet; Sections are too large; Incorrect heat setting.	Ensure hair is damp, not soaking wet. Work with smaller sections. Use the 'HIGH' heat setting for more effective straightening.
Brush head difficult to remove/attach	Misalignment or debris.	Ensure the brush head is aligned correctly with the grooves. Check for any debris preventing smooth attachment/removal.

8. SPECIFICATIONS

Feature	Detail
Model Number	Detangle and Dry
Wattage	400-500 Watts
Voltage	230 V, 50 Hz AC
Product Dimensions (LxWxH)	20.5 x 7.5 x 6.5 cm
Item Weight	405 g
Material	Plastic
Power Source	Corded Electric
Special Feature	Infrared Technology
Number of Speed/Heat Settings	2 (Low, High)
Hair Type Compatibility	All
Cord Length	3 meters

9. WARRANTY AND SUPPORT

This Groomiist appliance comes with a **2-year warranty** from the date of purchase. Please retain your purchase receipt as proof of purchase for warranty claims.

Warranty Coverage:

The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or failure to follow the instructions in this manual.

Customer Support:

For any product inquiries, troubleshooting assistance, or warranty claims, please contact WARMEX HOME APPLIANCES customer service. Refer to the contact information provided with your product packaging or visit the official WARMEX HOME APPLIANCES website for support details.



Image: Visual representation of the 2-year warranty and Pan India service availability.