

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

Manuals.plus / > Elica /

> Elica Slimmest 4 Burner Auto Ignition Gas Stove (Model 904 CT VETRO 2J) User Manual

Elica 904 CT VETRO 2J



Elica Slimmest 4 Burner Auto Ignition Gas Stove

MODEL: 904 CT VETRO 2J

Introduction

Thank you for choosing the Elica Slimmest 4 Burner Auto Ignition Gas Stove, Model 904 CT VETRO 2J. This manual provides essential information for the safe installation, operation, and maintenance of your new gas stove. Please read these instructions carefully before using the appliance and keep them for future reference.

Important Safety Instructions

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury. This appliance is designed for domestic use only.

- Ensure proper ventilation in the kitchen area during operation.
- Do not store flammable materials near the gas stove.
- Keep children and pets away from the appliance during use.
- Do not use abrasive cleaners or sharp objects on the glass top.
- In case of a gas leak, immediately turn off the gas supply, open windows, and do not operate any electrical switches.
- Ensure the gas connection is secure and free from leaks.

Product Components

Familiarize yourself with the main components of your Elica gas stove.



Image: Overall view of the Elica Slimmest 4 Burner Auto Ignition Gas Stove, showcasing its sleek design and four burners.

- **Toughened Glass Top:** Durable and easy-to-clean surface.
- **Forged Brass Burners:** Efficient and long-lasting burners for various cooking needs.
- **Control Knobs:** For adjusting flame intensity and auto-ignition.
- **Pan Supports:** Crown-shaped euro coated supports for stable placement of cookware.
- **Double Drip Tray:** Designed to collect spills and facilitate easy cleaning.



DOUBLE DRIP TRAY

An added ingenious feature in this gas stove is the double drip trays. These are perfect for absorbing all spills on the stovetop, easy to wipe off. No messy goop or grease after cooking lift, the removable tray, clean, and place it back.



Image: An exploded diagram illustrating the components of a burner, including the pan support, removable tray, and fixed drip tray, highlighting the double drip tray feature for spill absorption.

Installation Guide

For optimal safety and performance, professional installation is recommended. Ensure the installation area is well-ventilated and meets local gas safety regulations.

1. **Unpacking:** Carefully remove the gas stove from its packaging. Inspect for any damage during transit.
2. **Placement:** Place the stove on a stable, level, and heat-resistant surface, away from flammable materials.

3. **Gas Connection:** Connect the gas stove to a suitable gas supply line using an approved gas hose and regulator. Ensure all connections are tight and leak-free. Use soapy water to check for leaks; bubbles indicate a leak.
4. **Burner Assembly:** Place the forged brass burners and pan supports correctly on their respective positions.
5. **Battery for Auto Ignition:** Insert the required battery (usually a D-cell) into the designated battery compartment for the auto-ignition feature.

Operating Your Gas Stove

Follow these steps to safely operate your Elica gas stove.



Image: Close-up view of the sleek control knobs on the Elica gas stove, used for adjusting flame intensity and activating auto-ignition.

1. **Prepare Cookware:** Place your cooking vessel centrally on the pan support over the desired burner.
2. **Ignite Burner:** Push down and turn the corresponding control knob counter-clockwise to the 'Ignite' position. You will hear a clicking sound as the auto-ignition sparks.
3. **Adjust Flame:** Once the burner ignites, release the knob and adjust the flame intensity by turning the knob between the 'High' and 'Low' settings.
4. **Turn Off:** To turn off the burner, turn the control knob clockwise to the 'Off' position. Ensure the flame is completely extinguished.

Note: If the burner does not ignite after a few attempts, check the gas supply and the battery for the auto-ignition. If using a matchstick or lighter, ignite the burner before turning the gas knob.

Care and Maintenance

Regular cleaning and maintenance will ensure the longevity and efficient performance of your gas stove.



Image: A single crown-shaped pan support, designed to provide stable support for cookware on the gas stove.

- **Daily Cleaning:** After each use, allow the stove to cool down. Wipe the toughened glass top with a soft cloth and mild detergent.
- **Burners and Pan Supports:** Remove the pan supports and burners. Clean them with warm soapy water. For stubborn stains, use a non-abrasive scrubber. Ensure they are completely dry before reassembling.
- **Double Drip Tray:** The double drip tray is designed for easy removal and cleaning. Lift the removable tray, clean any spills or grease, and then place it back.
- **Avoid Abrasives:** Do not use harsh chemicals, abrasive pads, or steel wool, as they can scratch the surface.

- **Check Gas Hose:** Periodically inspect the gas hose for any signs of wear, cracks, or damage. Replace if necessary.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply, clogged burner, weak auto-ignition battery, faulty igniter.	Check gas cylinder/line. Clean burner ports. Replace auto-ignition battery. Contact customer service if igniter is faulty.
Irregular or yellow flame	Clogged burner ports, improper burner placement, incorrect gas pressure.	Clean burner ports. Ensure burner components are correctly assembled. Consult a technician for gas pressure issues.
Gas smell detected	Gas leak from connections or hose.	Immediately turn off gas supply. Open windows. Do not operate electrical switches. Check connections with soapy water. If leak persists, evacuate and call emergency services/gas provider.
Knobs are stiff	Food debris or grease accumulation.	Clean around the knob base. Do not force the knob.

Technical Specifications

- **Model Number:** 904 CT VETRO 2J (TKN CROWN DT AI)
- **Brand:** Elica
- **Color:** Black
- **Material:** Brass (Burners)
- **Number of Heating Elements:** 4
- **Controls Type:** Knob
- **Power Source:** Gas
- **Item Weight:** 15.07 kg

- **Special Features:** Auto Ignition, Double Drip Tray, Forged Brass Burners, Toughened Glass Top

Warranty and Customer Support

Elica provides customer support for any queries or service requirements related to your gas stove.



Customer Care

for more queries, please call us on

18002330007
7447440983/4/5

Additional installation charges upto ₹236/-

The warranty will remain valid and unaffected if it's self-installed.

Image: Elica Customer Care contact details, including phone numbers for support and service inquiries.

For product-related assistance, installation services, or warranty claims, please contact Elica Customer Care:

Toll-Free Number: 18002330007

Other Contact Numbers: 7447440983 / 7447440984 / 7447440985

Additional installation charges may apply. The product warranty remains valid and unaffected if the appliance is self-installed, provided installation guidelines are followed correctly.

© 2026 Elica. All rights reserved.

RELATED DOCUMENTS

904 CT VETRO 2J



RELATED DOCUMENT

**Elica FLEXI 470 LOTUS IND HD
BRASS 70cm 4 Burner Auto
Ignition Hob User Manual**

[View document →](#)



RELATED DOCUMENT

**Elica CROWN FLEXI 590 LOTUS
IND HD BRASS 90cm 5 Burner
Auto Ignition Hob User
Manual**

[View document →](#)



RELATED DOCUMENT

**Elica CROWN FLEXI 460 LOTUS
IND HD BRASS 60cm 4 Burner
Auto Ignition Hob User
Manual**

[View document →](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com