

Manuals.plus / > SHARP / > SHARP EKJ-18WN-S Electric Kettle User Manual

SHARP EKJ-18WN-S

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

SHARP EKJ-18WN-S Electric Kettle User Manual

Model: EKJ-18WN-S

1. INTRODUCTION

Thank you for purchasing the SHARP EKJ-18WN-S Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Image: The SHARP EKJ-18WN-S Electric Kettle, silver stainless steel, shown on a kitchen counter next to a steaming cup of tea.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- **Boil-Dry Protection:** The kettle is equipped with boil-dry protection. If the kettle is switched on without sufficient water, it will automatically switch off. Allow it to cool down before refilling with water.
- **Automatic Cut-off:** The kettle will automatically switch off once the water has boiled, ensuring safety and energy efficiency.
- **Cool Touch Handle:** The handle is designed to remain cool during operation for safe handling.

Advertisements



3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your SHARP Electric Kettle:

- Kettle Body (Stainless Steel)
- Lid (with Auto Lid-Opening mechanism)
- Handle (Cool Touch)
- Water Level Indicator
- Power Switch (with Light Indicator)
- 360-degree Swivel Base (Cordless connection)
- Power Cord and Plug

Advertisements





Image: The SHARP EKJ-18WN-S Electric Kettle shown alongside its detachable 360-degree swivel power base and power cord.

Advertisements





Image: A close-up view of the kettle's handle and the transparent water level indicator, showing markings for 0.8L, 1.2L, 1.5L, and MAX 1.8L.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter.
4. **Power Connection:** Plug the power cord into a suitable wall outlet.

Advertisements



5. OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Press the lid release button to open the lid. Fill the kettle with the desired amount of water, ensuring it is between the MIN and MAX marks on the water level indicator. Do not overfill.
2. **Close the Lid:** Close the lid firmly until it clicks into place.
3. **Place on Base:** Position the kettle onto the 360-degree swivel power base.
4. **Switch On:** Press the power switch down. The light indicator will illuminate, indicating that the kettle is heating.
5. **Boiling:** The kettle will begin to heat the water. It typically boils 1.8 liters of water within 5-7 minutes.
6. **Automatic Shut-off:** Once the water has boiled, the kettle will automatically switch off, and the light indicator will extinguish.
7. **Pouring:** Carefully lift the kettle from its base and pour the hot water. The cool-touch handle ensures safe handling.
8. **Re-boiling:** If you need to re-boil water immediately, wait a few seconds for the automatic cut-off mechanism to reset before switching it on again.

Advertisements





Image: A close-up of the kettle's power switch, highlighting the auto cut-off feature for safety.



Image: The kettle with its lid open, demonstrating the auto lid-opening function and the stainless steel body construction.

Advertisements



6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your kettle.

1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.
3. **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a mixture of one part white vinegar and two parts water.

- Boil the mixture and let it stand for at least 30 minutes, or longer for heavy deposits.
- Pour out the mixture and rinse the interior thoroughly with fresh water several times.
- For stubborn deposits, you may need to repeat the process or use a commercial descaling solution following its instructions.

4. **Do Not Immerse:** Never immerse the kettle body or the power base in water or any other liquid.

Advertisements



7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	• Kettle not properly placed on base. • Power cord not plugged in. • Power switch not pressed. • Boil-dry protection activated.	• Ensure kettle is correctly seated on the power base. • Check if the power cord is securely plugged into the wall outlet. • Press the power switch down until the light indicator illuminates. • If boil-dry protection activated, remove kettle, let it cool for 10-15 minutes, then refill and restart.
Water takes too long to boil.	• Excessive limescale buildup. • Voltage fluctuation.	• Descale the kettle as per the "Maintenance and Cleaning" section. • Ensure the kettle is connected to a stable power supply. Advertisements
Kettle switches off	• Limescale buildup	• Descale the kettle. • Ensure kettle has sufficient water.



Problem	Possible Cause	Solution
before boiling.	affecting sensor. • Kettle is empty (boil-dry protection).	

8. SPECIFICATIONS

Model Name:	EKJ-18WN-S
Brand:	SHARP
Capacity:	1.8 Liters
Material:	Stainless Steel
Colour:	Silver
Special Features:	Boil Dry Protection, Cordless, Portable
Voltage:	220-240V / 50Hz
Wattage:	1850-2200 Watts
Product Dimensions (L x W x H):	23L x 17.2W x 24.7H Centimeters
Item Weight:	1200 Grams

9. WARRANTY AND CUSTOMER SUPPORT

Your SHARP EKJ-18WN-S Electric Kettle comes with a **12-month warranty** from the date of purchase, covering manufacturing defects under normal use.

For any product-related queries, service requests, or warranty claims, please contact SHARP customer support:

- **Toll-Free Number:** [1800-419-4322](tel:1800-419-4322)
- **Missed Call Service:** [9804-763-763](tel:9804-763-763)
- **E-Mail:** support@sharp-oa.com
- **Manufacturer Address:** Sharp Business Systems (India) Private Limited, Plot No. 51, First Floor, Okhla Industrial Estate, Phase-III, New Delhi- 110020.

Advertisements

