



VESTA

1.8L GLASS ELECTRIC KETTLE


1500 WATT



USER MANUAL

STEPS BEFORE
FIRST USE

01

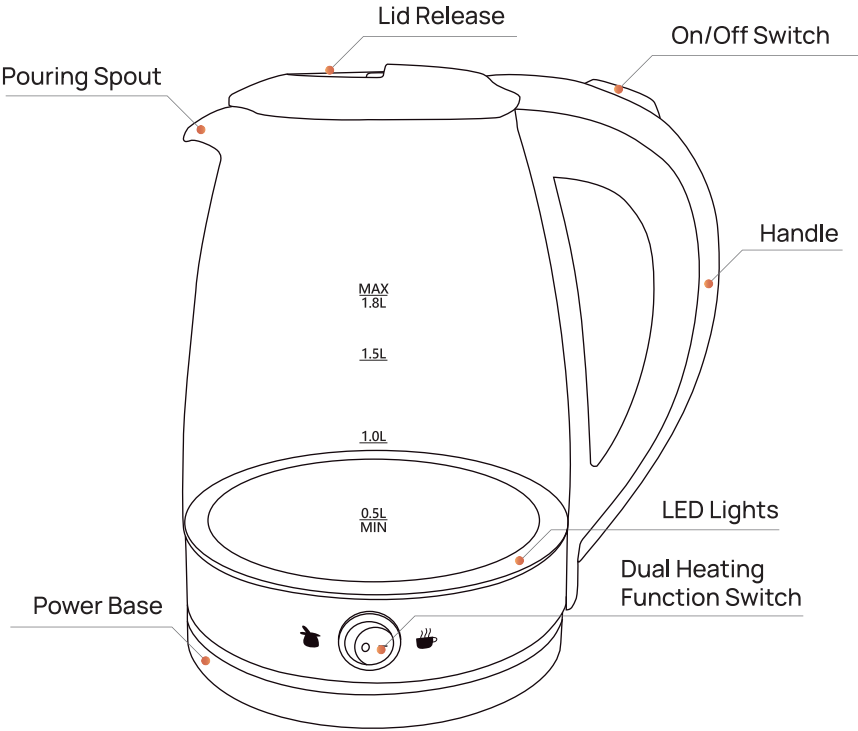

IMPORTANT SAFEGUARDS

02

WHEN USING YOUR KETTLE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS FOLLOWED, INCLUDING THE FOLLOWING:

1. Read all instructions carefully, even if you are familiar with the appliance.

2. Close supervision is necessary when the appliance is used by or near children.

3. Before connecting the kettle, check if the voltage indicated on the appliance corresponds with the mains voltage in your home. If this is not the case, contact your dealer and do not use the kettle.

4. Switch off and unplug from the outlet before filling, emptying, cleaning, or when not in use.

5. Do not overfill as boiling water may be ejected. The maximum level is marked inside the kettle.

6. Do not operate or place any part of this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).

7. Do not let the cord hang over the edge of a table or counter. Do not let the cord touch hot surfaces.

IMPORTANT SAFEGUARDS

03

8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.

9. If the supply cord of this appliance is damaged, please contact Wipro Vesta Customer Care on 1800-425-1969 for support, because special purpose tools are required to repair the appliance.

10. Avoid touching hot kettle surfaces use the handle and the knobs.

11. To avoid possible steam damage, turn the spout away from walls or cabinets when operating the kettle.

12. If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.

13. To avoid scalding, always ensure the lid is correctly positioned before operating.

14. Scalding may occur if the lid is open whilst heating.

15. Open and close the lid carefully when hot.

16. Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.

IMPORTANT SAFEGUARDS

04

17. Do not switch your kettle on if it is empty.

18. To protect from electrical hazard, do not immerse this kettle or cord set in any liquid.

19. Only use the kettle with the supplied base unit. Do not use the base unit for other purposes.

20. To protect against fire, do not operate in the presence of explosive and/or flammable fumes.

21. A kettle should not be left connected to a wall socket when the room temperature is likely to fall to outdoor winter temperatures. At sub-zero temperatures the automatic control thermostat may reset to boil and energize the element.

22. Do not use the kettle for any purpose other than heating water. Other liquids or food will contaminate the interior.

23. This product has not been designed for any other uses than those specified in this manual.

INSTRUCTIONS FOR USE

05

1. Before first use, fill the kettle with clean water to maximum capacity and boil. Discard the water and repeat once again.

2. The kettle should always be unplugged when draining or filling the water.

3. Fill the kettle with water to the desired level. Do not overfill or there will be a risk of spillage. Do not forget to close the lid after filling, otherwise the kettle will not automatically switch off after use.

4. Do not fill less than 0.5 liter of water (up to MIN indication) to prevent the kettle running dry while operating.

5. Do not fill more than 1.8 liters of water (up to MAX indication).

6. An automatic safety cut-out has been fitted for protection against overheating. It will activate if the kettle is switched on with insufficient water. Always ensure that the water inside the kettle is above the minimum mark. If the automatic safety cut-out is activated, disconnect the kettle from the power outlet and allow the kettle to cool down for 5-10 minutes. Then refill with water and switch on, the kettle will then boil and cut off as normal.

7. Place the power base on a dry flat surface.

8. Place the kettle on the power base. The electrical connections will be made automatically as the kettle slides onto the power base.

INSTRUCTIONS FOR USE

06

9. Plug the cord set into an earthed power socket.

10. The appliance is switched on by pressing the ON/OFF switch. The pilot light will come on once kettle is operational.

11. When the water has boiled, the kettle will switch off automatically.

12. Do not remove the kettle from the power base without switching off first.

13. To pour water, lift the kettle from the power base and pour.

HOW TO CARE FOR YOUR KETTLE

07

Wipe the exterior of the kettle with a soft damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders. Never immerse the kettle in water or other liquids. From time to time depending on the nature of your water supply, a limescale deposit will naturally form and can be found mostly adhered to the heating element and reduces the heating capacity. The amount of limescale deposited (and subsequently the need to clean) largely depends on the water hardness in your area and the frequency with which the kettle is used. Limescale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

DESCALING the kettle regularly. With normal use, at least twice a year.

1. Fill the kettle up to "MAX" with a mixture of one-part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.
2. Let the mixture remain inside the kettle overnight.
3. Throw the mixture away next morning.
4. Fill the kettle with clean water up to "MAX" and boil again.
5. Throw away this boiled water to remove any remaining scale and vinegar.
6. Rinse the inside of the kettle with clean water.

For more information please visit

Wipro Smart light: www.wiproconsumerlighting.com