

AGARO 33956

AGARO Galaxy Electric Kettle (Model 33956) User Manual

Model: 33956 | Brand: AGARO

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your AGARO Galaxy Electric Kettle. Keep this manual for future reference.

- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the kettle is placed on a stable, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the kettle malfunctions or has been damaged in any way.
- Keep the appliance out of reach of children.
- Do not fill above the MAX line or below the MIN line indicated on the kettle.
- Always close the lid securely before operating.
- Unplug the kettle from the outlet when not in use and before cleaning.
- Avoid contact with steam escaping from the spout or lid during and after boiling.
- This appliance is for household use only.

PRODUCT OVERVIEW

The AGARO Galaxy Electric Kettle is designed for efficient and safe water heating. It features a 1.5L capacity, double-wall construction, and a convenient keep-warm function.

Key Features:

- **1.5L Capacity:** Ideal for various household needs.
- **Double Wall Design:** Features a BPA-free plastic outer body and a borosilicate glass inner body for insulation and durability.
- **Bi-coloured LED Indicator:** Green for Keep Warm/Standby, Blue for Heating.

- **24-Hour Keep Warm Function:** Maintains water temperature for extended periods.
- **Automatic Shut-Off:** Kettle automatically turns off once water reaches boiling point.
- **Boil Dry Protection:** Prevents damage if the kettle is accidentally switched on without water.
- **Detachable Power Base:** Allows for cord-free serving.
- **Hinged Lid:** For easy filling and cleaning.
- **Power:** 1355 Watts for rapid boiling.

Components:



Overall view of the AGARO Galaxy Electric Kettle, highlighting its 1.5L capacity and hinged lid for easy access.



Illustration of the kettle's double-wall construction, featuring a BPA-free plastic outer body and a borosilicate glass inner body.



Close-up of the kettle's base and handle, showing the On/Off button, Keep Warm button, and the bi-colour LED indicator (Green for Keep Warm/Standby, Blue for Heating).



Demonstration of cord-free serving, highlighting the detachable power base and cool-touch handle for safe pouring.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface, away from the edge of the countertop and out of reach of children.
4. **Power Connection:** Ensure the power cord is fully extended and plug the power base into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Open the hinged lid and fill the kettle with the desired amount of water. Do not fill below the MIN mark or above the MAX mark. Close the lid securely.
2. **Placing on Base:** Place the kettle firmly onto the power base.
3. **Boiling Water:**
 - Press the **On/Off button**. The LED indicator will illuminate blue, indicating that the kettle is heating.
 - The kettle will automatically shut off once the water reaches boiling point, and the blue LED will turn off.
4. **Using the Keep Warm Function:**
 - After boiling, press the **Keep Warm button**. The LED indicator will illuminate green, and the kettle will maintain the water temperature for up to 24 hours.
 - To deactivate the Keep Warm function, press the Keep Warm button again or lift the kettle from its base.
5. **Serving:** Carefully lift the kettle from its power base and pour the hot water. The handle is designed to remain cool to the touch.
6. **Important Note:** Do not press the On/Off button and the Keep Warm button simultaneously, as this may affect the kettle's lifespan.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your kettle.

1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
3. **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a mixture of one part white vinegar and two parts water.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy deposits.
 - Pour out the mixture and rinse the interior thoroughly with fresh water several times.
 - For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.
4. **Storage:** When not in use, store the kettle in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Kettle not properly seated on the power base. Power cord not plugged in. No power at the outlet. Boil-dry protection activated.	Ensure kettle is correctly placed on the base. Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Allow the kettle to cool down, then refill with water and restart.
Water takes too long to boil.	Limescale buildup inside the kettle. Lid not closed properly.	Descal the kettle as per maintenance instructions. Ensure the lid is securely closed.
Kettle leaks.	Overfilled kettle. Lid not closed properly.	Do not fill above the MAX line. Ensure the lid is securely closed.
Keep Warm function not working.	Keep Warm button not pressed. Kettle lifted from base.	Ensure the Keep Warm button is pressed after boiling. Place the kettle back on the base and reactivate the function.

If the problem persists after trying these solutions, please contact AGARO customer support.

SPECIFICATIONS

Brand	AGARO
Model Name	Galaxy
Model Number	33956
Capacity	1.5 Liters
Material	Borosilicate Glass (inner), BPA Free PP Plastic (outer)
Colour	Black

Special Features	Automatic Shut-Off, Boil Dry Protection, Double Wall Design, Keep Warm Function, Bi-colour LED
Voltage	220 Volts
Wattage	1355 Watts
Product Dimensions (L x W x H)	15L x 15W x 23H Centimeters
Item Weight	1080 Grams
Included Components	Kettle, Lid, Power Base



Visual representation of the kettle's dimensions:
23 cm height and 21 cm width.

WARRANTY AND SUPPORT

Warranty Information:

The AGARO Galaxy Electric Kettle comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use.

Customer Support:

For any product inquiries, technical assistance, or warranty claims, please contact AGARO customer support:

- **Manufacturer:** AGARO, Universal Corporation Limited
- **Importer Contact:** Universal Corporation Ltd, 4/1 Middleton Street, Sikkim Commerce House, Kolkata-71
- **Packer Contact:** Universal Corporation Ltd, Guangdong, China
- For further assistance, please visit the official AGARO website or refer to your purchase documentation.

VIDEO RESOURCES

No official product videos from the seller were available for embedding in this manual. Please refer to the written instructions and diagrams for guidance.



