

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Marvel 9 Litre OTG User Manual

AGARO Marvel 9 Litre OTG 800W (Black)

AGARO Marvel 9 Litre OTG User Manual

Model: Marvel 9 Litre OTG 800W (Black)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot parts or food.
- To protect against electrical shock, do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause hazards or injury.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure adequate ventilation around the appliance during operation. Maintain a minimum distance of 10 cm from walls or other objects.
- Only use metal utensils inside the oven. Ceramic, glass, and plastic utensils are not suitable for use in this oven toaster griller.

Pre-heat the oven before cooking for better cuisine experience



Figure 1: Approved and disapproved utensil types for the OTG. Only metal utensils should be used.

2. PRODUCT OVERVIEW AND COMPONENTS

The AGARO Marvel 9 Litre OTG is a versatile appliance designed for toasting, baking, and grilling. It features a compact design with intuitive controls.



Figure 2: AGARO Marvel 9 Litre OTG Main Unit.

2.1 Included Accessories

Your AGARO Marvel OTG comes with the following accessories:

- **Main Unit:** The primary oven toaster griller appliance.
- **Bake Pan:** A rectangular pan for baking items like cakes or roasting.
- **Tray Handle:** A tool designed to safely remove hot bake pans or oven racks.
- **Oven Rack:** A wire rack for grilling or placing dishes.



Figure 3: Product dimensions and included accessories.

3. SETUP AND FIRST USE

3.1 Unpacking

1. Carefully remove the OTG and all accessories from the packaging.
2. Remove any protective film, stickers, or packing materials from the appliance.
3. Inspect the appliance for any signs of damage. Do not use if damaged.

3.2 Placement

- Place the OTG on a stable, flat, and heat-resistant surface.
- Ensure there is adequate space (at least 10 cm) around all sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
- Keep the appliance away from flammable materials, curtains, and heat sources.

3.3 Initial Cleaning and Burn-in

1. Before first use, wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.

2. Wash the bake pan, oven rack, and tray handle in warm, soapy water. Rinse and dry completely.
3. To eliminate any manufacturing odors, plug in the oven, set the temperature to 250°C, and the timer to 15 minutes. Operate the oven empty in a well-ventilated area. A slight odor or smoke may be present during this initial burn-in; this is normal.
4. Allow the oven to cool completely before its first cooking use.

4. OPERATING INSTRUCTIONS

4.1 Controls Overview

The AGARO Marvel OTG features two main control knobs:

- **Temperature Control Knob:** Located at the top, this knob allows you to set the desired cooking temperature from 100°C to 250°C.
- **Timer Control Knob:** Located at the bottom, this knob sets the cooking time up to 30 minutes. It also functions as the ON/OFF switch.



Figure 4: Temperature and Timer Control Knobs.

4.2 General Operation

1. **Prepare Food:** Place your food item on the bake pan or oven rack as required for your recipe.
2. **Insert Tray:** Carefully slide the bake pan or oven rack into the desired slot inside the oven.
3. **Close Door:** Ensure the tempered glass door is securely closed.
4. **Set Temperature:** Turn the Temperature Control Knob to your desired cooking temperature (100°C - 250°C).
5. **Set Timer:** Turn the Timer Control Knob clockwise to the desired cooking time (up to 30 minutes). The oven will automatically turn on. The power indicator light will illuminate.
6. **Preheating (Recommended):** For best results, especially for baking, preheat the oven. Set the temperature and timer for 5-10 minutes without food inside. Once preheated, carefully insert your food.
7. **Cooking:** The oven will cook for the set duration. The "Ready Bell" will sound when the timer reaches zero, and the oven will automatically shut off.
8. **Remove Food:** Using the tray handle or oven mitts, carefully remove the cooked food from the oven.
9. **Cool Down:** Allow the oven to cool down completely before cleaning or storing.



Figure 5: Ready Bell and Tempered Glass Door features.

5. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your AGARO Marvel OTG.

5.1 Before Cleaning

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.

5.2 Cleaning the Interior

- Wipe the interior walls, oven rack, and bake pan with a damp cloth and mild detergent.
- For stubborn stains, a non-abrasive cleaner can be used. Avoid harsh chemicals or abrasive sponges that could damage the non-stick coating or surfaces.
- Ensure all parts are thoroughly rinsed and dried before reassembling or using the oven again.

5.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure no water or liquid enters the control panel or electrical components.

5.4 Cleaning the Crumb Tray

The hinged crumb tray at the bottom of the oven collects crumbs and food debris, making cleaning easier.

1. Locate the crumb tray at the bottom of the oven.
2. Push to open the crumb tray.
3. Pull out the crumb tray.
4. Empty crumbs and wipe the tray clean with a damp cloth.
5. Ensure the crumb tray is completely dry before pushing it back into place.



Figure 6: Hinged crumb tray access for easy cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your AGARO Marvel OTG, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet issue; timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the timer knob past the "OFF" position to activate.
Food not cooking evenly.	Incorrect temperature/time setting; uneven food placement; oven not preheated.	Adjust temperature and time according to recipe. Ensure food is placed centrally. Preheat the oven before placing food inside.

Problem	Possible Cause	Solution
Smoke or burning smell during operation.	Food spills/residue inside; initial burn-in odor.	If it's the first use, this is normal (see Section 3.3). Otherwise, unplug and allow to cool, then clean the interior and crumb tray thoroughly.
Timer not working.	Timer knob not set correctly.	Ensure the timer knob is turned clockwise past the "OFF" mark to engage the timer mechanism.

If the problem persists after trying these solutions, please contact AGARO customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	AGARO
Model	Marvel 9 Litre OTG
Capacity	9 Litres
Power	800W
Temperature Range	100°C to 250°C
Timer	Up to 30 minutes
Product Dimensions (D x W x H)	34.3D x 26.3W x 21.3H Centimeters
Control Type	Knob
Special Features	Automatic Thermostat, Auto Shut Off, Ready Bell, Heat Resistant Tempered Glass Window
Colour	Black

8. WARRANTY AND SUPPORT

Your AGARO Marvel 9 Litre OTG comes with a **1 Year Warranty** from the date of purchase.

This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

For warranty claims, technical support, or any other inquiries, please contact AGARO customer service. Please have your purchase receipt and product model information ready.

You can find contact information for AGARO customer support on their official website or through your purchase platform.

