

[Manuals.plus](#) /

› [Wonderchef](#) /

› Wonderchef OTG 21L Oven Toaster Griller Instruction Manual

Wonderchef OTG 21L

Wonderchef OTG 21L Oven Toaster Griller Instruction Manual

Model: OTG 21L

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always place the OTG on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot items.
- To protect against electrical shock, do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire.
- Do not use this appliance for anything other than its intended use.

2. PRODUCT OVERVIEW AND COMPONENTS

The Wonderchef OTG 21L is a versatile appliance designed for baking, grilling, and roasting. It features a 21-liter

capacity, auto-shut off timer, and multi-stage heat selection.

Included Components:

- Baking and Grilling Tray - 1N
- Chromed wire rack - 1N
- Crumb Tray - 1N
- Tray handle - 1N



Image: Wonderchef OTG 21L Oven Toaster Griller with food being cooked inside, showcasing its compact design and functionality.

3. SETUP

3.1 Unpacking

1. Carefully remove the OTG and all accessories from the packaging.
2. Remove any packing materials, stickers, or labels from the appliance.
3. Retain the packaging for future storage or transportation.

3.2 Placement

1. Place the OTG on a flat, stable, and heat-resistant surface.
2. Ensure there is adequate space (at least 10-15 cm) around the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
3. Keep the appliance away from water sources and flammable materials.

3.3 Initial Cleaning

1. Before first use, wipe the interior and exterior of the OTG with a damp cloth.
2. Wash the baking tray, wire rack, crumb tray, and tray handle with warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the crumb tray at the bottom of the oven.
4. Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

The Wonderchef OTG 21L features an advanced control panel for precise cooking.



Image: Close-up of the OTG control panel, highlighting the temperature dial (100°C - 250°C), heat function selector (4 modes), and timer dial (0-60 minutes).

4.1 Control Panel Overview

- **Temperature Control Dial:** Adjusts the oven temperature from 100°C to 250°C.
- **Heat Function Selector:** Allows selection of heating elements (top, bottom, or both).
- **Timer Dial:** Sets the cooking time from 0 to 60 minutes with an auto-shut off and ready bell feature.
- **Power Indicator Light:** Illuminates when the oven is operating.

4.2 General Operation

1. **Prepare Food:** Place your food on the baking tray or wire rack.
2. **Insert Tray:** Using the tray handle, carefully slide the tray or rack into the desired position inside the oven.
3. **Set Temperature:** Turn the Temperature Control Dial to the desired cooking temperature (up to 250°C).
4. **Select Heat Function:** Turn the Heat Function Selector to choose the heating elements:
 - **Top:** For grilling or browning the top surface.
 - **Bottom:** For baking items that require heat from below.
 - **Both:** For general baking and roasting, ensuring even heat distribution.
5. **Set Timer:** Turn the Timer Dial to the desired cooking time. The oven will begin heating. The power indicator light will illuminate.
6. **Monitor Cooking:** The internal LED light allows you to monitor your dish effortlessly through the heat-resistant tempered glass window.
7. **Completion:** Once the set time elapses, the oven will automatically shut off, and a ready bell will sound.
8. **Remove Food:** Using the tray handle and oven mitts, carefully remove the cooked food from the oven.



Image: Interior view of the OTG with food cooking, illustrating the even heat distribution for thorough cooking.

4.3 Cooking Functions

- **Bake:** Ideal for cakes, cookies, and casseroles. Use the baking tray and select bottom or both heating elements.
- **Grill:** Perfect for meats, vegetables, and browning. Use the wire rack and select the top heating element.
- **Roast:** Suitable for larger cuts of meat or poultry. Use the baking tray and select both heating elements.

Experiment Using Versatile Settings



Image: The Wonderchef OTG 21L with a pizza cooking on the wire rack, demonstrating its compact design and suitability for various dishes.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your OTG.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** The removable crumb tray collects crumbs and food particles. Slide it out from the bottom of the oven, empty it, and wash with warm, soapy water. Rinse and dry thoroughly before reinserting.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Avoid using harsh chemicals or abrasive sponges.
4. **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or polishes.
5. **Accessories:** Wash the baking tray, wire rack, and tray handle in warm, soapy water. Rinse and dry completely.
6. **Glass Door:** Clean the tempered glass door with a glass cleaner or a damp cloth.

Effortless Cleaning

With Removable Crumb Tray



**Service at
your Doorstep!**

Best-in-class service at your doorstep for
OTG 21L, ensuring complete peace of mind.



Image: A hand cleaning the removable crumb tray of the OTG, demonstrating the ease of cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your Wonderchef OTG 21L, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer dial to the desired cooking time.
Food is not cooking evenly.	Incorrect heat function selected; oven overloaded; improper rack position.	Ensure the correct heat function (top, bottom, or both) is selected for your recipe. Avoid overloading the oven. Adjust rack position for optimal heat distribution.
Smoke or burning smell during first use.	Residual manufacturing oils burning off.	This is normal for initial use. Operate the oven empty for 15-20 minutes at maximum temperature to burn off any residues. Ensure good ventilation.
Timer bell does not sound.	Timer dial not set correctly.	Ensure the timer dial is turned past the 10-minute mark and then back to the desired time to activate the bell mechanism.

If the problem persists after attempting these solutions, please contact Wonderchef customer support.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	OTG 21L
Capacity	21 Litres
Power Consumption	1400 W
Temperature Control	Up to 250°C
Timer Function	0-60 minutes with Auto-Shut Off and Ready Bell
Heating Elements	Stainless steel, selectable (top, bottom, both)
Door Type	Heat-resistant tempered glass
Interior Lighting	LED light
Dimensions (LxWxH)	49.5 x 35.6 x 33.3 Centimeters
Item Weight	5 kg 300 g
Country of Origin	India

8. WARRANTY AND SUPPORT

8.1 Product Warranty

The Wonderchef OTG 21L comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Terms and conditions apply. Please retain your purchase receipt as proof of purchase for warranty claims.

8.2 Customer Support

For any queries, assistance, or to register a warranty claim, please contact Wonderchef customer support:

- **Phone:** 18602660788
- **WhatsApp:** 7070595959