

AGARO 33184

AGARO Marvel 25 Litres Oven Toaster Griller User Manual

Model: 33184

1. INTRODUCTION

Thank you for choosing the AGARO Marvel 25 Litres Oven Toaster Griller. This appliance is designed to provide versatile cooking options including baking, roasting, grilling, and toasting. Please read this manual carefully before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

Your browser does not support the video tag.

Video: AGARO Marvel Oven Toaster Griller Product Overview. This video provides a general introduction to the features and capabilities of the AGARO Marvel Oven Toaster Griller.

2. PRODUCT FEATURES

- Roast, Bake, Grill, Toast, and more.
- Motorized rotisserie with forks for spit-roasting of meat or vegetables.
- Adjustable temperature from 100°C to 250°C.
- 5 Heating Modes: Top Heating, Bottom Heating, Top & Bottom Heating, Rotisserie with Bottom Heating, Rotisserie with Top & Bottom Heating.
- Heat resistant tempered glass window with illuminated chamber.
- Adjustable timer up to 60 Minutes with a ready bell.
- Power Consumption: 1600 Watts, Operating Voltage: 230V/50 Hz.



Image: The 5-in-1 capabilities of the AGARO Marvel Oven Toaster Griller, including baking, grilling, roasting, toasting, and rotisserie.

3. UNPACKING AND INITIAL SETUP

1. Carefully remove the oven toaster griller and all accessories from the packaging.
2. Place the appliance on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the unit.
3. Remove any protective films or stickers from the appliance.
4. Wash the baking tray, grill rack, rotisserie rod, and rotisserie handle with warm soapy water, rinse thoroughly, and dry completely before first use.
5. Wipe the interior and exterior of the oven with a soft, damp cloth.
6. Plug the power cord into a grounded electrical outlet.



Image: All accessories included with the AGARO Marvel Oven Toaster Griller, such as the bake pan, tray handle, barbecue grill rack, rotisserie rod, and rotisserie handle.

4. OPERATING INSTRUCTIONS

4.1 Controls Overview

The AGARO Marvel OTG features three precision knobs for easy control:

- **Top Knob:** Temperature control (100°C to 250°C).
- **Middle Knob:** Heat setting / Functions knob (5 heating modes).
- **Bottom Knob:** Timer (0 to 60 minutes).



Image: Detailed view of the three control knobs for temperature, heating modes, and timer on the AGARO Marvel OTG.

4.2 Preheating

Always preheat your OTG before placing food inside. Set the temperature to 180°C and the timer for 10-12 minutes. Preheating ensures even and faster cooking.

4.3 Using Accessories

Depending on your cooking needs, you can use the baking tray, grill rack, or rotisserie rod.

- **Baking Tray:** Ideal for cookies, roasting vegetables, or baking pizzas.
- **Grill Rack:** Use for grilling and toasting. If using a separate utensil, place it on the wire rack for even heat distribution.
- **Rotisserie Rod with Fork:** For all-round roasting of whole meat or vegetables.



Image: The AGARO Marvel OTG in operation, demonstrating even cooking results with a baked loaf of bread.

4.4 Heating Modes

Select the appropriate heating mode using the middle knob:

1. **Top Heating:** Activates the top heating elements for focused upper heating.
2. **Bottom Heating:** Activates the bottom heating elements for heating from the base.
3. **Top & Bottom Heating:** Activates both top and bottom elements for even heat distribution and cooking.
4. **Rotisserie with Bottom Heating:** Combines bottom heating with the rotisserie function for juicy, even roasting.
5. **Rotisserie with Top & Bottom Heating:** Activates all heating elements with the rotisserie for a perfect all-round roast.

4.5 Utensil Compatibility

Always use OTG-safe utensils. Recommended materials include borosilicate glass, metal, and silicone. Avoid plastic or ceramic utensils.



Image: Guidelines for suitable and unsuitable utensils for use with the AGARO Marvel OTG.

Your browser does not support the video tag.

Video: AGARO Marvel 25L OTG How to Use. This video demonstrates the proper usage of the oven toaster griller, including accessory placement and control settings.

5. MAINTENANCE AND CLEANING

1. Always unplug the appliance and allow it to cool down completely before cleaning.
2. For easy cleanup, line the base of the OTG with aluminum foil before cooking, ensuring it does not cover the heating rods. Remove and discard after use.
3. Gently wipe the inside of the oven with a soft, dry cloth. Do not use a wet cloth, as it may cause rusting.
4. Wash the baking tray, grill rack, and rotisserie rod with dish soap and a soft sponge. Avoid hard scrubbers.
5. Pat dry all washed accessories with a soft cloth before storing or reinserting into the oven.

Your browser does not support the video tag.

Video: AGARO Marvel 25L OTG How to Clean. This video provides step-by-step instructions for cleaning and maintaining your oven toaster griller.

6. TROUBLESHOOTING

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working outlet. Check the timer setting; the oven will not operate if the timer is set to '0'.
- **Uneven cooking:** Ensure the oven is preheated properly. Use the correct heating mode for your dish. For baking, ensure the utensil is placed on the wire rack for even heat distribution.
- **Food not cooking thoroughly:** Verify that the temperature and timer settings are appropriate for the recipe. Ensure the oven door is fully closed.
- **Excessive smoke:** This may indicate food spills or grease buildup. Clean the interior thoroughly after the oven has cooled. Avoid using excessive oil or fat.
- **Rotisserie not rotating:** Ensure the rotisserie rod is correctly inserted into the motor drive and the rotisserie heating mode is selected.

If you encounter any issues not listed here, please contact customer support.

Feature	Specification
Brand	AGARO
Model Name	Marvel Series
Item Model Number	33184
Colour	Black
Capacity	25 Litres
Power Consumption	1600 Watts
Operating Voltage	230V/50 Hz
Product Dimensions	28.6D x 44W x 21.1H Centimeters
Special Feature	Temperature Control, Timer, Motorized Rotisserie
Control Type	Knob
Door Style	Dropdown Door
Finish Type	Alloy Steel, Tempered Glass
Door Material Type	Tempered Glass
Power Source	Corded Electric
Temperature Range	100-250 Degrees Celsius
Number of Shelves	3
Item Weight	6 kg 720 g
Country of Origin	China

AGARO

MARVEL OTG

9 litre



25 litre



48 litre



Features

Outer Dimension	13.1 x 8 x 8.4 inch	18 x 12 x 11 inch	22.5 x 14 x 13.5 inch
Wattage	800 W	1600 W	2000 W
Operating Voltage	230 volt / 50 hz	230 volt / 50 hz	230 volt / 50 hz
Temperature	100° to 250° C	100° to 250° C	100° to 250° C
Timer	0-30 min	0-60 min	0-120 min
Convection fan	✗	✗	✓
Rotisserie	✗	✓	✓
Inner light	✗	✓	✓
Ready bell	✓	✓	✓
Auto shut off	✓	✓	✓

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This AGARO Marvel Oven Toaster Griller comes with a **1 Year Manufacturer's Warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

8.2 Extended Warranty Options

Extended warranty plans are available for purchase:

- 1 Year Extended Warranty Plan by Onsitego
- 2 Year Extended Warranty Plan by Onsitego

For details on extended warranty, please refer to the product page or contact Onsitego directly.

8.3 Customer Support

For any product-related queries, service requests, or technical assistance, please contact AGARO customer support. Refer to the contact information provided in your product packaging or visit the official AGARO website.

