

Elica 594 CT DT VETRO 1J

Elica Vetro Glass Top 4 Burner Gas Stove User Manual

Model: 594 CT DT VETRO 1J

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

General Safety Precautions

- Ensure proper ventilation in the kitchen during operation.
- Do not leave the appliance unattended while cooking.
- Keep children away from the gas stove during operation.
- Use only LPG or PNG as per the appliance's configuration.
- In case of a gas leak, immediately turn off the gas supply, open windows, and do not operate electrical switches.

Glass Top Safety Tips



Image: Safety tips for using a glass-top gas stove. This image illustrates five key safety guidelines: 1. Do not place hot vessels directly on the glass surface. 2. Avoid abrasive cleaning pads; use a soft cloth. 3. Do not use oversized pans; use correct pan support trivet. 4. Do not put water or wet cloth on the hot glass surface immediately after cooking; wait for it to cool. 5. Do not use Tandoor Cooker/Baati as it may cover the burner trivet entirely and touch the glass.

- **Do not put hot vessels directly on the glass surface:** Always use pan supports.
- **Do not use abrasive cleaning pads:** Use a soft cloth to wipe the glass surface to prevent scratches.
- **Avoid using oversized pans:** Use the correct pan support trivet for each burner.
- **Do not put water or wet cloth on the hot glass surface immediately after cooking:** Wait for the glass to cool down to prevent thermal shock.
- **Do not use Tandoor Cooker/Baati:** These items may cover the burner trivet entirely and touch the glass, causing damage.

PRODUCT OVERVIEW

The Elica Vetro Glass Top Gas Stove is designed for efficient and safe cooking. It features a premium glass top, durable brass burners, and double drip trays for easy cleaning.



Image: Elica Vetro Glass Top 4 Burner Gas Stove, showing the black glass top, four brass burners, and control knobs.

Key Features

- **Premium Finish Glass Top:** Offers a rust-impervious surface and enduring performance.
- **4 Distinct Size Burners:** Includes 2 small, 1 medium, and 1 jumbo burner for varied cooking needs.
- **Double Drip Trays:** Designed to absorb spills, making cleanup easy.

- **Long-Lasting Euro Coated Pan Supports:** Ensures stability for pots and pans.
- **Heavy Duty Brass Burners:** Provides smooth and sharp flames.
- **High-Quality Knobs:** Smoothly operated for precise flame control.



Image: Overview of Elica Gas Stove features, highlighting Glass Top & Stainless Steel Finish, High-Quality Knobs, Double Drip Tray, Stainless Steel Support Plate, Heavy Brass Burners, and Euro Coated Grid.

SETUP AND INSTALLATION

This appliance requires professional installation to ensure safety and proper functioning.

Pre-Installation Checks

- Verify that the gas type (LPG or PNG) matches the appliance's configuration.
- Ensure adequate ventilation in the installation area.
- Check for any damage to the appliance before installation.

Installation Steps (Professional Recommended)

- Place the gas stove on a stable, level surface.
- Connect the gas inlet to the gas supply line using a certified hose and regulator.
- Ensure all connections are tight and leak-free.
- Position the pan supports correctly over each burner.

Note: The warranty remains valid and unaffected if the product is self-installed, but professional installation is highly recommended for safety.

OPERATING INSTRUCTIONS

Lighting a Burner

1. Ensure the gas supply is open.
2. Place your cooking vessel on the pan support over the desired burner.
3. Push down and turn the corresponding knob counter-clockwise to the "Ignite" position.
4. Hold the knob in this position until the flame ignites.
5. Once lit, adjust the flame to the desired intensity by rotating the knob.

Adjusting Flame

Rotate the knob to increase or decrease the flame size. Turn clockwise to reduce the flame and counter-clockwise to increase it.

Turning Off a Burner

Turn the knob clockwise until it clicks into the "Off" position. Ensure the flame is completely extinguished.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your gas stove and ensure safe operation.

Daily Cleaning

- Allow the stove to cool completely before cleaning.
- Wipe the glass top with a soft cloth and mild detergent. Avoid abrasive cleaners.
- Remove the double drip trays and clean them with soap and water.
- Clean the burner caps and pan supports.



Image: Close-up of the Elica Gas Stove's double drip tray system, showing how the removable tray and pan support fit over the fixed tray for easy cleaning.

Burner Maintenance

- Ensure burners are dry before placing them back on the stove. Moisture can affect ignition.
- Periodically check burner holes for blockages and clean with a fine wire or brush if necessary.

Pan Supports

- The Euro coated pan supports are designed for durability. Clean them regularly to prevent grease buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply; Burner cap/base wet or clogged; Ignition pin dirty	Check gas supply; Dry/clean burner parts; Clean ignition pin
Irregular flame	Burner holes clogged; Burner not seated correctly	Clean burner holes; Re-seat burner properly
Gas smell	Gas leak	Immediately turn off gas supply, ventilate area, contact service

Problem	Possible Cause	Solution
Knobs are stiff	Grease buildup or internal issue	Clean around knobs; If issue persists, contact customer care

SPECIFICATIONS

Model Number: 594 CT DT VETRO 1J

Brand: Elica

Color: Black

Material: Brass (Burners), Glass (Top)

Number of Burners: 4 (2 Small, 1 Medium, 1 Jumbo)

Controls Type: Knob

Item Dimensions (D x W x H): 50D x 58.5W x 13.4H Centimeters

Item Weight: 9.4 Kilograms

Power Source Type: Gas

Included Components: Burner

Country of Origin: India

WARRANTY INFORMATION

The Elica Vetro Glass Top Gas Stove comes with the following warranty:

- **7 Years Warranty on Glass** (Metallic/coloured cooktops Glass is not covered under warranty for discoloration of glass).
- **2 Years Warranty on Burners, Mixing Tubes, Micro Switch, Spark Plug, Generator, Valves.**
- **2 Years Comprehensive Warranty** from the date of purchase.

For warranty claims, please contact Elica Customer Care.

CUSTOMER SUPPORT

For any queries, service requests, or assistance, please contact Elica Customer Care.



that additional installation charges are up to ₹236 and that warranty remains valid if self-installed.

Toll-Free: [1800-233-0007](tel:1800-233-0007)

Other Numbers: [7447440983](tel:7447440983) / [7447440984](tel:7447440984) / [7447440985](tel:7447440985)

Additional installation charges may apply (up to ₹236). The warranty remains valid even if self-installed.