

Elica 694 CT DT VETRO

Elica Vetro Glass Top 4 Burner Gas Stove User Manual

Model: 694 CT DT VETRO

1. INTRODUCTION

Thank you for choosing the Elica Vetro Glass Top 4 Burner Gas Stove. This manual provides essential information for the safe and efficient use, installation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Ensure proper ventilation in the kitchen area during operation.
- Do not leave the gas stove unattended while cooking.
- Keep flammable materials away from the appliance.
- Always use appropriate cookware for the burner size.
- In case of a gas leak, immediately turn off the gas supply, open windows, and do not operate any electrical switches. Contact a qualified technician.
- Keep children away from the gas stove during operation.

3. PRODUCT OVERVIEW

The Elica Vetro Glass Top 4 Burner Gas Stove features a premium finish glass top, four distinct size brass burners, and double drip trays for easy cleaning. It is designed for manual operation with smoothly operated knobs.



Image 3.1: Overall view of the Elica Vetro 4 Burner Gas Stove, showcasing its robust design and four burners.

Key Components:

- **Glass Top:** Premium finish toughened glass for durability and aesthetics.
- **Burners:** Four heavy-duty brass burners (2 Small, 1 Medium, 1 Jumbo) for varied cooking needs.
- **Knobs:** Ergonomically designed control knobs for flame adjustment.
- **Pan Supports:** Long-lasting Euro coated pan supports to keep cookware stable.
- **Drip Trays:** Double drip trays for easy cleaning of spills.
- **Stainless Steel Finish:** Durable stainless steel body for easy maintenance.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your gas stove. It is highly recommended to have the appliance installed by a qualified technician.

4.1 Unpacking and Inspection

- Carefully remove the gas stove from its packaging.
- Inspect the appliance for any signs of damage during transit. Do not install if damaged.
- Ensure all components listed in the packaging are present. The primary included component is the burner set.

4.2 Placement

Place the gas stove on a stable, flat, and heat-resistant surface. Ensure adequate clearance from walls and overhead cabinets for ventilation and safety.

- **Dimensions (D x W x H):** 54.5D x 69W x 13H Centimeters.

4.3 Gas Connection

Connect the gas stove to your gas supply (LPG or PNG) using a certified gas hose and regulator. If converting from LPG to PNG or vice-versa, this must be done by an authorized service technician to ensure safety and warranty validity. Additional charges may apply for conversion services.

5. OPERATING INSTRUCTIONS

Your Elica gas stove is designed for manual operation, providing precise control over cooking temperatures.



Image 5.1: High-quality control knobs for adjusting flame intensity.

5.1 Lighting a Burner

1. Place your cookware on the pan support above the desired burner.
2. Push and turn the corresponding control knob counter-clockwise to the 'Ignite' position.
3. Immediately apply a flame from a lighter or matchstick to the burner.
4. Once the flame ignites, release the knob and adjust it to your desired flame intensity (low to high).
5. If the burner does not light within a few seconds, turn the knob off, wait for a few moments for the gas to disperse, and then repeat the process.

5.2 Turning Off a Burner

To turn off a burner, simply turn the control knob clockwise to the 'Off' position until you hear a click and the flame extinguishes.

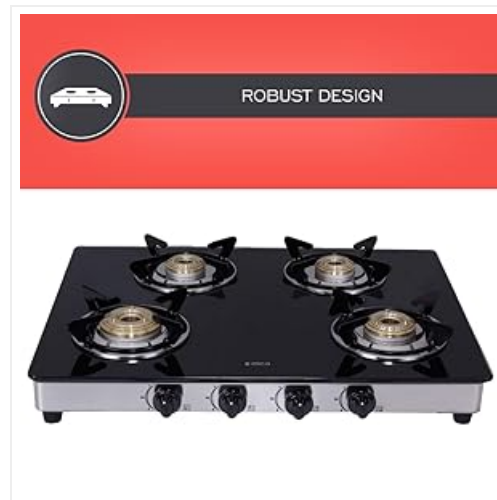


Image 5.2: Detail of the heavy-duty brass burner, designed for efficient heat distribution.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Elica gas stove.

6.1 Daily Cleaning

- Allow the stove to cool completely before cleaning.
- Wipe the glass top with a soft cloth and a mild cleaning solution. Avoid abrasive cleaners that can scratch the surface.
- Clean the stainless steel body with a damp cloth and dry thoroughly.

6.2 Cleaning Drip Trays and Burners



Image 6.1: Exploded view showing the removable double drip tray and pan support for easy cleaning.

- The double drip trays are designed to absorb spills. Lift the removable tray, clean it with soap and water, and wipe dry before placing it back.
- Remove the brass burners and pan supports. Wash them with warm soapy water and a non-abrasive brush. Ensure they are completely dry before reassembling to prevent rust and ensure proper flame.
- Periodically check the burner holes for any blockages and clean them gently with a thin wire if necessary.

6.3 Pan Supports

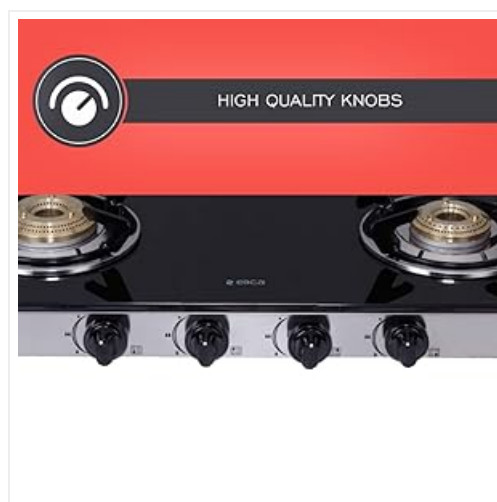


Image 6.2: Stainless steel support plate providing stability for the burners and pan supports.

- The Euro coated pan supports are designed for stability. Clean them regularly to prevent food buildup.
- Ensure pan supports are correctly seated after cleaning to prevent wobbling during cooking.

7. TROUBLESHOOTING

If you encounter any issues with your gas stove, refer to the following troubleshooting guide before contacting customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Burner does not light	No gas supply, clogged burner holes, wet burner components.	Check gas cylinder/supply. Clean burner holes. Ensure burner components are dry and correctly assembled.
Irregular flame	Clogged burner holes, improper burner placement.	Clean burner holes. Ensure burners are seated correctly.
Knobs are stiff/tight	New appliance, minor manufacturing tolerance.	Knobs may feel tight initially and typically loosen with regular use. If persistent, contact customer service.
Pan support shows rust	Exposure to moisture, acidic spills, improper drying.	Clean pan supports regularly and dry them thoroughly after washing. Avoid leaving acidic substances on them.
Burners turn black	Incomplete combustion, food residue.	Ensure burners are clean and dry. Check for proper gas-air mixture (may require technician).

If the problem persists after attempting these solutions, please contact Elica customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	694 CT DT VETRO
Brand	Elica
Colour	Black
Material	Glass
Heating Elements	4 (2 Small, 1 Medium, 1 Jumbo)
Controls Type	Knob
Power Source Type	Gas
Item Dimensions (D x W x H)	54.5D x 69W x 13H Centimeters
Item Weight	10 Kilograms
Country of Origin	India

9. WARRANTY INFORMATION

Elica provides the following warranty for your gas stove:

- **2 Years Warranty:** From the date of purchase on Burner, Mixing Tubes, Micro Switch, Spark Plug, Generator, and Valves.
- **7 Years Warranty:** From the date of purchase on the Glass Top. Please note that metallic/coloured cooktops' glass is not covered under warranty for discoloration.

The warranty remains valid and unaffected even if the product is self-installed. However, for gas

connection and conversion, professional installation is recommended for safety.

10. CUSTOMER SUPPORT

For any queries, service requests, or technical assistance, please contact Elica customer care:

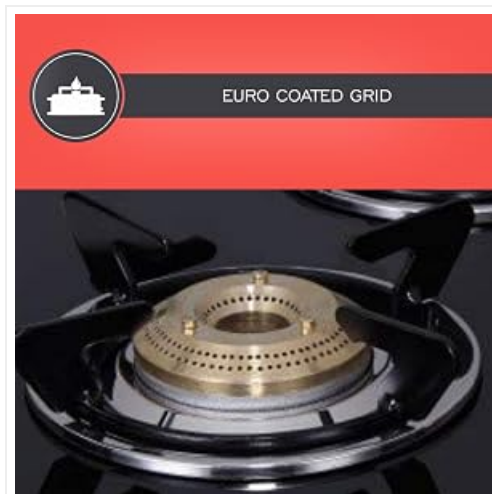


Image 10.1: Elica Customer Care contact details for support.

- **Toll-Free Number:** 18002330007
- **Helpline Numbers:** 7447440983, 7447440984, 7447440985
- **Email:** info@elica.in
- **Manufacturer Address:** Elica Pb India Pvt Ltd, 37/1/1, Kondhwa Pisoli Road, Pisoli, Pune, Maharashtra 411060, India.

Please have your model number (694 CT DT VETRO) and purchase details ready when contacting customer support.