

[Manuals.plus](#) /

› [Elica](#) /

› Elica 773 CT DT Vetro 3 Burner Gas Stove User Manual

Elica 773 CT DT VETRO

Elica 773 CT DT Vetro 3 Burner Gas Stove User Manual

Model: 773 CT DT VETRO | Brand: Elica

INTRODUCTION

Thank you for choosing the Elica 773 CT DT Vetro 3 Burner Gas Stove. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new gas stove. Please read these instructions carefully before use and retain them for future reference.



Elegant Glass Cooktop for Everyday Cooking



773 CT DT VETRO



77 cm Wide Design



Brass Burners



3 Burner Layout



Double Drip Trays

Image: Elica 773 CT DT Vetro 3 Burner Gas Stove, showcasing its elegant glass cooktop design.

SAFETY INFORMATION

- Ensure proper ventilation in the kitchen during operation.
- Do not leave the gas stove unattended while cooking.
- Keep flammable materials away from the appliance.
- Always use appropriate cookware sizes for each burner.
- In case of a gas leak, immediately turn off the gas supply, open windows, and do not operate electrical switches or light matches. Contact a qualified technician.
- Keep children and pets away from the gas stove during use.
- Ensure the gas stove is installed by a qualified technician.

PRODUCT OVERVIEW (COMPONENTS)

Familiarize yourself with the main components of your Elica gas stove:

- **Toughened Glass Top:** Durable and easy-to-clean cooking surface.
- **Brass Burners:** Three heavy-duty brass burners (Jumbo, Medium, Small) for varied cooking needs.
- **Pan Supports:** Euro-coated pan supports provide stability for cookware.
- **Control Knobs:** For adjusting flame intensity.
- **Double Drip Tray:** Removable trays beneath the burners to collect spills and simplify cleaning.



Image: Detailed view of the double drip tray system, showing removable and fixed trays, burner, and pan support.



Heavy-Duty Brass Burners



**Durable
Brass Build**



**Steady Flame
Output**



**Built for
Daily Cooking**



Image: Close-up of a heavy-duty brass burner, highlighting its durable construction and steady flame output.



3 Practical Burner Sizes

Jumbo Burner

For high-flame
cooking and
larger vessels.

Small Burner

For simmering,
reheating, and
smaller vessels.

Medium Burner

For everyday
cooking.



Image: Illustration of the three practical burner sizes: Jumbo for high-flame cooking, Small for simmering, and Medium for everyday cooking.

SETUP AND INSTALLATION

The Elica 773 CT DT Vetro gas stove is designed for use with LPG (Liquefied Petroleum Gas). It can be converted for PNG (Piped Natural Gas) use during installation.

1. **Professional Installation:** It is mandatory to have the gas stove installed by a qualified and authorized Elica service technician. Improper installation can lead to safety hazards and void the warranty.
2. **Ventilation:** Ensure the installation area has adequate ventilation.
3. **Gas Connection:** The technician will connect the gas stove to your LPG cylinder or PNG supply line using appropriate hoses and regulators.
4. **Leak Check:** After connection, the technician will perform a leak check to ensure all connections are secure and gas-tight.
5. **Burner Assembly:** Ensure all burner components (burner caps, rings, pan supports) are correctly placed before first use.



Spacious 77 cm Cooktop Design



Image: Dimensions of the Elica 773 CT DT Vetro gas stove, showing its 77 cm wide layout for comfortable cooking.

OPERATING INSTRUCTIONS

- Before Use:** Ensure all burner components (burner caps, rings) and pan supports are correctly seated.
- Lighting a Burner:**
 - Turn the control knob of the desired burner to the 'ON' position (usually indicated by a flame symbol).
 - Immediately bring a lit matchstick or gas lighter close to the burner.
 - Once the flame ignites, adjust the knob to achieve the desired flame intensity (high, medium, or low).
- Adjusting Flame:** Rotate the control knob between the 'HIGH' and 'LOW' settings to adjust the flame size.
- Turning Off:** Turn the control knob fully to the 'OFF' position. Ensure the flame is extinguished.
- Using Different Burners:** The stove features Jumbo, Medium, and Small burners. Use the Jumbo burner for larger vessels and high-heat cooking, the Medium burner for general cooking, and the Small burner for simmering or smaller utensils.



Stable Support. Smooth Flame Control.



**Euro-Coated
Pan Supports**



**Stable Vessel
Placement**



**Smooth Knob
Operation**

Image: Demonstrates smooth knob operation and stable vessel placement on the Euro-coated pan supports.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient performance of your gas stove.

- **Glass Top:** Clean the toughened glass top with a soft cloth and mild detergent after it has cooled down. Avoid abrasive cleaners or harsh scrubbing pads to prevent scratches.
- **Burners and Caps:** Remove the burner caps and rings. Clean them with warm soapy water. Ensure they are completely dry before placing them back on the stove. Clogged burner holes can affect flame quality.
- **Pan Supports:** The Euro-coated pan supports can be washed with soap and water. Dry them thoroughly to prevent rust.
- **Double Drip Tray:** The removable drip trays can be easily lifted and cleaned to remove food spills and debris. This helps maintain hygiene and prevents accumulation around the burners.
- **Control Knobs:** Wipe the control knobs with a damp cloth. Do not immerse them in water.
- **General Cleaning:** Wipe the body of the stove with a damp cloth.



Strong Toughened Glass. Premium Look.



Premium
Black Finish



Heat-Resistant
Surface



Easy to Wipe
Clean

Image: Illustrates the ease of cleaning the premium black toughened glass top, which is heat-resistant and easy to wipe clean.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Burner not lighting	No gas supply, clogged burner holes, wet burner components.	Check gas cylinder/supply. Clean burner holes. Ensure burner caps and rings are dry and correctly placed.
Uneven flame	Clogged burner holes, improperly seated burner cap.	Clean burner holes. Re-seat the burner cap correctly.
Gas smell	Gas leak.	Immediately turn off gas supply. Open windows. Do not operate electrical switches. Contact a qualified technician.
Knobs are stiff	Accumulation of dirt or grease.	Clean around the knob area. If problem persists, contact service.

If the problem persists after attempting these solutions, please contact Elica customer support.

SPECIFICATIONS

- **Model Number:** 773 CT DT VETRO
- **Brand:** Elica
- **Number of Burners:** 3 (1 Jumbo, 1 Medium, 1 Small)
- **Burner Material:** Heavy-Duty Brass
- **Top Material:** Toughened Glass
- **Color:** Black
- **Pan Support:** Euro-Coated
- **Drip Tray:** Double Drip Tray
- **Controls:** Knob
- **Dimensions (D x W x H):** 47D x 77W x 13H Centimeters
- **Item Weight:** 10 Kilograms
- **Power Source:** Gas (LPG & PNG Compatible)
- **Country of Origin:** India

WARRANTY AND SUPPORT

Elica provides comprehensive support for your gas stove:

- **Product Support:** 2-year warranty on the product.
- **Glass Warranty:** 7-year warranty on the toughened glass top.
- **Installation:** Professional installation is recommended to ensure warranty validity.
- **Contact Information:** For service requests or inquiries, please refer to the contact details provided in your purchase documentation or visit the official Elica website.



Built for Long-Term Confidence



**2-Year Product
Support**



**7-Year Glass
Support**



Elica Quality



Image: Highlights the 2-year product support and 7-year glass support provided by Elica.