

KRISPY 4 SLICE (SS) POP-UP TOASTER

BOROSIL®

Performs Beautifully



USER MANUAL

BTO1500SS22

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of **Borosil Krispy 4 Slice (SS) Pop-Up Toaster !**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

1. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
2. Do not touch the hot surface. Use only handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or in any other liquid.
4. Close supervision is necessary when it is used by or near children.
5. Unplug unit from outlet when not in use and before cleaning.
6. Do not let the cord hang over edge of table or counter, or touch any hot surface.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. Please call Borosil Customer Care : **1800 120 8499, 1800 224 550**
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. Do not use the appliance for any other use besides its intended use.
10. Oversized food, metal foil packages or utensils must not be inserted the toaster as they may cause fire or electric shock.
11. Since bread may burn, do not use toasters near or below curtains and other combustible materials.
12. Let the toaster cool completely before putting away.
13. Do not attempt to dislodge food while the toaster is plugged in. Unplug the toaster and allow to cool completely before carefully removing obstruction. Do not use a knife or similar sharp tool as these may cause damage to heating elements.
14. Do not clean with metal scouring pads, since the pad can break and pieces of it can touch electrical parts, involving a risk of electrical shock.
15. This toaster is intended for household use **ONLY**; it is not for commercial or industrial use.
16. Do not operate while unattended. Unplug after each use.
17. Extreme caution must be used when moving an appliance containing hot food, frosting or juicy filling.
18. To disconnect the toaster from electrical outlet, make sure Sliding lever is in the up position, then remove plug from electrical outlet.

19. Any service of the toaster should be performed by an Borosil Authorized Service Centre.

WARNING:

- Immediately unplug Toaster if fire or smoke is observed.
- Please read and save this Instruction Manual for use.

CONSUMER SAFETY INFORMATION


GROUNDING INSTRUCTIONS : This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING : Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD : A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the bottom of the unit.

DESCRIPTION OF THE PRODUCT

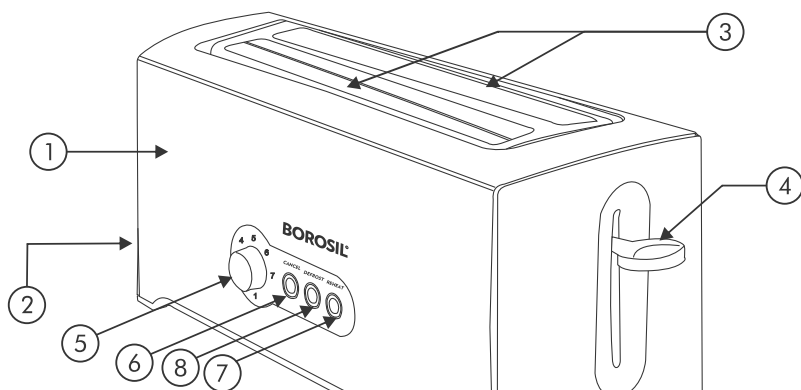

1. Body
2. Slide-out crumb tray
3. Bread slots
4. Sliding lever
5. Temperature Control Knob
6. Cancel button
7. Reheat function button
8. Defrost function button

TECHNICAL DATA :

Specifications : 1500W, 230V ~ 50Hz

TOASTING BREAD



1. Put the appliance in a safe place. Plug the power in to the outlet.



2. Insert regular bread slice into the bread slots. Four slices can be inserted at the same time.



3. Select the desired browning setting. The temperature sensor and electronic timer provide even toasting results. Select a low setting (1-2) for lightly toasted bread and a high setting (5-7) for a dark browning.



4. Push the lever knob down to turn the appliance "ON". The lever knob will only stay down if the appliance has been plugged into electrical outlet.
5. When the toast is ready, it pops up automatically. Then the toaster turns 'OFF' the heating elements.



6. Defrost Button: If the bread has been taken out from refrigerator, set the Temperature knob to your desired setting. Press the sliding lever down vertically until it is positioned in place, then press 'Defrost button'. The Defrost indicator will be illuminated. In this mode it will be toasted to your desired color.



7. Reheat button: If you want to reheat the cold toasted bread, press the sliding lever down vertically until it is positioned in place, then press "Reheat" button. The Reheat indicator will be illuminated. In this mode, toasting time is fixed, when the fixed time is completed the sliding lever will automatically Pop-Up and end the reheating process.



8. Cancel button: During the toasting process, you can observe the toasting color. If it is satisfactory, you can interrupt the toasting process by pressing the "Cancel" button at any time.

CAUTION:


1. Remove all protective wrapping prior to placing in toaster.
2. If toaster starts to smoke, press "Cancel" button to stop toasting immediately.
3. Avoid toasting the food with ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating element when removing bread.
5. The bread slot should only be used for toasting regular bread slices.

CLEANING AND MAINTENANCE



1. Disconnect the power supply before cleaning. Unplug cord from electrical outlet before cleaning.
2. Wipe the outside with a soft dry cloth after toaster cools down; never use metal polish.
3. Pull out the crumb tray at the bottom of the toaster and empty it. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. You can store the cord by looping it around the brackets on the base of the toaster.

ENVIRONMENT FRIENDLY DISPOSAL

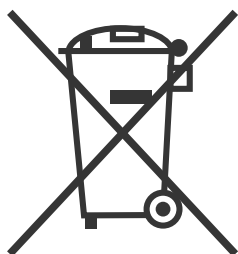

You can help protect the environment !
Please remember to respect the local regulations : hand in the non-working electrical equipments to an appropriate waste disposal center.

WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 120 8499, 1800 224 550** or e-mail us at **customercare@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case :

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under this warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE : **BTO1500SS22** SERIAL NO : _____

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

BOROSIL[®]

CORPORATE OFFICE :

BOROSIL LIMITED

1101, Crescenzo, G-Block, Opp. MCA Club,
Bandra-Kurla Complex, Bandra (E),
Mumbai - 400 051. Maharashtra.
Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO: U36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306,
L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400
Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place
(Madras Hotel Block),
New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136
Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor,
Brahadammal Road, Nungambakkam,
Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013
Fax: 044 2822 6014
email: borosilms@ethnet /
chennai@borosil.com

KOLKATA:

Dabriwala House, 4th Floor,
10 Middleton Row,
Kolkata - 700 071.
Tel.: 033 2229 9166 / 2249 5574
Fax: 033 2226 2045
email: kolkata@borosil.com

Now shop online for India's most trusted brand at www.myborosil.com

Follow us on     Borosil And You

**FOR SERVICE QUERY CALL UPON
CUSTOMER CARE**



**1800 120 8499
1800 224 550**

email: customer@borosil.com