

Manuals.plus / > Eureka Forbes / > Eureka Forbes ZeroBend Z15 Cordless Vacuum Cleaner Instruction Manual

Eureka Forbes ZeroBend Z15

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

Eureka Forbes ZeroBend Z15 Cordless Vacuum Cleaner

Instruction Manual

Advertisements




1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Eureka Forbes ZeroBend Z15 Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

The Eureka Forbes ZeroBend Z15 is designed for dry cleaning various floor types, offering powerful suction and innovative features like ZeroBend Technology and an Auto Hair Detangler for enhanced cleaning performance.

Advertisements

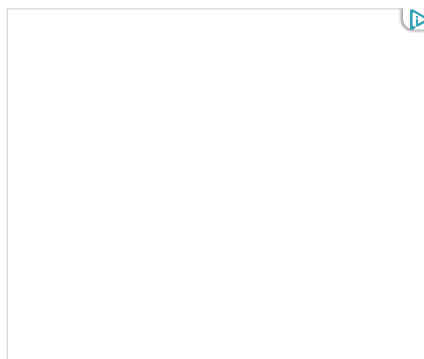

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors. Put away after use to prevent accidents.
- This appliance is for household use only.

Advertisements



3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your Eureka Forbes ZeroBend Z15 Cordless Vacuum Cleaner.



Figure 3.1: Full view of the Eureka Forbes ZeroBend Z15 Cordless Vacuum Cleaner, showcasing its upright design and red/dark grey color scheme.

Advertisements



Figure 3.2: Various cleaning accessories included with the vacuum cleaner, such as the Motorised 3-in-1 floor brush, Upholstery and Mattress tool, Crevice Nozzle, and Combination tool.



- **Main Unit:** Contains the motor, dustbin, and control panel.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments. Features ZeroBend Technology.
- **Motorised 3-in-1 Floor Brush:** Designed for various floor types (tile, carpet, wood) with Auto Hair Detangler.
- **Upholstery and Mattress Tool:** For cleaning fabric surfaces.
- **Combination Tool:** Versatile tool for cleaning curtains, keyboards, ceilings, and other surfaces.
- **Crevice Nozzle:** For narrow areas, corners, windows, and car interiors.
- **Wall Docking Station:** For convenient storage and charging.
- **Charger:** Power adapter for charging the vacuum.
- **Filters:** Cyclonic Filter, Steel Mesh Filter, Washable HEPA Filter, Foam Filter.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner before first use.

Advertisements



1. **Unpack Components:** Carefully remove all components from the packaging. Verify that all listed components are present.
2. **Attach Extension Wand:** Insert the extension wand into the main unit until it clicks securely into place.
3. **Attach Floor Brush:** Connect the motorised 3-in-1 floor brush to the other end of the extension wand, ensuring it clicks into place.
4. **Initial Charging:** Before first use, fully charge the vacuum cleaner. Connect the charger to the main unit and plug it into a power outlet. The LED display will indicate charging status. A full charge takes approximately 4 hours.
5. **Install Wall Docking Station (Optional):** Choose a suitable location near a power outlet. Secure the docking station to the wall using appropriate screws and anchors (not included, typically). This allows for convenient storage and charging.

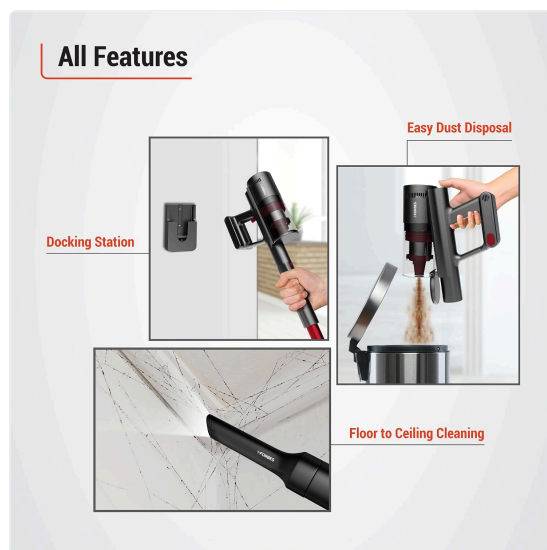


Figure 4.1: Illustration showing the wall docking station for storage and charging, and the easy dust disposal mechanism.

5. OPERATING INSTRUCTIONS

Learn how to effectively use your ZeroBend Z15 for various cleaning tasks.

Advertisements



5.1 Powering On/Off and Suction Modes

1. **Power On:** Press the power button on the main unit to turn on the vacuum cleaner.
2. **Adjust Suction Mode:** The vacuum features 3 power levels: Eco, Standard, and Turbo. Press the mode selection button to cycle through these modes.
 - **Eco Mode:** Provides up to 40 minutes of run-time, suitable for light cleaning and extended usage.
 - **Standard Mode:** Balanced power for everyday cleaning.
 - **Turbo Mode:** Maximum suction power (150 AWS) for deep cleaning and stubborn dirt.
3. **Power Off:** Press the power button again to turn off the vacuum cleaner.



Figure 5.1: The LED display showing battery charge level and selected suction mode (Eco, Standard, Turbo).

Advertisements

5.2 Using ZeroBend Technology

The ZeroBend Technology allows the extension wand to bend 90 degrees on either side, enabling easy cleaning under furniture and in tight spaces without bending down.

- To activate the bend, gently push the handle downwards while the floor brush is on the ground. The joint in the extension wand will flex.
- Maneuver the vacuum under low-lying objects like sofas and beds.
- The flexible design ensures thorough cleaning in hard-to-reach areas.



Figure 5.2: A user demonstrating the ZeroBend Technology to clean under a sofa without needing to bend or kneel.

Figure 5.3: The vacuum cleaner utilizing ZeroBend Technology to clean a carpeted area, showing its flexibility.

Advertisements

5.3 Using Attachments

The ZeroBend Z15 comes with various attachments for specialized cleaning tasks. To change attachments, press the release button on the main unit or extension wand and swap the desired tool.

- **Motorised 3-in-1 Floor Brush:** Use for general floor cleaning on tiles, marble, wooden floors, and carpets. The Auto Hair Detangler feature helps prevent hair tangles.

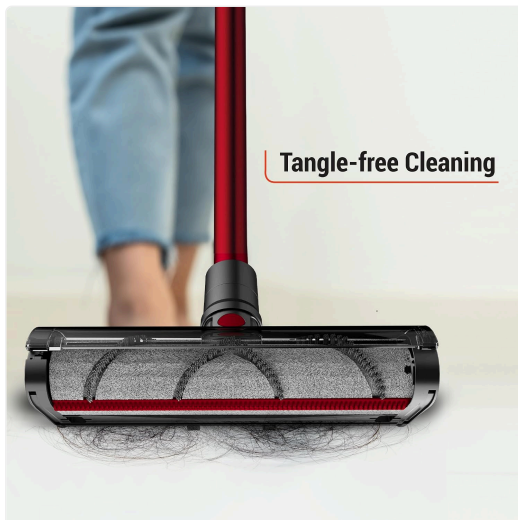


Figure 5.4: Close-up of the motorised floor brush demonstrating the Auto Hair Detangler feature, which cuts long hair to prevent tangling.

Advertisements

- **Upholstery and Mattress Tool:** Ideal for cleaning sofas, chairs, mattresses, and other fabric surfaces.
- **Combination Tool:** Use the brush for dusting delicate surfaces like keyboards or shelves, and the nozzle for general vacuuming.
- **Crevice Nozzle:** Perfect for reaching tight corners, narrow gaps, and edges, such as between sofa cushions or car seats.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

Empty the dustbin regularly, ideally after each use, to maintain strong suction.

Advertisements



1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button on the main unit.
3. Press the button to detach the dustbin.
4. Position the dustbin over a trash can and open the bottom flap to release the collected debris.
5. Close the flap and reattach the dustbin to the main unit until it clicks into place.

6.2 Cleaning Filters

The ZeroBend Z15 features a 4-stage cyclonic filtration system. Regular cleaning of filters is crucial for performance.

- **Accessing Filters:** Twist and pull to remove the filter assembly from the dustbin.
- **Cyclonic Filter & Steel Mesh Filter:** Tap these filters gently over a trash can to remove loose dust. If heavily soiled, wipe with a dry cloth.
- **Washable HEPA Filter & Foam Filter:** These filters can be washed with cold water.
 - Rinse under running water until the water runs clear.
 - Do not use detergents or hot water.
 - Allow filters to air dry completely for at least 24 hours before reinserting them into the vacuum cleaner. Do not use a dryer or direct heat.

Advertisements



- **Reassembly:** Once all filters are completely dry, reassemble them in the correct order and place them back into the dustbin.

Note: The frequency of filter cleaning depends on usage. For optimal performance, clean filters monthly or more often if used frequently or in dusty environments.



Figure 6.1: Internal view of the dustbin showing the cyclonic technology and the multi-stage filtration system at work.

Advertisements



6.3 Cleaning the Motorised Floor Brush

Periodically check the brush roll for tangled hair or debris, even with the auto hair detangler feature.

1.

Turn off the vacuum cleaner and detach the floor brush.
2.

Inspect the brush roll. While the auto hair detangler minimizes tangles, some debris might accumulate.
3.

If necessary, use scissors to carefully cut away any remaining tangled hair or threads.
4.

Wipe the brush housing with a dry cloth.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Advertisements



Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully (approx. 4 hours).
Reduced suction power.	Dustbin is full.	Empty the dustbin.
Reduced suction power.	Filters are clogged.	Clean or wash the filters as per maintenance instructions. Ensure they are completely dry before reassembly.
Reduced suction power.	Brush roll is tangled or obstructed.	Clean the brush roll, removing any tangled hair or debris.
Reduced suction power.	Hose or nozzle is blocked.	Check for blockages in the extension wand, floor brush, or attachments and clear them.
Vacuum stops suddenly during use.	Battery is depleted.	Recharge the battery.
Vacuum stops suddenly during use.	Overheating due to blockage.	Turn off the vacuum, check for and clear any blockages, and allow it to cool down for at least 30 minutes before resuming use.

8. SPECIFICATIONS

Feature	Detail
Brand	Eureka Forbes
Model Name	ZeroBend Z15
Model Number	GVCDFCZB150000
Special Features	ZeroBend Technology, Cyclonic Filtration, Powerful Suction, Lightweight, Less Noise, Washable HEPA Filter, Motorized 3-in-1 Floor Brush, Auto Hair Detangler
Filter Type	Cyclonic Filter, Foam Filter, Steel Mesh Filter, Washable HEPA Filter
Cordless	Yes
Wattage	450 Watts
Charging Time	4 Hours

Feature	Detail
Recommended Use	Dry Cleaning
Form Factor	Upright
Colour	Red and Dark Grey
Product Dimensions	26L x 25.2W x 118H Centimeters
Noise Level	82 dB
Battery Life	Up to 40 Minutes (Eco mode)
Item Weight	1 kg 670 g
Number of Power Levels	3

9. WARRANTY AND SUPPORT

 
For warranty information, service, or support, please contact Eureka Forbes customer service.

- **Manufacturer:** Eureka Forbes, People's Republic of China
- **Importer:** Eureka Forbes Limited, (Formerly Forbes Enviro Solutions Ltd.) B1/B2, 701, 7th floor, Marathon NextGen, Marathon Innova, off Ganpatrao Kadam Marg, Lower Parel, Mumbai - 400013, India.
- Refer to your purchase documentation or the official Eureka Forbes website for specific warranty terms and conditions.
- For technical assistance or spare parts, please contact the authorized service center.

You may also visit the official [Eureka Forbes Store on Amazon](#) for more product information and support resources.

Advertisements



	DJI Lightbridge 2 User Manual: HD Aerial Video Transmission System Discover the capabilities of the DJI Lightbridge 2 with its official user manual. Learn about its long-range HD video transmission, integration with DJI drones and apps, and operational guidance for professional aerial videography.
	Smart Watch User Manual Comprehensive user manual for the Smart Watch, detailing operating instructions, charging, phone connection, main functions, settings, and warranty information.
	GY-Z15 2-in-1 Foldable Wireless Charger User Manual Guanyu Detailed user manual for the Guanyu GY-Z15 2-in-1 Foldable Wireless Charger. Learn about its features, setup, compatible devices (smartphones, earbuds), specifications, and important safety warnings. Supports Qi wireless charging for multiple devices.
	Z15 RGB Camping Lantern Speaker User Manual User manual for the Z15 RGB Camping Lantern Speaker, covering technical specifications, parts identification, operation instructions, Bluetooth pairing, TWS setup, and safety guidelines.
	Bitmain Antminer Z15 Server Installation Guide Comprehensive installation guide for the Bitmain Antminer Z15 server, covering setup, configuration, monitoring, administration, and environmental requirements.
	ANTMINER Z15 Pro Product Manual Detailed product manual for the ANTMINER Z15 Pro, covering specifications, environmental requirements, and performance curves for cryptocurrency mining.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I open or attach the mattress tool for the Eureka Forbes ZeroBend Z15?

Based on the Eureka Forbes ZeroBend Z15 manual, the Upholstery and Mattress Tool is a specialized attachment designed for cleaning fabric surfaces. It does not typically "open" for operation, but rather attaches to the...

[Read full answer](#)

EUREKA FORBES ZEROBEND Z15

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Eureka Forbes ZeroBend Z

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options

[Privacy Policy](#) · [DMCA](#)