



Manuals.plus / > Electrolux /

> Electrolux Washable Hygiene S-Filter for SilentPerformer (ZSP2320T) Vacuum Cleaner, Model EFH 12W
> Instruction Manual

Electrolux EFH 12W

Sign in to save this manual

Sign in to bookmark this manual and keep private notes.

Electrolux Washable Hygiene S-Filter EFH 12W Instruction Manual

For SilentPerformer (ZSP2320T) Vacuum Cleaners

1. PRODUCT OVERVIEW

The Electrolux Washable Hygiene S-Filter, model EFH 12W, is an essential component for maintaining the air quality in your home while using your SilentPerformer (ZSP2320T) vacuum cleaner. This advanced filter is engineered to capture even the finest particles, ensuring a cleaner exhaust air.

- **High Filtration Efficiency:** Captures 99.5% of particles down to 0.06 microns.
- **Allergen Reduction:** Effectively traps household allergens such as pollen, mold spores, and dust mite feces.
- **Washable Design:** Designed for easy maintenance, allowing for washing under running water and reuse.
- **Compatibility:** Specifically compatible with Electrolux SilentPerformer (ZSP2320T) vacuum cleaner models.



Image 1.1: The Electrolux Washable Hygiene S-Filter EFH 12W, showing its blue frame and white pleated filter material.

2. INSTALLATION INSTRUCTIONS

Follow these steps to correctly install or replace the Hygiene S-Filter in your Electrolux SilentPerformer vacuum cleaner.

1. **Power Off and Unplug:** Before beginning, ensure your vacuum cleaner is switched off and unplugged from the power outlet to prevent accidental operation.

2. **Locate Filter Compartment:** Refer to your vacuum cleaner's user manual to locate the filter compartment. This is typically found at the rear or side of the vacuum.
3. **Open Compartment:** Open the filter compartment cover. You may need to press a latch or slide a release mechanism.
4. **Remove Old Filter:** Carefully remove the old filter. Dispose of the old filter according to local regulations.
5. **Insert New Filter:** Place the new Electrolux EFH 12W Hygiene S-Filter into the compartment. Ensure it is seated correctly and securely, with the pleated side facing the direction indicated in your vacuum's manual (usually towards the motor).
6. **Close Compartment:** Close the filter compartment cover until it clicks into place, ensuring it is fully sealed.
7. **Resume Operation:** You can now plug in and power on your vacuum cleaner.

3. OPERATING THE FILTER

The Electrolux Hygiene S-Filter operates passively as part of your vacuum cleaner's filtration system. Once correctly installed, it continuously works to purify the air expelled by the vacuum.

- The filter's primary function is to trap fine dust and allergens, preventing them from being recirculated into your indoor environment.
- For optimal performance, ensure the filter is clean and dry before each use, especially after washing.
- Regularly check the filter for visible dirt or damage. A clogged filter can reduce suction power and filtration efficiency.

4. MAINTENANCE AND CLEANING

The Electrolux EFH 12W Hygiene S-Filter is washable, allowing for extended use and consistent performance. Proper cleaning is crucial for maintaining its effectiveness.

1. **Remove Filter:** Follow the steps in Section 2 to safely remove the filter from your vacuum cleaner.
2. **Wash Under Running Water:** Hold the filter under lukewarm running tap water. Gently rinse the pleated side of the filter until the water runs clear. Do not use detergents or brushes, as these can damage the filter material.
3. **Shake Off Excess Water:** Gently shake the filter to remove any excess water.

4. **Air Dry Completely:** Place the filter in a well-ventilated area to air dry. It is crucial that the filter is completely dry before re-installing it into the vacuum cleaner. This may take up to 24 hours. Do not use heat sources (like a hairdryer or oven) to speed up drying, as this can damage the filter.

5. **Re-install:** Once completely dry, re-install the filter as described in Section 2.

It is recommended to wash the filter regularly, depending on usage, and replace it approximately every 6-12 months for optimal performance and hygiene.

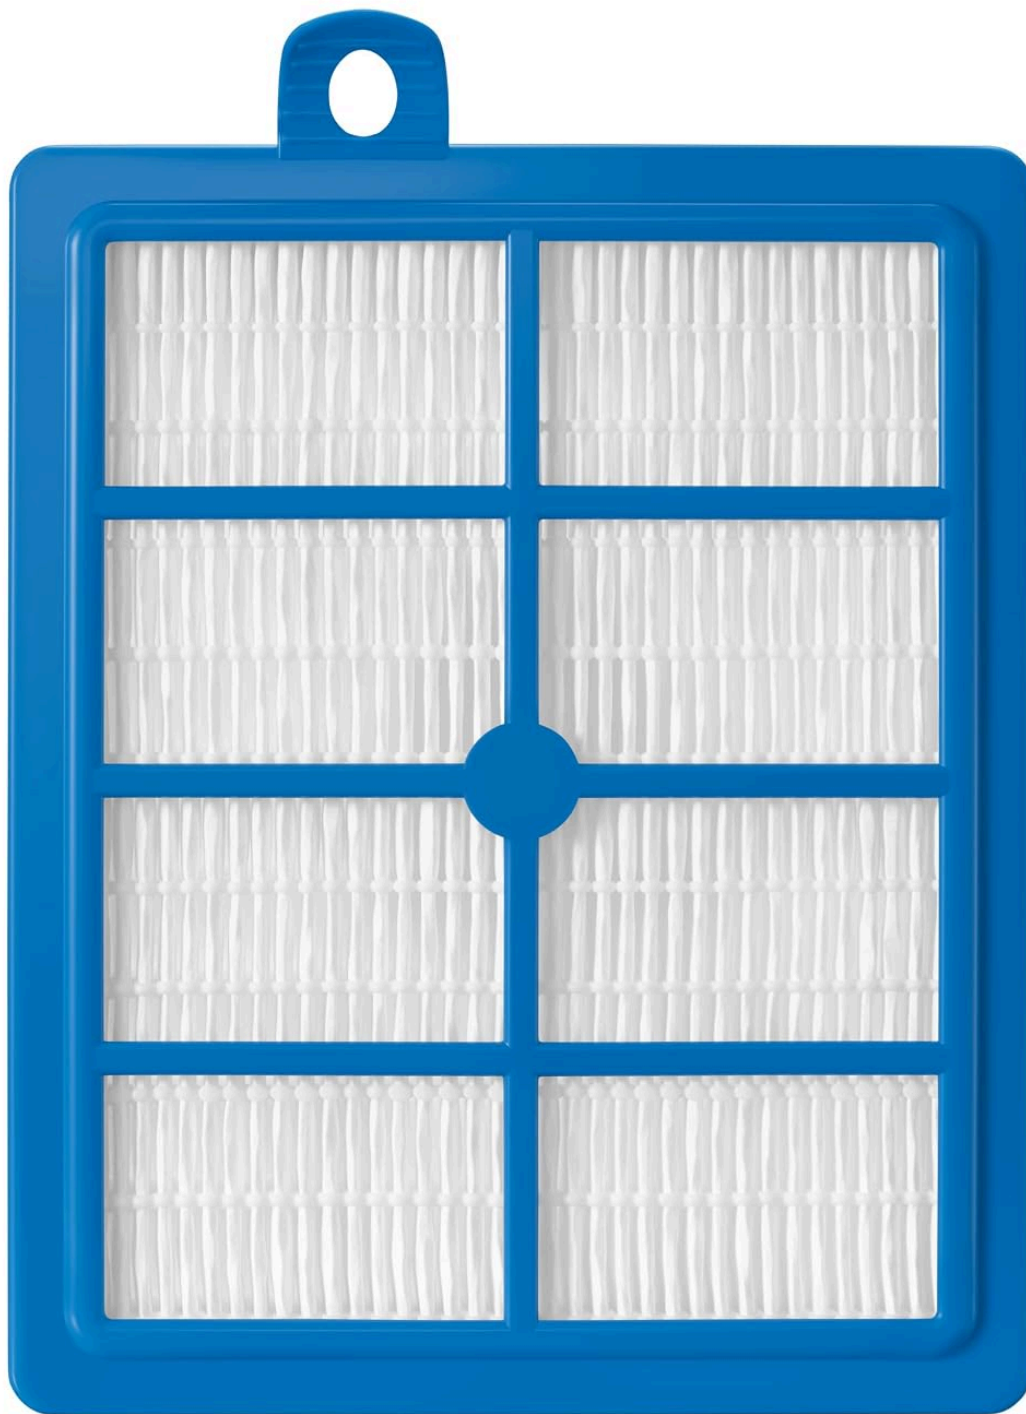


Image 4.1: Side view of the Electrolux Washable Hygiene S-Filter, illustrating its robust construction suitable for washing.

5. TROUBLESHOOTING

If you experience issues with your vacuum cleaner's performance after installing or cleaning the filter, consider the following:

- **Reduced Suction Power:**
 - Ensure the filter is installed correctly and the compartment cover is fully closed.
 - Check if the filter is clogged with dirt. If so, clean it thoroughly or replace it if cleaning does not restore performance.
 - Verify that the filter is completely dry before re-installation. A damp filter can restrict airflow.
- **Unusual Odors:**
 - Odors can indicate a dirty filter. Clean the filter as per maintenance instructions.
 - Ensure the filter is completely dry before re-installation to prevent mold or mildew growth.
- **Filter Does Not Fit:**
 - Double-check your vacuum cleaner model number against the filter's compatibility (ZSP2320T).
 - Ensure the filter is oriented correctly within the compartment.

6. SPECIFICATIONS

Brand	Electrolux
Model Name	EFH 12W
Special Feature	HEPA-like Filter, Washable
Filter Type	Cloth
Item Weight	0.12 Kilograms
Product Dimensions (L x W x H)	25L x 120W x 165H Millimeters
Compatible Vacuum Models	SilentPerformer (ZSP2320T)
Country of Origin	Sweden



Image 6.1: The Electrolux Washable Hygiene S-Filter EFH 12W, illustrating its dimensions for reference.

7. WARRANTY AND SUPPORT

For any product-related inquiries or support, please contact Electrolux customer service.

- **Replacement Policy:** This product is eligible for a 10-day replacement policy from the date of purchase.
- **Manufacturer:** Electrolux India Private Limited

- **Importer Contact:** Electrolux India Private Limited, 1st Floor, Plus Offices, Landmark Cyber Park, Sector 67, Gurugram-122018 Haryana, India.
- **Online Store:** Visit the [Electrolux Store on Amazon](#) for more products and information.

Related Documents - EFH 12W

	Electrolux SilentPerformer Vacuum Cleaner User Manual and Instructions Detailed user manual for the Electrolux SilentPerformer™ series of vacuum cleaners. It guides users through setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of the appliance.
	Electrolux ZSP2320T Bagless Canister Vacuum Cleaner Dimension Guide Official dimension guide for the Electrolux ZSP2320T bagless canister vacuum cleaner, including width, height, and depth specifications.
	Electrolux Pure A9 Air Purifier Instruction Manual Comprehensive instruction manual for the Electrolux Pure A9 air purifier, covering setup, operation, maintenance, troubleshooting, and warranty information.
	Electrolux PURED9 Canister Vacuum Cleaner User Manual Comprehensive user manual for the Electrolux PURED9 canister vacuum cleaner, covering setup, usage, maintenance, troubleshooting, and safety precautions. Includes details on accessories and optimal performance tips.
	Electrolux Pure A9 Air Purifier User Manual User manual and operating details for the Electrolux Pure A9 HEPA filter air purifier, model PA91-606DG, including fan speed control and technical notes.
	Electrolux 800 Bagged Cleaner (EHVS80W5AG) User Manual User manual for the Electrolux 800 Bagged Cleaner (Model EHVS80W5AG). Includes safety instructions, setup, operation, maintenance, troubleshooting, and warranty information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions.
Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

ELECTROLUX EFH 12W**KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.**

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

Electrolux EFH 12W manu

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Login

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

SAVE MANUALS, NOTES, UPLOADS, AND QUESTIONS

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options

Privacy Policy · DMCA