 


Shark **STEAM & SCRUB**

Scrubbing & Sanitising Steam Blaster™ Mop

**S8201
SERIES**

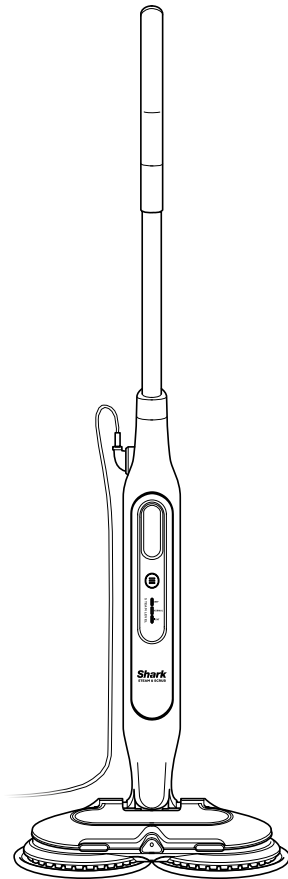

THANK YOU
for purchasing the Shark® Steam and Scrub Mop



TIP: You can find the model and serial numbers on the QR code label on of the back of the steam pod.

REGISTER YOUR PURCHASE

-  sharkclean.in
-  1800-296-0076
-  Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS:

Voltage: 220-240V, 50-60Hz
Watts: 1120W
Water Capacity: 350 ml

**PLEASE READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE.**

This instruction manual is designed to help you get a complete understanding of your new Steam and Scrub Mop.

If you have any questions, please email customerservice@sharkninja.in or call the customer service line on 1800-296-0076.



CONTENTS

Important Safety Instructions	4
What's Included	6
Assembling Your Steam and Scrub Mop	7
Using Your Steam and Scrub Mop	8
Intelligent Steam Control	9
Caring For Your Steam and Scrub Mop	10
Troubleshooting	11
Frequently Asked Questions	12
2 Year Limited Warranty	13
Notes	14

IMPORTANT SAFETY INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

⚠ WARNING This appliance is not intended for use by persons with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should not use or play with this appliance. Close supervision is necessary to keep appliance out of reach of children during use. We recommend that you check the use and care instructions from the floor manufacturer before using your Steam and Scrub mop.



WARNING: Danger of scalding. The steam emitted from the steam mop is very hot and may cause scalding. Please use caution when using the steam and scrub mop.



WARNING: Keep steam mop away from children.



WARNING: Children should be supervised to ensure that they do not play with the appliance.

1. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance should not be done by children. Keep the appliance and its cord out of reach of children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.
2. Keep the appliance out of reach of children when it is energised or cooling down.
3. When in use, **NEVER** turn the Steam and Scrub Mop over on its side or direct steam toward people, pets or plants. Liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
4. The filling aperture should not be opened during use.
5. Use the system **ONLY** for its intended purpose.
6. **DO NOT** use to heat a room.
7. **DO NOT** use outdoors.
8. **DO NOT** leave the Steam and Scrub Mop unattended when plugged in. **ALWAYS** unplug the power cord from the electrical socket when not in use and before servicing.
9. **DO NOT** allow the Steam and Scrub Mop to be used by children. Close attention is necessary when used near children, pets or plants.
10. Use **ONLY** as described in this instruction manual.
11. Use **ONLY** manufacturer's recommended accessories.
12. **DO NOT** use with damaged cord or plug. If the Steam and Scrub

Mop is not working as it should or has been dropped, damaged, left outdoors or immersed in water, call or email customer service immediately. Incorrect reassembly or repair can cause a risk of electrical shock or injury when the Steam and Scrub Mop is used.

13. To protect against a risk of electric shock, **DO NOT** immerse the Steam and Scrub Mop in water or any other liquid.
14. **DO NOT** handle the plug or Steam and Scrub Mop with wet hands or operate it without wearing shoes.
15. **DO NOT** pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. **DO NOT** run Steam and Scrub Mop over cord. Keep cord away from heated surfaces.
16. **DO NOT** unplug by pulling on power cord. To unplug, grasp the plug and pull out of the plug socket. **DO NOT** use extension cords or sockets with inadequate current-carrying capacity.
17. **DO NOT** put any objects into the steam nozzle openings. Discontinue use if the steam nozzle is blocked.
18. **DO NOT** put hands or feet under the Steam and Scrub Mop as it gets very hot.
19. Use the Steam and Scrub Mop **ONLY** on flat, horizontal surfaces. **DO NOT** use on walls, counters or windows.
20. **DO NOT** use on leather, wax-polished furniture, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
21. **DO NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in the Steam Mop as this will void your warranty and may damage it or make it unsafe for use. If you live in a hard-water area, we recommend using distilled water in your Steam Mop.
22. **NEVER** store or leave Steam and Scrub Mop in one spot with Dirt Grip™ pad attached, as this may damage surfaces.
23. Before removing Dirt Grip™ pad, unplug the Steam and Scrub Mop and allow it to cool.
24. Unplug the Steam and Scrub Mop before cleaning. Use a dry or damp cloth to clean the exterior. **DO NOT** pour water on Steam and Scrub Mop or use alcohol, benzene or paint thinner to clean.

 
SAVE THESE INSTRUCTIONS

READ CAREFULLY BEFORE USE


25. Extreme caution should be exercised when using the Steam and Scrub Mop to clean stairs.
26. **NEVER** use Steam and Scrub Mop without the Dirt Grip™ pad attached.
27. Keep your work area well lit.
28. Store Steam and Scrub Mop indoors in a cool, dry place.
29. To avoid circuit overload, **DO NOT** operate another appliance on the same socket (circuit) as the Steam and Scrub Mop.
30. To avoid scalding injuries, **ALWAYS** unplug the Steam and Scrub Mop and allow it to cool before removing or changing mop heads, accessories or Dirt Grip™ pads.
31. Your Steam and Scrub Mop is designed to clean hard floor surfaces that will withstand high heat. **DO NOT** use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax and on some no-wax floors, the sheen may be removed by the heat and steam action. We recommend that you check the use and care instructions from the floor manufacturer before using your Steam and Scrub mop. Do not operate the appliance if it is leaking.
32. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
33. **DO NOT** carry the steam mop while in use.

WHAT'S INCLUDED


- A** Steam Mop Handle
- B** Steam Trigger
- C** Quick-Release Cord Holder
- D** Mop Pole
- E** Water Tank
- F** Mode Button
- G** Mop Head
- H** Steam Blaster™™
- I** Dirt Grip™ Soft Scrub Pads

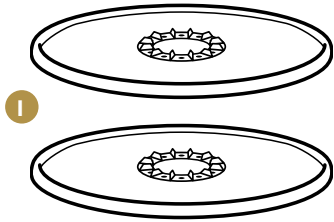

 
Note: For additional pads, please visit sharkclean.in

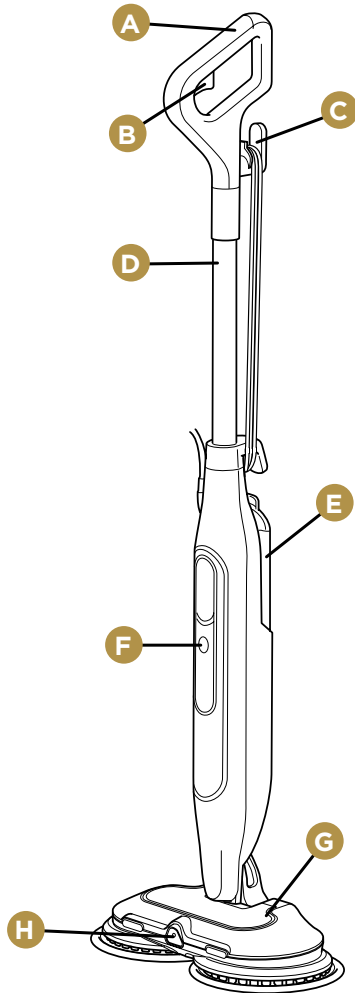


ASSEMBLING YOUR STEAM AND SCRUB MOP

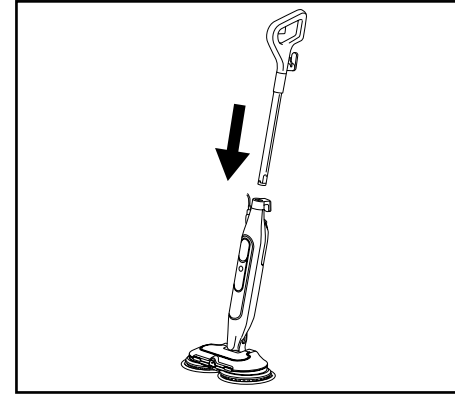 

 
1. Insert the **Mop Handle** into the **Steam Mop Body** until it clicks into place.

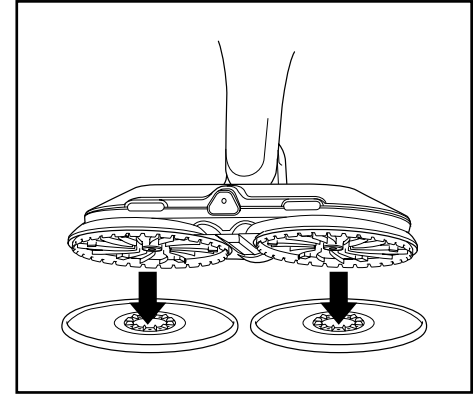

 2. To attach the **Dirt Grip™ Soft Scrub Pads**, place **BOTH** pads flat on the floor with plastic rings facing up. Align the unit directly over the plastic rings on the pads. Gently lower the **Mop Head** onto the pads, pressing until the pads are secure.

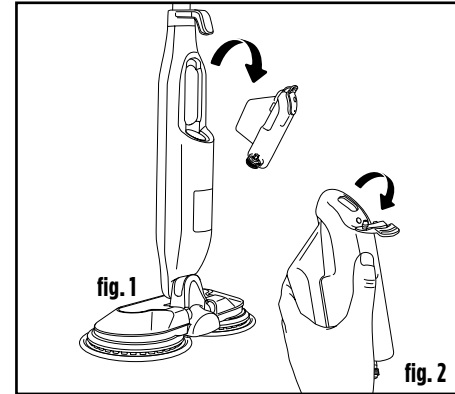

 
3. Unplug the steam mop before filling the Water Tank (fig. 1). To remove the tank, pull it out, away from the mop body. Pull the top rubber fill cap back and with cold or normal temperature water **ONLY** (fig. 2).

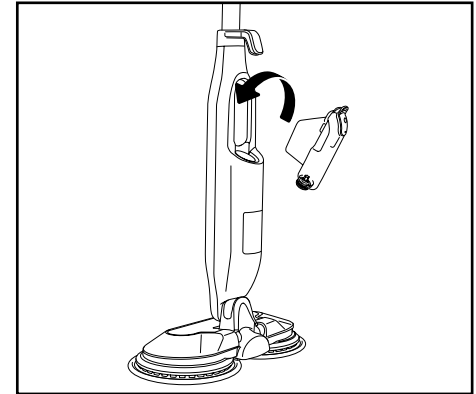


4. When the tank is filled, reinstall it by inserting it back into the mop body.

Note: Do not put any cleaning, solutions, scented perfumes, oils, or any other chemicals into the water tank. Adding chemicals or cleaning solutions (including vinegar) may damage the steam mop and could be unsafe for you, your family and your pets.

 
USING YOUR STEAM AND SCRUB MOP

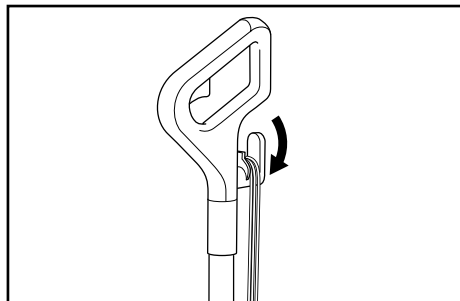

 
1. Twist the Quick-Release Cord Holder to unwrap the power cord completely. Plug into an electrical socket.

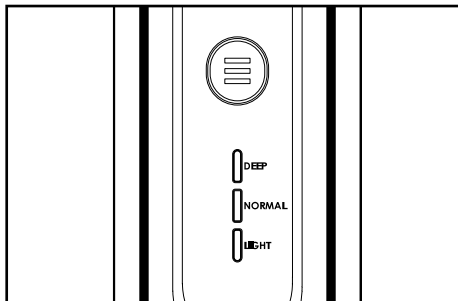

 2. Once plugged in, the mop will be in Standby mode and all 3 steam level lights will blink. Press the Mode Button to select Light, Normal, or Deep level, then wait 20 seconds to allow steam to release.

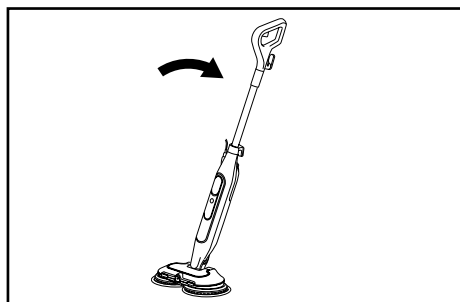

 3. Tilt the handle down to activate the spinning pads.

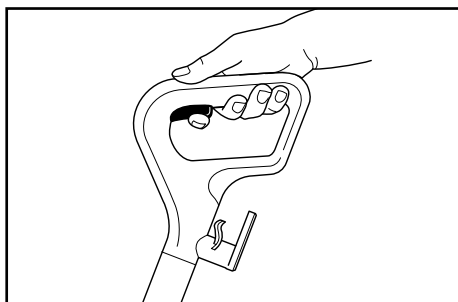

4. To activate the Steam Blaster™, press the spray trigger on the handle to blast away tough stains.

INTELLIGENT STEAM CONTROL

The Shark Steam Mop has 3 intelligent Steam Control settings so you can select the ideal amount of steam to use for each cleaning task. In **NORMAL** mode, the pads will spin faster, and more steam will be produced than in **LIGHT** mode. In **DEEP** mode, the pads will be spinning the fastest and the maximum amount of steam will be produced. Press the Mode Button to select the steam level.

SETTING	IDEAL FOR THESE SEALED SURFACES	RECOMMENDED USAGE
DEEP NORMAL LIGHT	Laminate Hardwood Vinyl	Cleaning delicate surfaces Light cleaning and dusting Loosening and lifting light dirt
DEEP NORMAL LIGHT	Marble Tile Stone	Basic, everyday cleaning. Cleaning large areas. Cleaning moderate and heavy-traffic areas.
DEEP NORMAL LIGHT	Marble Tile Stone	Reaching hard-to-clean surfaces. Tough cleaning and removing stuck-on messes and stains. Deep cleaning heavy-traffic areas. Cutting through heavy dirt and grime and sanitising* floors.

STEAM BLASTER™:

1. To target tough messes with an extra burst of cleaning power, move the front of the nozzle 5 to 10 centimeters from the mess (**fig. 3**), then press and hold the Steam Blaster™ button as needed. (Hold longer for the toughest messes.)
2. Before scrubbing, wait 5 seconds to let the steam blast penetrate the mess.

Tip: For more difficult messes, allow 20 seconds or more.

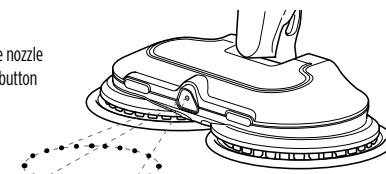 


fig. 3

TO SANITISE FLOORS*:

1. Attach clean Dirt Grip™ Soft Scrub Pads to the scrubbing mop head.
2. Plug in the unit, tilt the mop handle down towards you, and press the mode button to select the **NORMAL** setting. The pads will then start spinning.
3. Wait at least 20 seconds for the unit to begin producing steam.
4. **To ready the unit for sanitisation**, start mopping with a forward and backward motion on an appropriate sealed hard floor surface. After three minutes, your unit will be ready to sanitise.
5. Move the Mop head slowly and evenly over the area to be sanitised while applying continuous downward pressure. Slowly repeat, making sure to cover the entire area to be sanitised with at least 15 strokes.

*Sanitisation studies were conducted under controlled test conditions. Be certain to follow all directions for use carefully to fully sanitise with mop head set in the NORMAL mode.

CARING FOR YOUR STEAM AND SCRUB MOP

AFTER USE AND STORAGE

1. Press the Mode Button until the settings lights start to blink, indicating that you are in Standby mode. Unplug the cord from the socket and place the steam mop into the upright position. Allow it to cool completely. (fig. 4).
2. When the pads have cooled completely, remove them by pulling them off the discs. Watch out for sharp edges to avoid hurting your fingers. (fig. 5).
3. After the unit has cooled and the steam has been released, empty the Water Tank before storing. Open the tank lid and pour the water out into a sink or bathtub. After all the water has drained out, close the lid.
4. To store the steam mop, wait until after it has cooled and the steam has been released. Lock the steam mop in an upright standing position by raising the handle until the pole is standing straight up, perpendicular to the ground. With the unit locked in the upright standing position, store it in a dry, protected area (e.g., in a closet or the corner of a room) until next use.

 


fig. 4

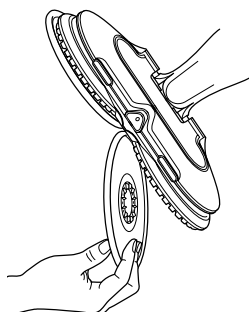 


fig. 5

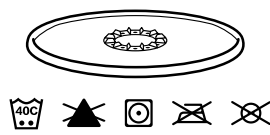 


fig. 6

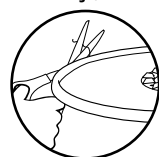 


fig. 7

Dirt Grip™ SOFT SCRUB PADS CARE INSTRUCTIONS

Care

Machine-wash the Dirt Grip™ Soft Scrub Pads separately with warm water, using liquid detergent. Do not clean pads in a dishwasher, as some detergents may cause the pads to leave streak marks on the floor.

NEVER USE BLEACH, POWDERED DETERGENT, OR FABRIC SOFTENERS

This will damage the Dirt Grip™ Soft Scrub Pads or leave a coating that will reduce their cleaning performance and absorbency. The pads should be line-dried or tumble-dried on a low setting, as this will extend the life of the microfiber fabric. (fig. 6).

Loose fibers can indicate wearing of the microfiber fabric. **DO NOT** pull the loose fibers, as this can cause the weave to come undone. Simply trim the loose fibers with scissors. (fig. 7).

Replacement Dirt Grip™ Soft Scrub Pads

For best cleaning results, we recommend replacing the Dirt Grip™ Soft Scrub Pads every 3 to 4 months following normal use. As with any fabric, dirt particles, grease, friction, and repeated washing can cause the fibers to break down, and you may notice an increase in the effort needed to push or pull the mop.

You can purchase replacement Dirt Grip™ Soft Scrub Pads and other accessories by visiting sharkclean.in.

TROUBLESHOOTING

PROBLEM

POSSIBLE REASONS & SOLUTIONS

The steam mop isn't producing any steam.	The steam mop should be securely plugged into an electrical socket. Check your fuse or circuit breaker or try a different socket. Make sure the water tank is full, the unit is plugged in, and the mode button is illuminated. If the settings lights are off, try a different electrical socket. If the settings lights are blinking, press the mode button to select a steam setting. If the settings lights are illuminated steadily, wait 20 seconds for the unit to warm up. If after following the above steps the steam mop still does not produce any steam, call Customer Service at 1800-296-0076 or email customerservice@sharkninja.in.
The steam mop is producing intermittent steam.	This is normal. For more consistent steam, select the NORMAL setting. Also make sure the water tank is full.
I can't select a steam setting.	Make sure the steam mop is plugged in and the settings lights are flashing. If your steam mop is producing steam but the settings lights are off, call Customer Service at 1800-296-0076.
Floors are cloudy, streaky, or spotty after steaming.	The Dirt Grip™ Soft Scrub Pads might be dirty. Install a clean set of pads. If you washed the Dirt Grip™ Soft Scrub Pads with powdered detergent, then they could be damaged and require replacement. Due to accumulated soap or grease residue, the floor may require several cleanings with the steam mop. A more stubborn case may require you to rinse the floor with a mix of one part vinegar and two parts water* (but DO NOT put any cleaning solution into the steam mop's water tank). *Please consult your flooring manufacturer's care and maintenance instructions before applying any cleaning products or solutions.
It's hard to push or pull the mop.	The mop might be hard to push or pull if the Dirt Grip™ Soft Scrub Pads aren't wet enough. It should get easier to move the mop across the floor after it's been running for a few minutes. Overly dirty pads could also make it harder to push or pull the mop. We recommend using clean pads.
Rotating discs are not turning or are wobbling.	The steam mop may be in the upright position. Tilt the handle down to use the mop. The Dirt Grip™ Soft Scrub Pads may not be centered. Turn the power OFF, unplug the steam mop, wait for a few moments to allow the pads to cool, then reinstall the Dirt Grip™ Soft Scrub Pads.
The steam mop is vibrating or wobbling.	The Dirt Grip™ Soft Scrub Pads are not centered on the rotating discs. Turn the power OFF and unplug the unit, and wait for the pads to cool. Follow the instructions in the Assembling Your Steam & Scrub section to reinstall the pads.
The steam mop turns off on its own.	If your steam mop shuts off while in use, it likely needs to cool down. Perform the following steps before you restart cleaning: 1. Turn the steam mop off, unplug it, and remove pads. 2. Allow the unit to cool for a minimum of 30 minutes. 3. Reinstall the pads. Plug in the steam mop, select a steam mode, and begin cleaning.

FAQ

PROBLEM	POSSIBLE REASONS & SOLUTIONS
Can I use the steam mop on carpets?	No, the steam mop is not designed for carpet cleaning.
What surfaces can I use the steam mop on?	The steam mop is designed for use on all sealed hard floor surfaces. We recommend consulting the use and care instructions from your floor manufacturer before using your Steam and Scrub Mop. ⚠ WARNING: DO NOT use on leather, wax-polished furniture, synthetic fabrics, velvet, or other delicate, steam-sensitive materials. NOTE: On surfaces treated with wax and on some unwaxed floors, the sheen may be removed by the heat or steam action of the unit.
Can I put some-thing other than water in the water tank of the steam mop?	DO NOT add cleaning solutions, scented perfumes, oils, or any other chemicals to the water used in this appliance, as this will void your warranty and may damage the unit or make it unsafe for use. We recommend using distilled water in your Steam Mop.
I can't remove my wand from the main unit.	Before removing the wand, unplug the unit from the mains. Then locate the small hole at back of the unit, just under the cable wrap. Insert a screwdriver (or similar thin tool) into the hole and push the latch holding the handle in place. At the same time, lift the handle upwards to remove the wand.

2 YEAR LIMITED WARRANTY

The warranty commences on the date of purchase and expires at the end of the two (2)-year period. In the unlikely event of a defect due to faulty materials or workmanship within the warranty period we will replace the defective/faulty part with a new part/product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.

For warranty claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the original date of purchase.

Any personal data collected through this warranty process will be used for warranty-related purposes and for marketing communications, subject to the customer's right to opt out. All data will be handled in accordance with applicable data protection laws.

Your warranty is subject to the following conditions:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.
- Any parts/product which are replaced will become the property of Shark Ninja.
- The company reserves the absolute right to amend, extend, cancel, and/or discontinue terms and conditions or any part thereof without giving any reason or prior notice to the customer.
- Force Majeure: The company shall not be liable for the non-performance of its obligation under this terms and conditions where such failure is due to a force majeure event i.e. any act of God, orders, restrictions, or regulations of Government(Central or State), war, working conditions, hostilities, riots, civil commotion, strike, lock-out, lockdown, pandemic, labour trouble, explosion, or any other cause or circumstances of whatsoever nature beyond control.
- Any dispute shall be subject to the exclusive jurisdiction of Bengaluru Courts .

What is covered by this warranty?

This warranty applies only to the original purchaser, who bought the product from an authorised retailer and may not be transferred. Proof of purchase is required.

- The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to two (2) years from the original purchase date.
- In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.
- This warranty applies only to products purchased in India from authorized sellers and is valid for service within India. No international warranty is offered.

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear (such as pads) caused by normal use in accordance with operating instructions. Replacement parts are available for purchase at www.sharkninja.in or reach out to us at customerservice@sharkninja.in.
- In case, model number, serial number, or production date code on the product has been altered, removed, or is no longer legible.
- Unauthorised/ improper maintenance/ handling or overload is excluded from this warranty.
- Repairs or alterations carried out by repair persons not authorized by SharkNinja.
- Accidental damage including, but not limited to, transit, weather, electrical outages or power sags/surges.
- Damage resulting from use not in accordance with the rating plate.
- Use of parts and accessories that are not genuine Shark components.
- Products purchased, used, or operated outside India.

Waste Electrical and Electronic Equipment (WEEE)

- This symbol (with or without a solid bar) means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, the user may choose to hand over the product to a competent recycling organization. Proper recycling of your product will protect human health and the environment.
- If you are unsure what to do with e-waste, please contact your local authorities, retailer, or household waste disposal service.
- For more information on safe disposal and recycling you may log on to <https://www.sharkninja.in/legal/e-waste-management> or contact our Toll Free No: 1800-296-0076

Reduction of Hazardous Substances

- This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment. For declarations of conformity about REACH, please visit our website www.sharkninja.in

Contact Us

If you have any questions, or would like to claim your warranty, please contact us as follows:

Website: www.sharkninja.in
Email: customerservice@sharkninja.in
Toll Free Telephone: 1800-296-0076

NOTES

[illegible]



SHARKCLEAN.IN
1800-296-0076

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® steam mop.

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

© 2025 SharkNinja Operating LLC.

SHARK is a registered trademark of SharkNinja Operating LLC. DIRT GRIP and STEAMBLASTER are trademarks of SharkNinja Operating LLC. Dirt Grip™ and Steam Blaster™ are trademarks of SharkNinja Operating LLC.

S8201IN_Series_IB_MP_MV2



@SharkHomeIN

@SharkNinjaIndia