

Noise Buds **Marine**

 


Please refer to this manual before using the product

TABLE OF CONTENTS

• Package Contents	01
• Specifications	02
• Power and Pairing	03
• Control	04-05
• Charging	06
• Reset and Sizing	07
• Clean the earbuds and the charging case	08
• Warranty	09
• Safety	10

 
PACKAGE CONTENTS



Noise Buds Marine x 1



USB Type-C charging Cable x 1



Charging Case x 1



S X 1

L X 1

Ear-tips

User Manual x 1

Thank you Card x 1

Charging case chain x 1

SPECIFICATIONS

- Earbud weight: 4g (each)
- Speaker driver size: 13mm
- Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP
- Bluetooth version: 5.3
- Earbud charging time: Up to 90 minutes
- Working voltage: 5V
- Playtime without ANC: Up to 6 hours at 60% volume
- Playtime with ANC : Up to 5 hours at 60% volume
- Bluetooth range: 10m
- Waterproof rating: IPX4
- Working temperature: 0-45°C

CHARGING CASE SPECIFICATIONS

- Charging case weight: 74g
- Charging port: Type-C
- The number of earbud charges from the case: 5 times
- Case charging time: Up to 90 minutes

POWER ON

The earbuds will automatically turn on when you take out the buds from the charging case.

 
POWER OFF

The earbuds will automatically turn off once placed inside the charging case.

PAIRING

- Take out the earbuds from the charging case. It will automatically turn on and White LED will blink it indicates that the buds are in pairing mode.
- Select 'Add Device' and click on Noise Buds Marine from the list of devices.
- Your Noise Buds Marine are now paired with your device and ready to use.

Note: Your Noise Buds Marine will automatically connect to the last paired device as soon as you take them out of the charging case.

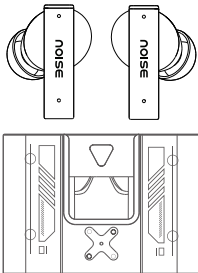

CONTROLS



Volume Up

Tap the right earbud once



Tap once



Volume Down

Tap the left earbud once



Tap once



Play/Pause/Answer/End call

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Tap the left earbud thrice



Tap thrice



Next Song

Tap the right earbud thrice



Tap thrice



Google Assistant

Tap either side 4 times



Tap 4 times



Tap 4 times



Transparency/ANC/Normal

Press and hold for 2 seconds



Touch and Hold



Factory Reset Successfully

Tap and hold either side for 7 seconds



Touch and Hold



Touch and Hold



Game mode/Music mode

Press and hold for 2 seconds



Touch and Hold

CHARGING

Earbuds

Place both earbuds inside the case to charge them.



Indication (on Buds)

- White LED blink alternatively on both the earbuds =  Charging

Charging Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on Case)

- Red LED breathe on the charging case =  Charging
- No LED =  Fully Charged

RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Buds Marine from the list of paired devices in the Bluetooth menu.
- Take out the earbuds from the charging case.
- Press and hold either Earbud for 7 seconds. The White LED on the single Earbud will blink three times to indicate that the earbuds have been reset. After that, it will re-enter pairing mode.

CHOOSING YOUR EAR-TIP SIZE

 


 
Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips.

Follow the images and chart to learn how to wear earbuds in the right manner.



CLEAN THE EARBUDS AND THE CHARGING CASE

Users are requested to prevent damage, avoid exposing the charging case to water as the design does not include a lid. If the earbuds come into contact with water, clean them before placing them back in the charging case.

<p>Eartips</p> 	<p>Remove the ear tips from the earbuds and wash them with a mild detergent and water.</p> <p>NOTE: Make sure you thoroughly rinse and dry the ear tips before re-attaching them to the earbuds.</p>
<p>Earbud Nozzles</p> 	<p>Wipe only with a dry, soft cotton swab or equivalent.</p> <p>CAUTION: Never insert any cleaning tool into the nozzle.</p>
<p>Charging Contacts (on earbuds)</p>  <p>Charging Pins</p>	<p>Wipe only with a dry, soft cotton swab or equivalent.</p>
<p>Charging Case</p>  <p>Type-C port</p>	<p>Wipe only with a dry, soft cotton swab or equivalent.</p> <p>Make sure that the charging cable should be dry and properly fit in the Charging Port.</p>

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on **www.gonoise.com**.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration

✓ SUPPORT AND SERVICE

🔗 1 YEAR LIMITED WARRANTY














SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

SAFETY FOR YOU AND YOUR NOISE BUDS MARINE

Follow these tips to get the best out of your new Noise Buds Marine:

-  Do not expose the earbuds to liquids, moisture, or humidity as they have electronics and batteries inside.
-  Do not use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.
-  Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.
-  Only charge your earbuds from 5V USB ports such as phone chargers and laptop or PC chargers.
-  Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
-  Do not throw the earbuds in a fire to dispose of them. The internal battery may explode.
-  Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.
-  Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.
-  Only charge your earbuds from 5V USB ports such as phone chargers and laptop or PC chargers.
-  Never listen to music at high volume or you may permanently damage your hearing.
-  Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.

noise