

[Manuals.plus](#) /

› [Havells](#) /

› Havells Prolife Neo Air Fryer User Manual - Model GHCAFEPK150

Havells GHCAFEPK150

Havells Prolife Neo Air Fryer User Manual

Model: GHCAFEPK150

[Instructions](#) [Components](#) [Setup](#) [Operation](#) [Safety](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
[& Support](#)

INTRODUCTION

Thank you for choosing the Havells Prolife Neo Air Fryer. This appliance is designed to provide a healthier way to cook your favorite meals with less oil, utilizing advanced Aerocrisp Technology for optimal results. Please read this manual thoroughly before use to ensure safe and efficient operation.



Image: Havells Prolife Neo Air Fryer, showcasing its sleek black design and digital display.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not block any ventilation openings.
- The appliance features an **Auto Shutoff** function for safety, turning off once the cooking cycle is complete.
- The **Cool Touch Handle** allows safe handling of the frying basket during and after operation.

PRODUCT COMPONENTS

The Havells Prolife Neo Air Fryer comes with the following components:

- 1N Main Unit (Air Fryer)
- 1N Frying Basket (4.5L capacity)
- 1N Grill Plate
- 1N Recipe Book

PROLIFE
neo



4.5L Bigger Frying Basket

To Serve Complete Family In
One Go



*Images stimulated for representation purpose only.

Image: The spacious 4.5L frying basket, designed for cooking generous portions.

PROLIFE
neo

Explore The Chef Within You

8 Pre-set Menus With Recipe
Book Included



*Images stimulated for representation purpose only.

Image: The included recipe book, offering various meal ideas for the air fryer.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Wash the frying basket and grill plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry all parts.
3. **Placement:** Place the main unit on a stable, level, and heat-resistant surface, ensuring adequate ventilation around the appliance. Do not place it directly against a wall or other appliances.
4. **Initial Run (Burn-in):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (356°F) to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

The Havells Prolife Neo Air Fryer features a Digital Display with Touch Control for easy operation.

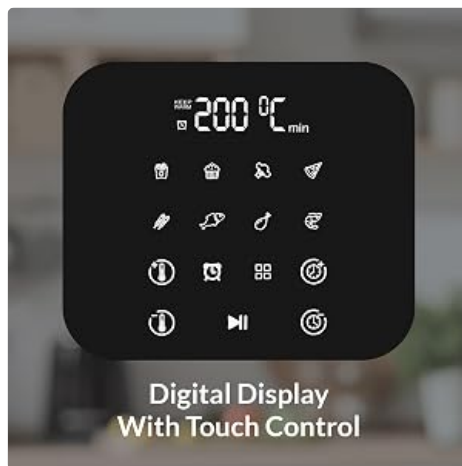


Image: Close-up of the digital display and touch control panel.

Basic Operation:

1. **Prepare Food:** Place your ingredients into the frying basket. Ensure not to overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Plug in the air fryer. The display will illuminate.
4. **Set Temperature and Time:**
 - Use the temperature control buttons to adjust the cooking temperature (up to 200°C).
 - Use the timer control buttons to set the cooking time (up to 60 minutes).
5. **Use Pre-Set Menus:** The air fryer features 8 pre-set menu options for common dishes. Select the desired pre-set icon on the digital display. The appliance will automatically set the optimal temperature and time.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
7. **Shaking/Flipping Food:** For even cooking, especially with smaller items, you may need to shake or flip the food halfway through the cooking time. Carefully pull out the basket using the **Cool Touch Handle**, shake/flip, and reinsert. The air fryer will resume cooking automatically.
8. **Completion:** The air fryer will beep when the cooking time is complete and automatically shut off (**Auto Shutoff**).
9. **Remove Food:** Carefully pull out the basket and transfer the cooked food to a serving dish.

Aerocrisp Technology:

This air fryer utilizes **Aerocrisp Technology**, which ensures 360-degree rapid hot air circulation. This technology allows you to cook with up to 85% less oil, achieving a crispy exterior and tender interior for your food.

PROLIFE
neo



Aerocrisp Technology: 360° Air Circulation

Crispy Outside, Juicy Inside!

*Images stimulated for representation purpose only.

Image: Diagram illustrating the 360-degree hot air circulation within the air fryer.

PROLIFE
neo



**Cook Food With 85%
Less Oil#**
For Guilt Free Indulgence!



#T&C Apply
*Images stimulated for representation purpose only.



Image: Visual representation of cooking with significantly less oil using the air fryer.

Special Features:

- **Auto Restart:** In case of a power outage, the air fryer will resume cooking with the previously set parameters once power is restored.
- **Compact Design:** The appliance is designed to fit conveniently on your kitchen countertop.

Video Guide: Making Protein-Rich Brownies

Your browser does not support the video tag.

Video: A short demonstration on how to prepare protein-rich brownies using the Havells Prolife Neo Air Fryer. This video illustrates the process from mixing ingredients to baking and decorating.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. Cleaning the Basket and Grill Plate:

- Wash the frying basket and grill plate with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residues, soak the basket in hot water with some dish soap for about 10 minutes before cleaning.
- *Note: The frying basket and grill plate are not dishwasher safe.*

3. Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth.
- Clean the interior of the appliance with a soft, damp cloth. Avoid using abrasive cleaners or scouring pads.
- Do not immerse the main unit in water or any other liquid.

4. **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.

TROUBLESHOOTING GUIDE

If you encounter any issues with your Havells Prolife Neo Air Fryer, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working. Frying basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Push the frying basket firmly into the main unit until it clicks.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/flipped. Temperature/time settings incorrect.	Do not overfill the basket; cook in smaller batches if necessary. Shake or flip food items halfway through cooking. Adjust temperature and time according to the recipe or food type.
White smoke coming from the appliance.	Grease residue from previous use. High fat content food.	Clean the frying basket and interior thoroughly after each use. For high-fat foods, place a heat-resistant dish at the bottom of the basket to catch excess oil.
Food is not crispy.	Insufficient cooking time or temperature. Moisture in food.	Increase cooking time or temperature slightly. Pat food dry before air frying. A light coating of oil can also help.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Havells Prolife Neo Air Fryer
Model Number	GHCAFEPK150
Brand	Havells
Capacity	4.5 Litres
Wattage	1500 Watts
Voltage	230 Volts

Feature	Detail
Control Method	Touch (Digital Display)
Max Temperature Setting	200 Degrees Celsius
Timer	Up to 60 Minutes
Air Frying Technology	Aerocrisp Technology (360° Air Circulation)
Special Features	Programmable, Temperature Control, Timer, 8 Pre-Set Menus, Auto Restart, Auto Shutoff, Cool Touch Handle
Product Dimensions	35D x 37.5W x 35H Centimeters
Item Weight	4 kg
Material	Acrylonitrile Butadiene Styrene (ABS)
Dishwasher Safe	No

WARRANTY AND SUPPORT

The Havells Prolife Neo Air Fryer comes with a**2-Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or any other inquiries, please contact Havells customer service. Keep your purchase receipt as proof of purchase.

Manufacturer Contact Information:
HAVELLS INDIA LIMITED
QRG Towers, 2D, Sec- 126, Expressway, Noida - 201304 UP (India)
Tel: +91 - 120 - 4771000

For more information, you may also visit the official Havells website or refer to the contact details provided in your warranty card.