Manuals+

Manuals.plus / › DAIKIN / › Daikin 1.8 Ton 2 Star Fixed Speed Split AC (FTE60U) User Manual

DAIKIN FTE60U

Sign in to save this manual Sign in to bookmark this manual and keep private notes.

Daikin 1.8 Ton 2 Star Fixed Speed Split AC (FTE60U) User Manual

Model: FTE60U

Advertisements

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Daikin 1.8 Ton 2 Star Fixed Speed Split Air Conditioner, model FTE60U. Please read this manual thoroughly before using the unit and keep it for future reference.

Safety Information

Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Advertisements

- Ensure the unit is installed by a qualified technician.
- Do not insert fingers or objects into the air inlet/outlet.
- Do not operate the unit with wet hands.
- Turn off the power supply before cleaning or maintenance.
- Keep children away from the unit.

Package Contents

Verify that all items listed below are included in your package:

Advertisements

- 1 Indoor Unit
- 1 Outdoor Unit
- 1 Remote Control
- User Manual (this document)
- Warranty Card
- 3m Copper wire/Interconnecting pipe

Setup and Installation

Installation of this split air conditioner requires professional expertise. It is strongly recommended that installation be performed by a certified Daikin service technician to ensure proper functioning and safety.

Advertisements

Key Installation Considerations:

- **Location:** Choose a location for the indoor unit that allows for even air distribution and easy access for maintenance. The outdoor unit should be placed in a well-ventilated area, away from direct sunlight or obstructions.
- **Power Supply:** Ensure the electrical supply meets the unit's requirements (230 Volts, 1855 Watts). A dedicated circuit is recommended.
- **Drainage:** Proper drainage for condensate water from the indoor unit is crucial to prevent leaks.
- **Refrigerant Piping:** The 3m copper wire/interconnecting pipe connects the indoor and outdoor units. Ensure connections are secure and leak-free.



Image: Daikin FTE60U Split AC indoor unit installed in a room, with the outdoor unit visible outside. This illustrates the typical setup of the air conditioning system.

Operating Instructions

Your Daikin AC is designed for user-friendly operation. All primary functions are controlled via the supplied remote control.

Advertisements

Remote Control Overview:



Image: The remote control for the Daikin FTE60U AC, showing buttons for Power, Mode, Fan, Temperature adjustment, Swing, Power Chill, Econo, Coanda, Good Sleep, Off Timer, On Timer, and Cancel.

- **ON/OFF Button:** Press to turn the unit on or off.
- **MODE Button:** Cycle through operating modes: Cool, Dry, Fan.
- **TEMP Buttons (Up/Down Arrows):** Adjust the desired temperature.
- **FAN Button:** Select fan speed (Auto, Low, Medium, High).
- **SWING Button:** Control the vertical airflow direction.
- **POWERCHILL Button:** Activates rapid cooling for quick temperature reduction.
- **ECONO Button:** Engages energy-saving operation.
- **COANDA Button:** Activates Coanda airflow for uniform cooling.
- **GOOD SLEEP Button:** Optimizes temperature settings for comfortable sleep.
- **TIMER Buttons (ON/OFF):** Set specific times for the unit to turn on or off.

Operating Modes:

- **Cool Mode:** Provides cooling. Set your desired temperature.
- **Dry Mode:** Reduces humidity in the room without significant cooling.
- **Fan Mode:** Circulates air without cooling or heating.

Maintenance


Regular maintenance ensures optimal performance and longevity of your AC unit. Always disconnect power before performing any maintenance.

Air Filter Cleaning:

The air filter should be cleaned regularly, typically every two weeks, or more often depending on usage and air quality.

1. Open the front panel of the indoor unit.
2. Remove the air filters.
3. Clean the filters using a vacuum cleaner or wash them with water. If washing, ensure they are completely dry before re-installing.
4. Re-install the filters and close the front panel.

Advertisements

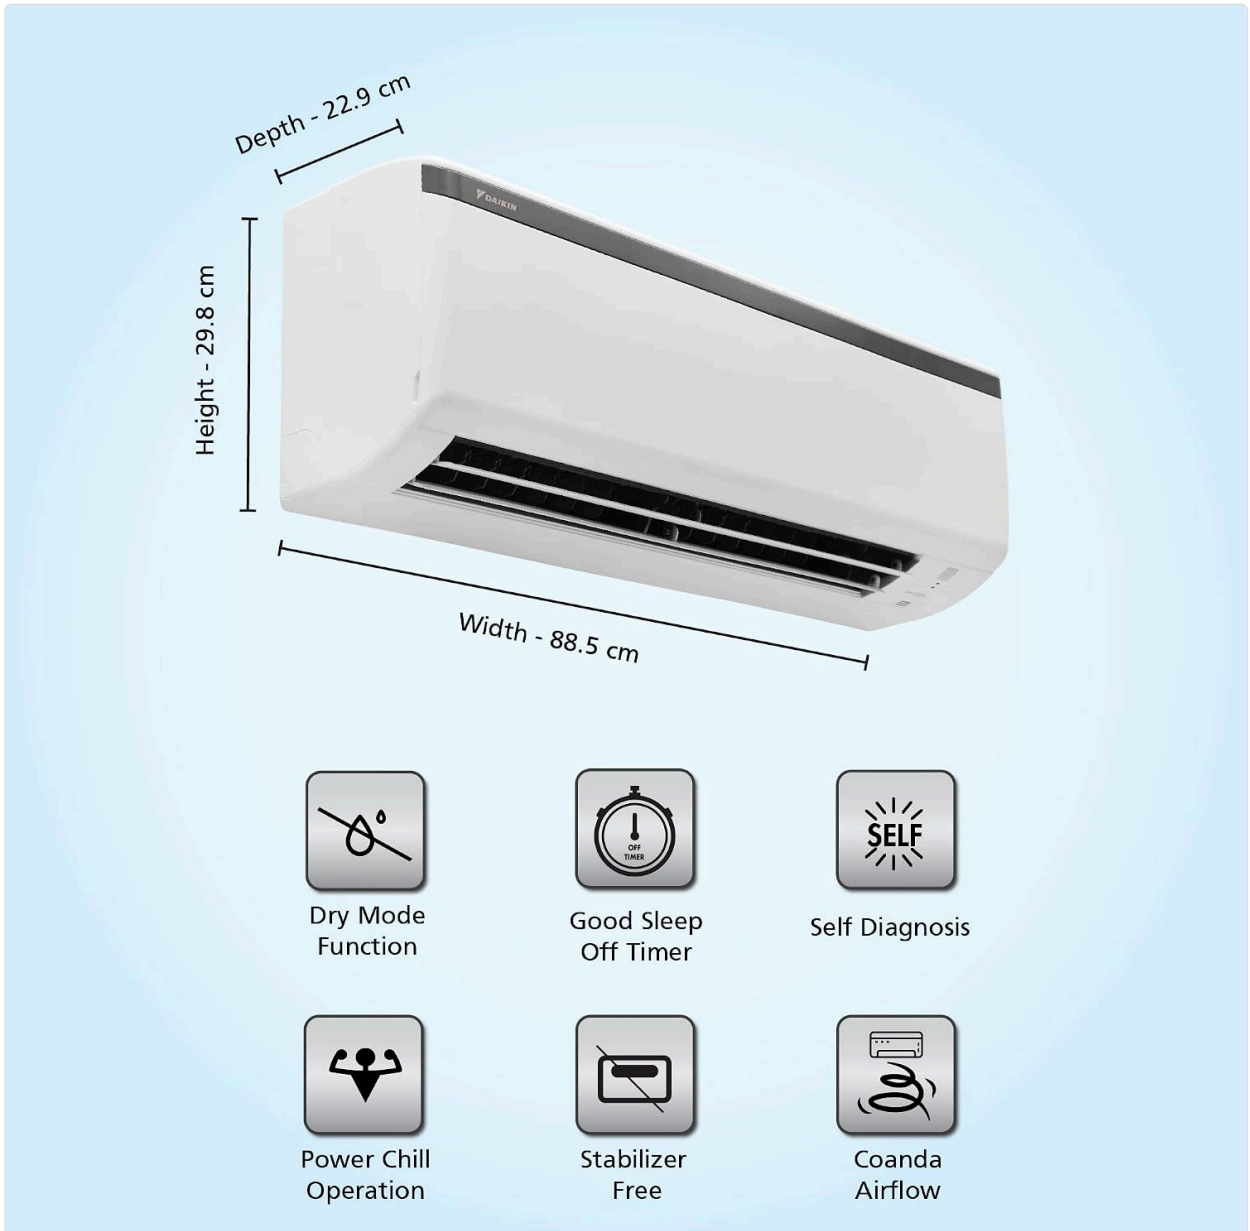

visualize the unit for maintenance access.

Other Maintenance Tips:

- Wipe the exterior of the indoor unit with a soft, dry cloth. Do not use harsh chemicals.
- Ensure the outdoor unit's coils are free from debris and obstructions.
- Schedule annual professional servicing to check refrigerant levels, electrical connections, and overall system health.

Troubleshooting

Before contacting service, review the following common issues and solutions:

Advertisements

Problem	Possible Cause	Solution
Unit does not operate	No power; Remote control batteries dead; Timer set.	Check power supply; Replace remote batteries; Cancel timer setting.
Insufficient cooling	Dirty air filter; Doors/windows open; Temperature setting too high; Obstruction to airflow.	Clean air filter; Close doors/windows; Lower temperature setting; Remove obstructions.
Unusual noise	Loose parts; Unit not level; Foreign object in fan.	Contact service technician.
Water leakage from indoor unit	Clogged drain pipe; Improper installation.	Contact service technician.

If the problem persists after attempting these solutions, please contact Daikin customer support.

Specifications

Detailed technical specifications for the Daikin FTE60U Split AC:

Feature	Detail
Brand	DAIKIN
Model Name	FTE60U
Capacity	1.8 tons
Cooling Power	6.4 Kilowatts
Energy Efficiency (BEE Star Rating)	2 Star (as per BEE guidelines on or before 30th June 2022)
Seasonal Energy Efficiency Ratio (SEER)	3.45
Annual Energy Consumption	1435.97 Kilowatt Hours Per Year
Refrigerant	R-32 (Environmental friendly - no ozone depletion potential)
Compressor Type	Reciprocating
Condenser Coil Material	Copper

Feature	Detail
Indoor Unit Dimensions (D x W x H)	22.9D x 88.5W x 29.8H Centimeters
Outdoor Unit Dimensions (D x W x H)	30D x 84.5W x 59.5H Centimeters
Indoor Unit Weight	11 kg
Outdoor Unit Weight	33 kg
Voltage	230 Volts
Control Method	Remote Control
Special Features	Dehumidifier, Dry mode, Dust Filter, Fast Cooling (Power Chill), Good sleep off timer, High Ambient Operation upto 50°C, Self Diagnosis, Coanda airflow.

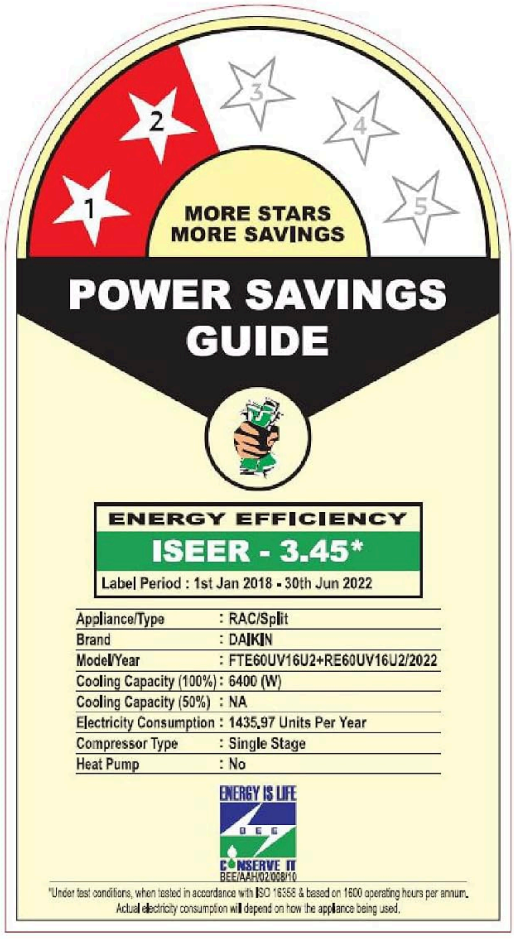


Image: Energy Efficiency Label for Daikin FTE60U, showing a 2-star rating and an ISEER of 3.45, with an annual electricity consumption of 1435.97 units per year.

Warranty and Support

Warranty Information:

Your Daikin FTE60U AC comes with the following warranty:

- **Product:** 1 Year
- **Condenser:** 1 Year
- **Compressor:** 5 Years

Please retain your purchase receipt and warranty card for any warranty claims. The warranty covers manufacturing defects under normal use conditions.

Advertisements

Customer Support:

For technical assistance, service requests, or warranty claims, please contact Daikin customer support. You can find contact details on your warranty card or the official Daikin India website.
Manufacturer: Daikin Airconditioning India Pvt. Ltd.
Address: 210, 1st Floor, Okhla Industrial Area, Phase 3, Delhi 110020

Advertisements

For further information, you may visit the Daikin Store on Amazon.

© 2026 Daikin Airconditioning India Pvt. Ltd. All rights reserved.

Advertisements

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

DAIKIN FTE60U

KEEP EXPLORING MANUALS, GUIDES, AND SUPPORT DOCS.

Search model numbers, browse help resources, and jump straight into the next PDF manual or troubleshooting page without losing your place.

DAIKIN FTE60U manuals, g

Search Manuals+

EXPLORE

Deep Search

Upload

Login

MANUALS+

Home

About Us

Privacy Policy

Login

GUIDES

Amazon Manuals

AliExpress Manuals

Video Guides

Login

FOLLOW

@manualsplus

YouTube

LinkedIn

Facebook

Manuals+

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners.

Save manuals, notes, uploads, and questions

Sign in with Google, X, or a passkey to keep private notes on saved manuals, track public uploads, and revisit questions you posted.

Open login options

Privacy Policy · **DMCA**