



User Manual


Direct cool Refrigerator

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)

Contents / विषय सूची


1. Parts identification.	01
पाटर्स की पहचान	
2. Technical and commercial product information	02
तकनीकी और व्यावसायिक प्रॉडक्ट विवरण	
3. Installation	03-04
इंस्टॉलेशन	
4. Operation	05
कार्य पद्धति	
5. Cleaning.	06
सफ़ाई	
6. Useful suggestions for storage and operation	07
रखने और कार्य पद्धति से जुड़े उपयोगी सुझाव	
7. Before calling for service.	08
सर्विस के लिए कॉल करने से पहले	
8. Safety precautions	09-10
सुरक्षा संबंधी सावधानियाँ	
9. Frequently asked questions.	11
अक्सर पूछे जाने वाले प्रश्न	
10. Warranty	12-14
वॉरंटी	

Parts identification / पार्ट्स की पहचान

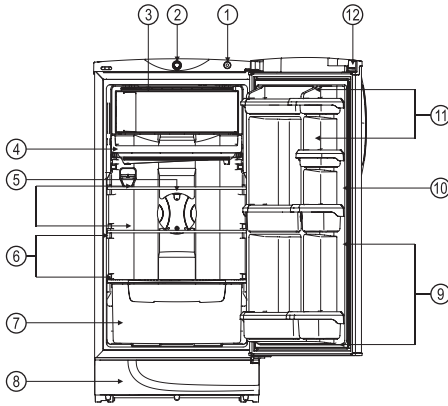

1. Light Switch
2. Thermostat (Temperature control) and Defrost Button
3. Ice Making Compartment*
4. Easy Slide Shelf
5. Lamp
6. Adjustable Shelves
7. Vegetable Tray
8. Dry Storage
9. Bottle Shelves
10. Step Utility Shelves
11. Utility Shelves
12. Door Lock

Applicable for Edge, Edge SX and Edge Pro models.

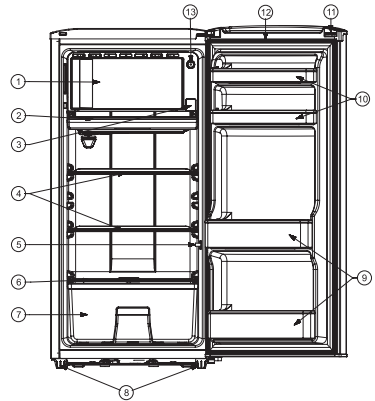


1. Ice Making Compartment
2. Easy Slide Shelf
3. Light Bulb
4. Toughened Glass Shelves
5. Light Switch
6. Vegetable Tray cover
7. Vegetable Tray
8. Levelling Leg*
9. Bottle Shelves
10. Utility Shelves
11. Door Lock
12. Door Gasket
13. Thermostat (Temperature control) and Defrost Button

Applicable for Edge Neo, Edge Rio, Edge Rio+, Edge Jazz and Edge Marvel models

Image shown is representative only. Some parts are specific to certain models. Hence, there could be some parts which are not in your refrigerator.

*Features may vary by models

Technical and commercial product information

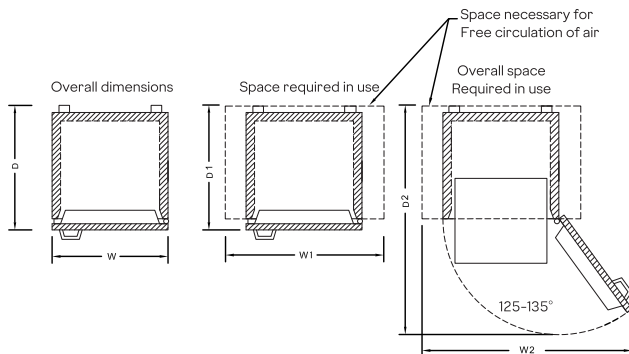

Platform	Total Volume (L)*	Product Dimension (mm)**					Space Required in Use (mm)**			Overall Space Required in Use (mm)**	
		Height (H)		Width (W)	Depth (D)		Depth (D1)		Width (W1)	Depth (D2)	Width (W2)
		W/o Drawer	With Drawer		W/o Handle	With Handle	W/o Handle	With Handle			
Edge pro	185	1250	1250	577	640	667	640	667	877	1144	1095
	205	1340	1340	577	640	667	640	667	877	1144	1095
	234	1480	1480	577	640	667	640	667	877	1144	1095
Jazz	180	1190	-	580	607	-	607	-	880	1119	1103
Neo	180	1190	1300	575	627	660	627	660	872	1145	1130
Rio	180	1190	1310	575	625	640	625	640	875	1138	1110
Rio plus	180/183	1260	1260	575	626	660	626	660	875	1145	1120
Marvel	184	1190	1310	575	625	640	625	640	875	1138	1110
	194	1245	1353	575	-	664	-	664	875	1154	1110
	207	1312	1420	575	-	664	-	664	875	1154	1110
	238	1442	1553	575	-	680	-	680	875	1170	1110
	268	1585	-	575	-	680	-	680	875	1170	1110
Edge	175	1176	1176	574	622	645	622	645	874	1140	1020
	180	1176	1176	574	622	645	622	645	874	1140	1020
	186	1256	1256	574	622	645	622	650	874	1140	1170
	206	1360	1360	574	622	645	622	650	874	1140	1170
	233	1500	1500	574	622	645	622	650	874	1140	1170
Champ	97	850	-	487	568	-	568	-	787	1002	972

Due to continuous improvements happening in products the specification mentioned in above table may change without prior notice.


Installation

1. Select the right location

- Avoid extreme heat and cold. Place your refrigerator away from direct sunlight and heat sources such as cooking stove and air drafts like windows and fans. Keep away from the gas cylinder.
- Place your refrigerator close to an electric outlet. Do not use extension cord.
- For safety purposes, remove all packaging related material like thermocol, polythene etc. before installation.
- Refrigerators should operate in rated climate class (T) for better performance (+16°C to +43°C).

2. While installing

- Provide at least 6 inches space on both sides to ensure adequate air circulation.
- There is stopper *bracket at the back side of refrigerator which needs to be open as shown in image 1.
- Install the refrigerator on a flat and firm surface.
- If the floor is not level, use packing to keep your refrigerator stable.
- In models with levelling legs, rotate the front two legs to level the refrigerator. For safety purposes, adjust the front side a little higher than the back side.
- In case of model with levelling leg, keep legs such that it supports auto closure of door.

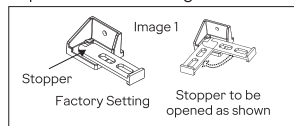

*Brackets are in selected model

3. Connect

- Your refrigerator operates on AC 230 V, 50 Hz power supply. A voltage stabiliser is advisable if there is a wide fluctuation in supply voltage. Connect the plug to a 3 pin, 5 amps socket. **Ensure the wall socket is properly earthed by a qualified electrician.** It is safe to use a socket with a fuse and a switch.
- Wires should be kept off the floor to prevent short circuits in case of water leakage.
- Switch on the power supply. Set the temperature at maximum setting and let the machine run for about 4 hours. Then turn the knob to adjust your desired setting.

4. Recycle

- After installing, recycle/reuse the corrugated box fitments and polythene cover/straps to help the environment.


इंस्टॉलेशन

1. सही जगह चुनें

- बहुत ज्यादा गर्मी और ठंड से दूर रखें। अपने रेफ्रिजरेटर को खुली धूप और कुकिंग स्टोव जैसे गर्म के स्रोतों और खिड़कियों, पंखों जैसे हवा के स्रोतों से दूर रखें। गैस सिलिंडर से दूर रखें।
- अपने रेफ्रिजरेटर को इलेक्ट्रिक आउटलेट के पास रखें। एक्सटेंशन कॉर्ड का इस्तेमाल न करें।
- सुरक्षा के लिए, थर्मोकॉल, पॉलीथीन जैसी सभी पैकेजिंग संबंधी सामग्रियों को इंस्टॉलेशन से पहले हटा दें।
- रेफ्रिजरेटर को बेहतर परफॉर्मेंस के लिए रेटेड क्लायमेट श्रेणी (T) में चलाया जाना चाहिए। (+16°C +43°C)

2. इंस्टॉल करते समय:

- हवा का पर्याप्त बहाव बनाए रखने के लिए दोनों तरफ कम से कम 6 इंच की जगह रखें।
- रेफ्रिजरेटर के पीछे स्टॉपर ब्रैकेट* होता है, जिसे तसवीर 1 में दिखाए गए तरीके से खोला जाना चाहिए
- रेफ्रिजरेटर को एक समतल और कठोर सतह पर इंस्टॉल करें
- अगर फर्श समतल नहीं है, तो रेफ्रिजरेटर को स्थिर रखने के लिए पैकेजिंग का इस्तेमाल करें।
- लेवलिंग लेम्स वाले मॉडल्स में, रेफ्रिजरेटर को समतल करने के लिए आगे के दो लेम्स को घुमाएं। सुरक्षा के उद्देश्य से, आगे के हिस्से को पीछे से थोड़ा सा ऊपर रखें।
- लेवलिंग लेग वाला मॉडल होने पर लेम्स को इस तरह रखें, कि यह यह रेफ्रिजरेटर की अपने-आप बंद होने में सहायता करे।

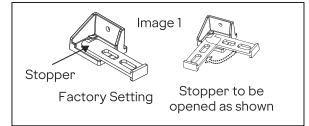

*Brackets are in selected model

3. जोड़ें: ⚠

- आपका रेफ्रिजरेटर AC 230 V, 50 Hz पावर सप्लाई पर काम करता है। अगर सप्लाई वोल्टेज में बहुत ज्यादा उतार-चढ़ाव होता है, तो एक वोल्टेज स्टेबिलाइजर का इस्तेमाल करना चाहिए। प्लग को एक 3 पिन, 5 एम्पस सॉकेट में लगाएं। **सुनिश्चित करें कि दीवार का सॉकेट एक सुशिक्षित इलेक्ट्रिशियन द्वारा सही तरीके से अर्थ किया गया है।**
- तारों को फर्श से दूर रखा जाना चाहिए, ताकि पानी का रिसाव होने पर शॉर्ट सर्किट न हो।
- पावर सप्लाई को ऑन करें। तापमान के सप्लाई को अधिकतम सेटिंग पर रखें और मशीन को लगभग 4 घंटे तक चलने दें। इसके बाद नॉब को अपनी मनचाही सेटिंग पर एडजस्ट करें।

4. रीसाइकल (पुनर्चक्रण) करें:

- इंस्टॉल करने के बाद, पर्यावरण की सहायता के लिए कोरुगेटेड बॉक्स फिटमेंट्स और पॉलीथीन कवर/पट्टियों को रीसाइकल (पुनर्चक्रित) करें या उनका दुबारा इस्तेमाल करें।


Operation

1. Temperature Setting

- Set the temperature control knob towards maximum/coldest during peak summer hours or more food load. Set it to minimum during winters or less food load.
- Temperature is affected by several factors like refrigerator location, room temperature, door openings, humidity etc. So, adjust temperature accounting to these factors.
- Do not set the temperature colder than required as it will increase energy consumption.
- Do not open the door frequently. Ensure the door is closed properly after every use to avoid cooling loss and other safety hazards.

2. Defrosting

- Regular defrosting helps remove excess frost and in proper cooling. It reduces running time and therefore power consumption.
- Remove all stored items from the ice making compartment before you defrost.
- To defrost, press the button on the temperature control knob. The frost will melt and drip into the evaporation tray, from where it will eventually evaporate.
- After defrosting is finished, the refrigerator will restart automatically.
- Defrosting should be done after every 3 days. Hot and humid conditions will lead to faster frost formation, needing frequent defrosting. Frost should not exceed 6mm. Delay in frosting would lead to water spilling in the refrigerator. Do not use sharp objects to remove ice from the ice making compartment. Avoid opening the door during defrosting.




कार्य पद्धति

1. तापमान की सेटिंग

- बहुत ज्यादा गर्मी के दिनों में या ज्यादा लोड के दिनों में तापमान के कंट्रोल नॉब को अधिकतम/सबसे ठंडे स्तर पर रखें। सर्दियों या कम लोड के दिनों में इसे न्यूनतम पर रखें।
- तापमान कई घंटों से प्रभावित होता है, जैसे रेफ्रिजरेटर की जगह, कमरे का तापमान, दरवाजे का खुलना, ह्यूमिडिटी (आर्द्रता) इत्यादि। इसलिए इन चीजों को ध्यान में रखते हुए तापमान को एडजस्ट करें।
- तापमान को जरूरत से ज्यादा ठंडा न रखें। इससे बिजली की खपत बढ़ जाएगी।
- बार-बार दरवाजे को न खोलें। कूलिंग के नुकसान और अन्य सुरक्षा संबंधी खतरों से बचने के लिए हर बार इस्तेमाल के बाद सुनिश्चित करें कि दरवाजा अच्छी तरह बंद है।

2. डीफ्रॉस्टिंग

- नियमित डीफ्रॉस्टिंग अतिरिक्त फ्रॉस्ट को निकालने में मदद करती है और उचित कूलिंग देती है। यह चलाने का समय कम करती है, जिससे बिजली की बचत होती है।
- डीफ्रॉस्ट करने से पहले सभी चीजों को आइस मेकिंग कम्पार्टमेंट से हटा लें।
- डीफ्रॉस्ट करने के लिए, टेम्प्रेचर कंट्रोल नॉब पर दिया गया बटन दबाएं। फ्रॉस्ट पिघल कर एवैपोरेशन ट्रे में चली जाएगी, जहाँ से यह अंत में इवैपोरेट यानि कि वाष्पीकृत हो जाएगी।
- डीफ्रॉस्टिंग पूरी हो जाने के बाद, रेफ्रिजरेटर अपने आप चालू हो जाएगा।
- डीफ्रॉस्टिंग हर तीन दिन बाद की जानी चाहिए। गर्म और नम तापमान में फ्रॉस्ट ज्यादा जल्दी जमती है, जिसके लिए ज्यादा बार डीफ्रॉस्टिंग करनी पड़ती है। फ्रॉस्ट 6mm से ज्यादा नहीं जमनी चाहिए। फ्रॉस्टिंग में किसी भी तरह की देरी होने पर रेफ्रिजरेटर से पानी छलकने लगेगा। आइस मेकिंग कम्पार्टमेंट से बर्फ निकालने के लिए नुकीली चीजों का इस्तेमाल न करें। डीफ्रॉस्टिंग के दौरान दरवाजे को न खोलें।



Cleaning

- It is advisable to clean your refrigerator once a month.
- Before cleaning, switch it off. Remove the plug and all food items.
- Use a mild soap solution and wipe gently to clean both interior and exterior. Dry with clean cloth and leave the door open to dry. Clean oil stains and any spilled liquid immediately to avoid any damage to the refrigerator.
- Do not let water go into the light bulb and other electrical components. Never use any chemicals or abrasives for cleaning.
- Cockroaches and insects can only go in through the door. So, close it properly after every use.
- Keep the exterior dry to avoid rusting, especially the lower front edge and the bottom surfaces of the door.
- Periodic cleaning of your refrigerator, especially gaskets, will prevent it from getting loose and having to replace the same.
- Keeping the gasket unclean may negatively affect your refrigerator's performance. Always ensure that the gasket is installed properly after cleaning.
- Spillage of liquids (fruit juices/cold-drinks/sweet syrups/lassi) or solid sweet food substances on the refrigerator's external/internal surfaces or the gasket may make the surfaces or gasket sticky during usage. Customers are advised to immediately clean up with normal water and then wipe it with a dry cloth.

सफाई

- आपके रेफ्रिजरेटर को महीने में एक बार साफ करना अच्छा होता है
- सफाई से पहले, इसे बंद कर लें। प्लग को और सभी खाने की चीजों को निकाल लें।
- एक सौम्य साबुन के घोल का इस्तेमाल करें और इंटीरियर तथा एक्सटीरियर दोनों को हल्के हाथों से पोंछ कर साफ करें। साफ कपड़े से पोंछ कर सूखने के लिए दरवाजे को खुला छोड़ दें। तेल और किसी भी छलके हुए लिक्विड के दागों को साफ कर लें, ताकि रेफ्रिजरेटर को कोई नुकसान न पहुंचे।
- लाइट बल्ब या और अन्य बिजली के हिस्सों के भीतर पानी न जाने दें। सफाई के लिए कभी भी किसी केमिकल या अब्रेसिव (घिसावट पैदा करने वाले पदार्थ) का इस्तेमाल न करें।
- कॉक्रोचेज (तिलचट्टे) और कीड़े सिर्फ दरवाजे से ही भीतर जा सकते हैं। इसलिए हर बार इस्तेमाल करने के बाद उसे अच्छी तरह बंद करें।
- जंग से बचने के लिए एक्सटीरियर को सूखा रखें। खास तौर पर सामने के निचले किनारों और दरवाजे के निचले हिस्सों का ध्यान रखें।
- रेफ्रिजरेटर, और खास तौर पर गास्केट्स की समय-समय पर सफाई उसे दीला नहीं होने देगी और उसे बदलने की जरूरत नहीं पड़ेगी।
- गास्केट को गंदा रखना परफॉर्मेंस पर नकारात्मक प्रभाव डाल सकता है। और सफाई के बाद सुनिश्चित करें कि गास्केट सही तरीके से लगा हुआ है।
- रेफ्रिजरेटर की भीतरी/बाहरी सतह पर पेय पदार्थ (फलों का रस/कोल्ड ड्रिंक्स/मीठे सिरप/लस्सी) या ठोस मीठे खाद्य पदार्थों के छलकने से गास्केट इस्तेमाल के दौरान चिपचिपा हो सकता है। ग्राहकों को सलाह दी जाती है कि वे तुरंत इसे सादे पानी से साफ करें और फिर सूखे कपड़े से पोंछ दें।

Useful suggestions for storage and operation

- All food should be fresh before refrigeration, as food can be preserved, not rejuvenated.
- Frozen foods are not safe for freezing if they are thawed before storing in the fridge.
- It is better to freeze meat in bigger pieces. Avoid mincing the meat in advance.
- All frozen foods should either be packed in containers or wrapped in polythene bags or aluminum foil.
- Bread, cake and pastries should be properly wrapped in containers.
- Butter, margarine and other fats can be stored in their original wrappings and in covered containers if in use.
- Loosely wrap all vegetables, especially leafy vegetables in polythene bags.
- Fruits and vegetables with strong odour should be wrapped tightly.
- Certain vegetables like fresh beans and lady fingers should not be washed before storing. If fruits and vegetables are washed, drain all the water before storing as it increases the possibility of spoilage and decay.
- Mushrooms, melons and peaches can only be chilled and not preserved.
- Hot food/Boiled milk should be cooled down to room temperature before storing.
- Ginger, garlic and red-chillies paste can stay in the ice making compartment and chutneys in the main fridge compartment
- Ice creams should always be stored in the ice making compartment with max cooling settings. It may still stay slightly soft as the retailers store ice creams in deep freezers.
- Bottles containing water and other liquids should be tightly capped. Should not be stored in the ice making compartment section.
- Unopened canned food need not be stored in the refrigerator.

स्टोरेज और इस्तेमाल के लिए उपयोगी सुझाव

- सभी खाद्य पदार्थ रेफ्रिजरेशन से पहले ताज़े होने चाहिए। खाद्य पदार्थों को खराब होने से बचाया जा सकता है, लेकिन खराब चीज़ों को फिर से ठीक नहीं किया जा सकता।
- फ्रोजन फूड्स जमाने के लिए सुरक्षित नहीं होते, अगर उन्हें फ्रिज में रखने से पहले पिघलाया गया हो।
- मांस को बड़े टुकड़ों में फ्रीज करना बेहतर होता है। पहले से मांस का कीमा न बनाएं।
- सभी फ्रोजन फूड्स को या तो डब्बों में पैक किया जाना चाहिए या पॉलीथीन बैग्स या अल्युमिनियम फॉइल में लपेटा जाना चाहिए।
- ब्रेड, केक और पेस्ट्री को डब्बों में अच्छी तरह बंद किया जाना चाहिए।
- मक्खन, मारिश और अन्य फैट्स (वसाओं) को उनकी वास्तविक रैफ्रिज में रखें और इस्तेमाल में होने पर बंद डब्बों में रखें।
- सभी सब्जियों को, खास तौर पर पत्तियों वाली सब्जियों को पॉलीथीन बैग्स में ढीला बांध दें।
- तेज़ गंध वाले फलों और सब्जियों को अच्छी तरह लपेटा जाना चाहिए।
- ताज़ी बीन्स और भिंडी जैसी कुछ सब्जियों को रखने से पहले धोना नहीं चाहिए। अगर फलों और सब्जियों को धोया गया है, तो रखने से पहले पानी को निकाल लें, क्योंकि इससे उनके खराब होने और सड़ने की संभावना बढ़ जाती है।
- मशरूम, तरबूज-खरबूज और आड़ू को सिर्फ ठंडा किया जा सकता है, सुरक्षित नहीं रखा जा सकता।
- गर्म चीज़ों/उबले हुए दूध को रखने से पहले ठंडा करके कमरे के तापमान पर लाया जाना चाहिए।
- अवरक, लहसुन और लाल मिर्च के पेस्ट को आइस मेकिंग कम्पार्टमेंट में और घटनी को मेन फ्रिज कम्पार्टमेंट में रखा जा सकता है।
- आइस क्रीम को आइस मेकिंग कम्पार्टमेंट में अधिकतम कूलिंग सेटिंग्स पर रखना चाहिये। इसके बाद भी उनके थोड़े नर्म रहने की संभावना होती है, क्योंकि रीटेलर्स आइस क्रीम को डीप फ्रोज में रखते हैं।
- पानी और अन्य लिक्विड्स वाली बोतलों पर कस कर ढक्कन लगाया जाना चाहिए। इन्हें आइस मेकिंग कम्पार्टमेंट सेक्शन में नहीं रखा जाना चाहिए।
- नहीं खोले गए कैंड फूड (डिब्बाबंद खाद्य पदार्थ) को रेफ्रिजरेट में रखने की आवश्यकता नहीं होती।

Before calling for service

If your refrigerator is not working properly, check the following before you call for service assistance:

1. Power plug is connected properly.
2. Fuse is intact and power supply is normal.
3. Temperature control knob is set correctly.
4. Defrosting has been done to eliminate excess frost.
5. Refrigerator is not crowded with little space between food items, blocking the air circulation inside.

To replace the lamp: Switch off the refrigerator. Disconnect the plug. Gently remove the bulb cover. Turn the lamp anti-clockwise to remove it. Replace it with the new 15W normal bulb/1.5W LED bulb and fit the lamp cover back.

Note: You may find water droplets on opening the door. This is normal condensation and not a defect.

सर्विस के लिए कॉल करने से पहले

अगर आपका रेफ्रिजरेटर सही तरीके से काम नहीं कर रहा है, तो सर्विस संबंधी सहायता के लिए कॉल करने से पहले निम्नलिखित की जाँच करें।

1. पावर प्लग सही तरीके से लगा हुआ है
2. फ्यूज सही है और पावर सप्लाय सामान्य है
3. टेम्प्रेचर कंट्रोल नॉब को सही तरीके से सेट किया गया है
4. अत्यधिक फ्रॉस्ट निकालने के लिए डीफ्रॉस्टिंग की गयी है
5. रेफ्रिजरेटर में खाने की चीजों को बहुत ज्यादा ठूस कर नहीं रखा गया है, जिससे भीतर की हवा बाधित हो रही हो।

लैम्प बदलने के लिए: रेफ्रिजरेटर को बंद करें। प्लग को निकाल लें। धीरे से बल्ब कवर को निकालें। लैम्प को निकालने के लिए उसे घड़ी की विपरीत दिशा में घुमाएं। इसकी जगह 15 W का सामान्य बल्ब/1.5 W LED बल्ब लगा दें और लैम्प कवर फिर से फिट कर दें।

ध्यान दें: आपको दरवाजा खोलने पर पानी की बूंदें दिखाई दे सकती हैं। यह सामान्य कंडेंसेशन (द्रवण) है, और कोई खराबी नहीं है।

Safety precautions

When using the refrigerator, always exercise these basic safety precautions to avoid injury and property damage:

- Locate, install and use the refrigerator properly in accordance with the instructions given in this user's guide.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the wall socket after switching off the power supply.
- Repair/replace the power cord immediately if its frayed or damaged. Do not use a power cord that shows cracks or damage by abrasion, rodents etc.
- Do not splash water on or in the vicinity of the refrigerator. It could cause an electrical leak or malfunction.
- Young children should be supervised to ensure that they do not play with the appliance.
- After your refrigerator is in operation, do not touch the cold surfaces in the ice making compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Don't refreeze frozen foods which have thawed completely. Eating such refrozen food could harm your health. Even partial thawing and refreezing reduces the quality of foods, particularly fruits, vegetables and prepared food.
- Unplug your refrigerator before cleaning or making any repairs. We strongly recommend that any servicing be performed by a qualified technician
- Do not store flammable sprays, vapour or liquids like gasoline, lacquer and paint, volatile chemicals like benzene or ether, evaporating liquids like perfumes, nailpolish removers etc inside the refrigerator. It may damage the food and some of these could also cause an explosion. Avoid storing these near the refrigerator as well.
- Do not use lubricants (lubricating oils, sprays, kerosene, WD-40 etc) on the hinges of the refrigerator doors. Some lubricants chemically react with plastics resulting in damage to doors.
- Do not tamper with the electrical circuit or the refrigerant circuit of the refrigerator.
- Do not keep anything above the refrigerator - eg. lighted candles, cloth cover, electric equipment like TV and lamp, etc.
- Refrigerators contain refrigerants and insulation contains gases, which must be disposed off professionally, to avoid any safety hazards.



Protection of Environment:

"Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that this product is not disposed as unsorted municipal waste.

This symbol is known as the "Crossed-out Wheelie Bin Symbol". It means that the product should not be disposed-off with your general house-hold waste. It should be disposed only through the company's collection centers with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** or visit **www.godrejenterprises.com/green-think** for details about authorized collection centers or any applicable buy back arrangement.

'This product is RoHS compliant'

सुरक्षा संबंधी सावधानियाँ

रेफ्रिजरेटर का इस्तेमाल करते समय, चोट और संपत्ति के नुकसान से बचने के लिए इन सामान्य सुरक्षा संबंधी सावधानियों का हमेशा पालन करें:

- इस उपभोक्ता निर्देशिका में दिए गए निर्देशों के अनुसार रेफ्रिजरेटर को रखें, इंस्टॉल करें और इस्तेमाल करें।
- कभी भी पॉवर कोर्ड खींच कर अपने रेफ्रिजरेटर को अनप्लग न करें। हमेशा पावर स्पलाय बंद करने के बाद प्लग को मजबूती से पकड़ें और सीधे वॉल सॉकेट से निकालें।
- अगर पावर कोर्ड मुड़ा हुआ या क्षतिग्रस्त है, तो तुरंत उसकी मरम्मत करें/उसे बदल दें। किसी भी ऐसे पावर कोर्ड का इस्तेमाल न करें, जो घिसावट, कतरने वाले प्राणियों के कारण क्षतिग्रस्त हो।
- रेफ्रिजरेटर पर या उसके आस-पास पानी न छलकाएं। इसके इलेक्ट्रिकल लीक या खराबी हो सकती है।
- छोटे बच्चों पर ध्यान देना चाहिए, ताकि वे उपकरण के साथ खेलें नहीं।
- जब आपका रेफ्रिजरेटर काम करने लग जाए, उसके बाद आइस मेकिंग कम्पार्टमेंट में ठंडी सतहों को छुएँ नहीं, खास तौर पर जब आपके हाथ नम या गीले हों। त्वचा इन बेहद ठंडी सतहों पर चिपक सकती है।
- फ्रोजन फूड्स (जमे हुए खाद्य पदार्थ) को दुबारा न जमाएं अगर वे पूरी तरह पिघल चुके हों। इस तरह की जमी हुई चीजें खाने से आपकी सेहत को नुकसान पहुंच सकता है। आंशिक रूप से पिघली हुई चीजों को भी दुबारा जमाने पर उनकी गुणवत्ता पर असर पड़ता है, खास तौर पर फल, सब्जियों और तैयार खाने को।
- सफाई या मरम्मत करने से पहले अपने रेफ्रिजरेटर को अनप्लग करें। हम सुझाव देते हैं कि किसी भी प्रकार की सर्विसिंग किसी सुशिक्षित तकनीशियन द्वारा ही की जानी चाहिए।
- ज्वलनशील स्त्रे, भाप या गैसोलीन, लैकर और पेंट जैसे द्रव, बेंजीन या ईंधन जैसे अस्थिर रसायन, पफरूम, नेलपॉलिश रिमूवर जैसी वाष्पीकृत होने वाली चीजें रेफ्रिजरेटर में न रखें। इससे खाद्य पदार्थ को नुकसान पहुंच सकता है और इनमें से कुछ विस्फोट का भी कारण बन सकते हैं। इन चीजों को रेफ्रिजरेटर के आस-पास भी न रखें।
- रेफ्रिजरेटर के दरवाजों के हिंज (कब्जों) पर ल्युब्रिकेंट्स (ल्युब्रिकेटिंग ऑइल, स्त्रे, केरोसीन, थर्ज-40 इत्यादि) का इस्तेमाल न करें। कुछ ल्युब्रिकेंट्स प्लास्टिक के साथ रासायनिक प्रतिक्रिया करते हैं, जिससे दरवाजों को नुकसान पहुंचता है।
- रेफ्रिजरेटर की इलेक्ट्रिकल सर्किट या रेफ्रिजरेटर सर्किट के साथ छेड़छाड़ न करें।
- रेफ्रिजरेटर के ऊपर कोई चीज न रखें – जैसे जली हुई मोमबत्ती, कपड़े कवर, टीवी जैसे बिजली के उपकरण और लैम्प इत्यादि।
- रेफ्रिजरेटर्स में रेफ्रिजरेटर्स होते हैं और इंसुलेशन में गैस होती है, किसी भी तरह के सुरक्षा संबंधी खतरे से बचने के लिए इन्हें पेशेवर तरीके से निकाला जाना चाहिए।



पर्यावरण की सुरक्षा

“पर्यावरण की सुरक्षा” गोदरेज के मूल सिद्धांतों में से एक है और हम यह सुनिश्चित करने में आपके सहयोग की उम्मीद करते हैं कि इस उत्पाद को नगरपालिका के अवर्गीकृत कूड़े के रूप में निष्कासित न किया जाए।

इस चिह्न को “क्रॉस-आउट थ्रीली बिन सिम्बॉल” कहा जाता है। इसका मतलब है कि इस उत्पाद को आपके सामान्य घरेलू कूड़े के साथ निष्कासित नहीं किया जाना चाहिए। इसे सिक्रे कंपनी के कलेक्शन सेंटर्स के माध्यम से विशेष व्यवस्था के साथ निष्कासित किया जाना चाहिए, ताकि पर्यावरण को कोई नुकसान न पहुंचे। कृपया गोदरेज अन्वायर्सजेज के प्राधिकृत कलेक्शन सेंटर्स या किसी भी कानून बाधक व्यवस्था की जानकारी के लिए कॉल करें: 080-6743-6743 या www.godrejenterprises.com/green-think देखें।

‘यह उत्पाद RoHS अनुरूप है’

Frequently asked questions

- Q. How often should I defrost my refrigerator?
- Ans. It is good to defrost the refrigerator every 3 days to avoid water spillage and ensure optimal cooling performance. You may need to do it more often depending on your temperature settings. It is a must to do at least once a week.
- Q. Is it ok to run my refrigerator on inverter or generator?
- Ans. You can use a generator if needed depending on its capacity, but inverters are not advisable.
- Q. How often should I clean my refrigerator?
- Ans. You should clean the refrigerator once a month as per instructions given in this guide.
- Q. Why is there moisture in the vegetable tray?
- Ans. As water in the vegetables evaporates, the vapours condense against the cold refrigerator tray surface resulting in water droplets.

अक्सर पूछे जाने वाले प्रश्न

- प्र. मुझे अपने रेफ्रिजरेटर को कितनी बार डीफ्रॉस्ट करना चाहिए?
- उ. पानी छलकने से बचने और कूलिंग का अच्छा प्रदर्शन सुनिश्चित करने के लिए रेफ्रिजरेटर को हर 3 दिन में डीफ्रॉस्ट करना अच्छा होता है। आपकी तापमान की सेटिंग के आधार पर आपको इसकी बारंबारता बढ़ानी पड़ सकती है। कम से कम सप्ताह में एक बार यह करना ज़रूरी है।
- प्र. क्या मेरे रेफ्रिजरेटर को इनवर्टर या जेनरेटर से चलाना उचित होगा?
- उ. क्षमता के आधार पर आप जेनरेटर का इस्तेमाल कर सकते हैं, लेकिन इनवर्टर के इस्तेमाल का सुझाव नहीं दिया जाता।
- प्र. मुझे मेरा रेफ्रिजरेटर कितनी बार साफ़ करना चाहिए?
- उ. आपको इस मार्गदर्शिका में दिए गए निर्देशों के अनुसार रेफ्रिजरेटर को साफ़ करना चाहिए।
- प्र. वेजीटेबल ट्रे में नमी क्यों है?
- उ. सब्जियों में से पानी वाष्पीकृत होने के कारण रेफ्रिजरेटर के ट्रे की ठंडी सतहों पर भाप जमने लगती है जिससे पानी की बूंदें बनती हैं।

Warranty / वॉरंटी

The Godrej Refrigerator comes with warranty* (refer Terms & Conditions for details) on COMPRESSOR and a ONE year warranty on all other parts (Except bulb, glass and add-on rubber and plastic parts) from the date of purchase, against defective material or workmanship. In case of any such defect found during the first year from date of purchase, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) will undertake repairs to the warranted part free of charge, subject to the terms and conditions below. In the warranty period beyond the first year from date of purchase, only the compressor will be provided free of cost. However, the appliance will be repaired on payment of necessary charges

Instructions for the customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorized company Service Center for obtaining warranty service and provide the defect, model details & serial no.
4. Earthing of the appliance is necessary to ensure safety.
5. Product will function between +/-5% of the rated voltage. For any fluctuation beyond the specified limit, company shall not be responsible, and the warranty stands terminated.
6. Frequency must be between 5% variation of 50 Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock etc. and in turn, the warranty stands terminated.
7. The product must be maintained to ensure hygiene. If there are any insects, rodents etc. in it, obstructing the functioning of the product, the company shall not be responsible and in turn, the warranty stands terminated.
8. If you are moving house, it is essential that a company service representative inspects the refrigerator at the time of re-installation at the new address. The warranty on the product/optional service contract for the sealed system of the refrigerator continues to be effective only if the product is found to be in working condition. The re-inspection will be done on the payment of necessary charges. We would also recommend that the product be insured against damage in transit.
9. Please follow the guidelines given regarding refrigerator usage.
10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model no.

Unit sr. No.

Date of purchase

Customer's name & address

Tel. _____

Dealer's name & address

Tel. _____

Customer's Signature:

Overall warranty also stands null and void if:

1. The warranty card is not completed properly at the time of the purchase. 2. The completed warranty card is not presented to the authorised personnel at the time of service of the product. 3. The refrigerator is not operated according to instructions given in the User's Guide. 4. Defects are caused by improper use, which shall be determined by the company personnel. 5. Damage is caused to the refrigerator or any parts due to transportation or shifting. 6. Defects are caused by reasons beyond control, like abnormal voltage, acts of God, or while in transit to service center or purchaser's residence. 7. The serial number is deleted, defaced or altered.

TERMS AND CONDITIONS

1. *Compressor warranty applicable basis the following criteria :

Warranty on compressor	Applicable products
Five Year	All Direct cool models with total volume less than 175 Litres
Ten Year	All Direct Cool models with total volume equal to and more than 175 litres

(Please refer to the total volume mentioned on the Star Rating label of your refrigerator)

- Repairs and replacements of parts will be carried out through the authorised Customer Service Centre.
- All transportation and handling expenses incurred while repairing will be payable by the customer.
- For any appliance installed beyond the municipal limits of the jurisdiction of the authorised customer service centre, charges towards technician's visit will be borne by the customer.
- While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- The company/its authorised personnel will collect any parts, compressor or other components replaced during warranty period only.
- Warranty does not cover accessories of the appliance.
- Sealed system gas charging and consumables will be charged for any such repairs after one year from the date of purchase.
- The company's obligation under this warranty shall be limited to repair or providing replacement of parts only. The maximum claim/s if entertained by the company will be subject to the maximum retail price of the product purchased or purchase price, whichever is lower.
- In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
- Warranty is not applicable in case the original number (Serial No. Sticker) is removed, obliterated or altered from the machine or cabinet.
- Warranty automatically expires after the stipulated period from the original date of purchase, even if the refrigerator was not in use for anytime for whatever reasons.

For any further assistance.

Call	WhatsApp
080-6743-6743	Text 'hi' To 9321665511 On WhatsApp

24 X 7 Call Centre • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677