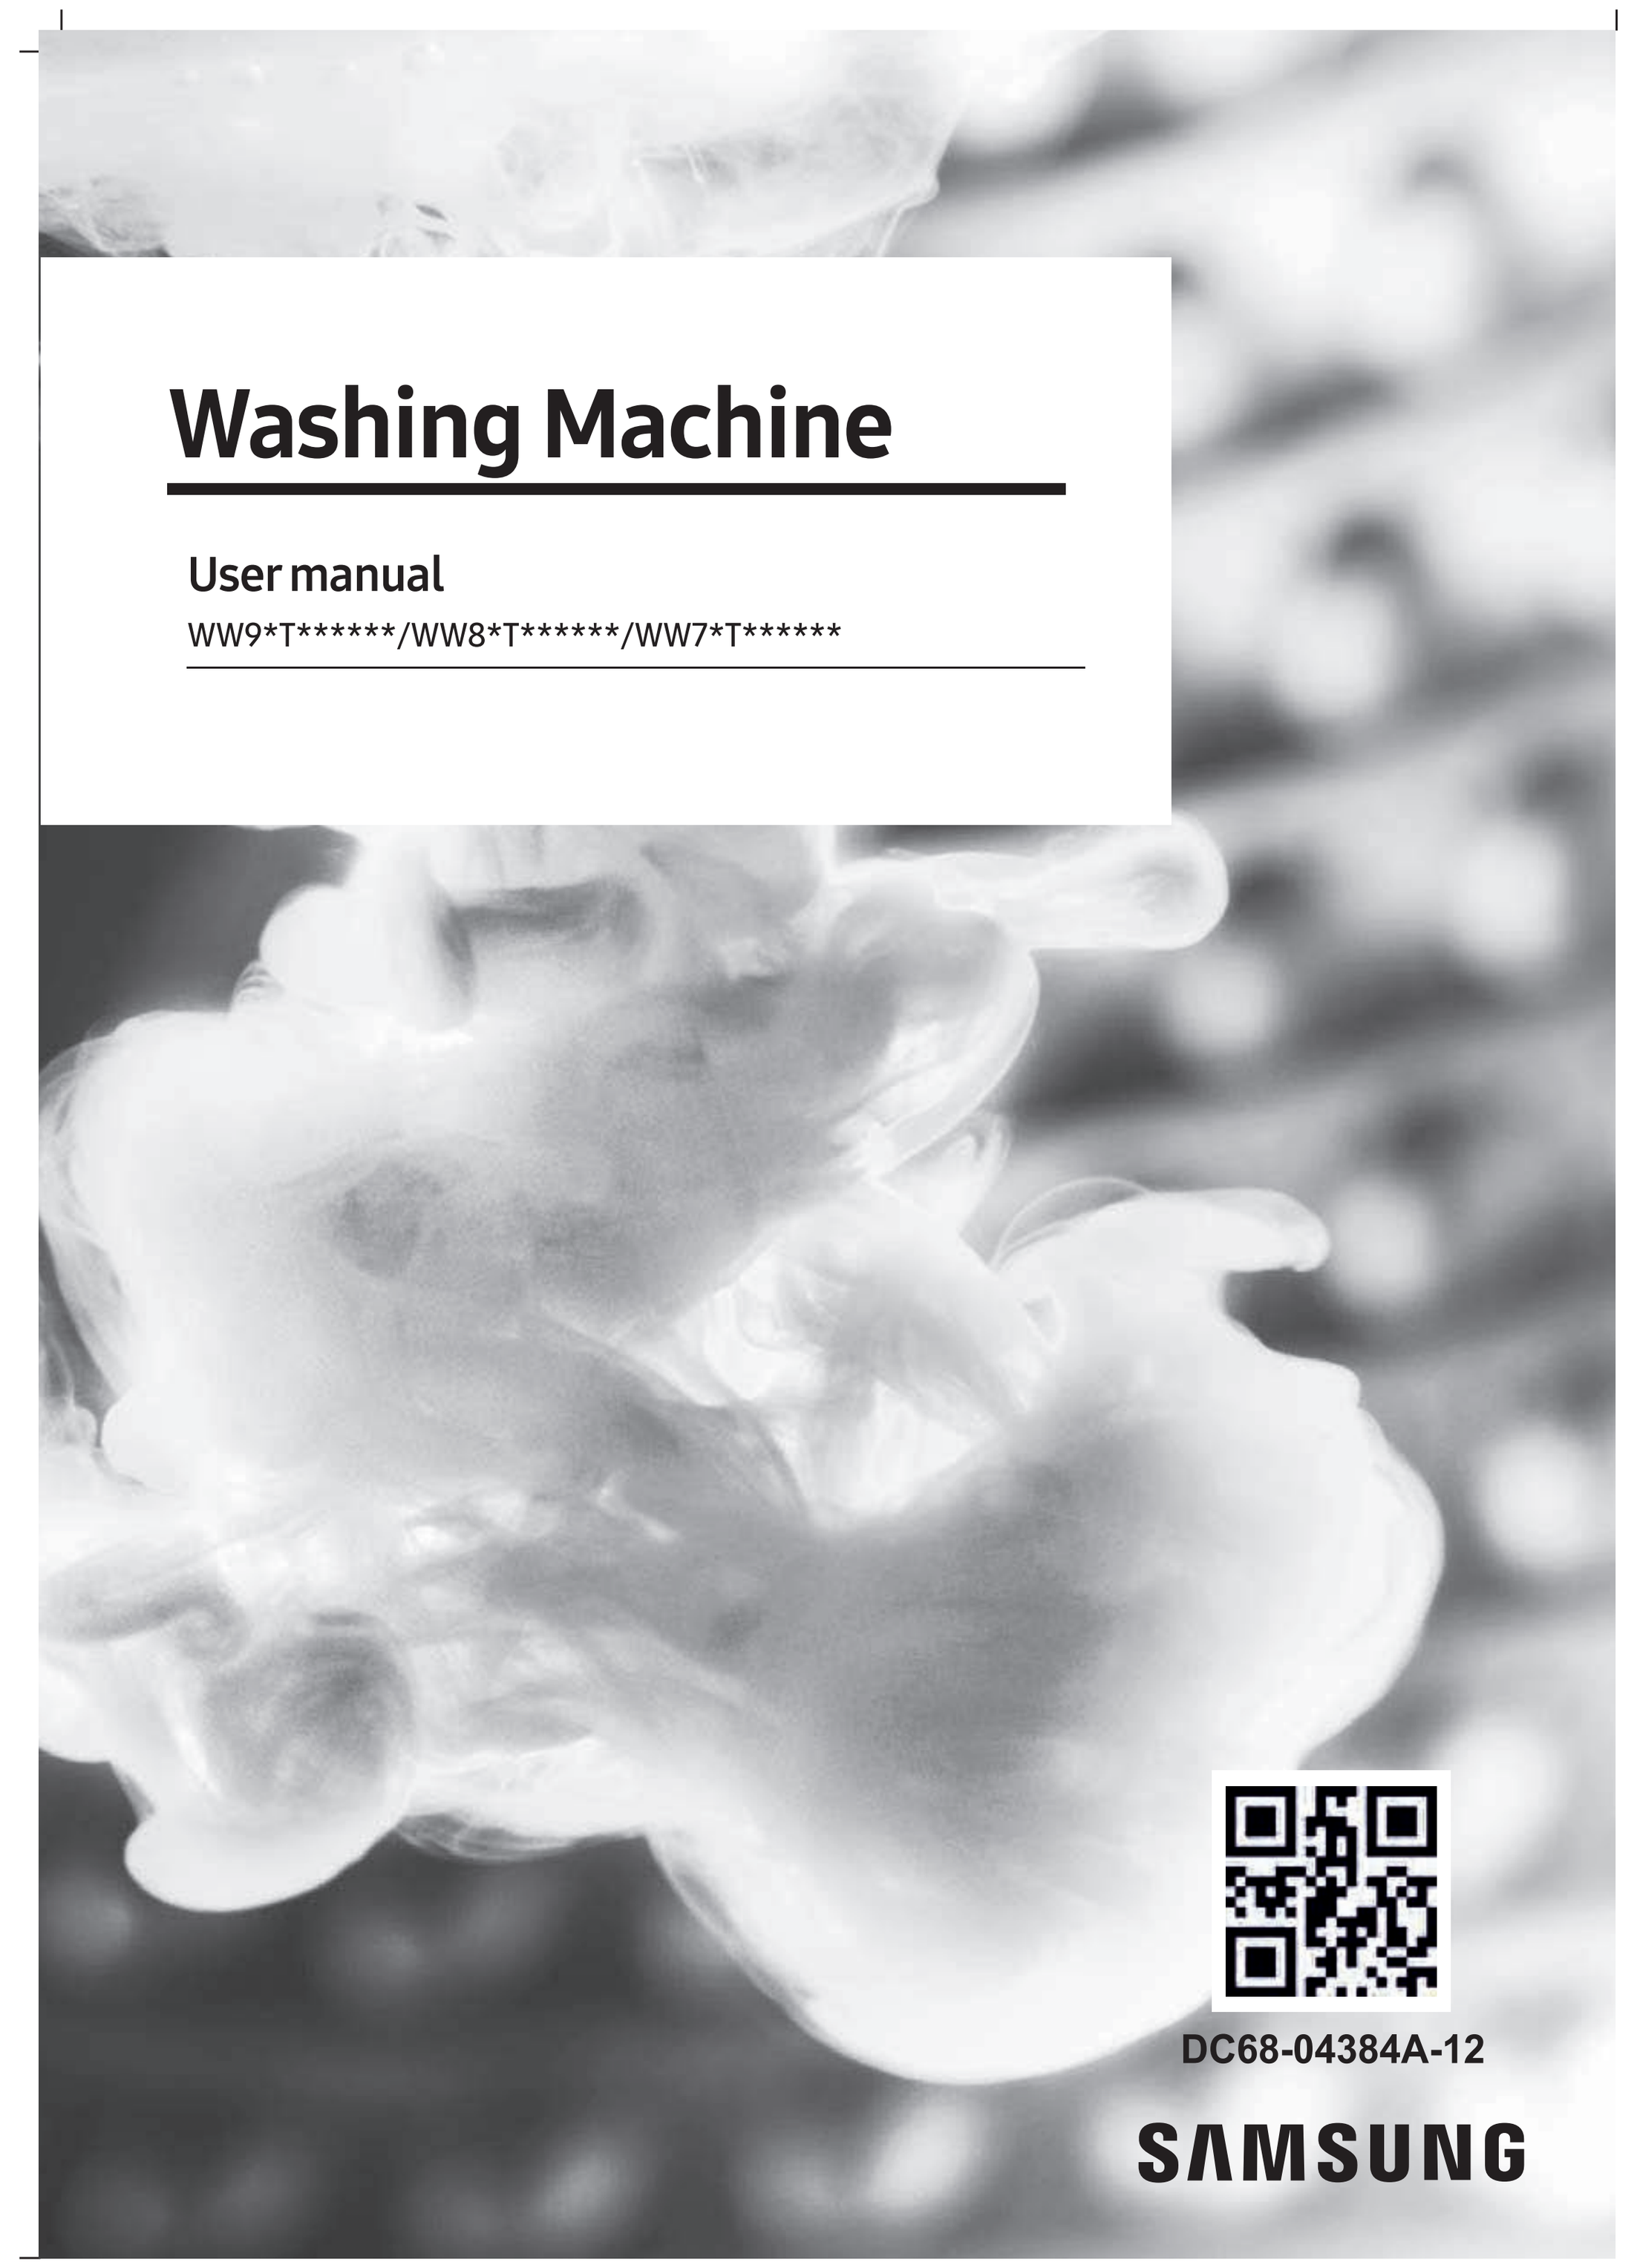


Washing Machine

User manual

WW9*T******/WW8*T******/WW7*T******

DC68-04384A-12

SAMSUNG

Contents

Safety information 3

What you need to know about the safety instructions 3
Important safety symbols 3
Important safety precautions 4
Critical installation warnings 8
Installation cautions 9
Critical usage warnings 9
Usage cautions 11
Critical cleaning warnings 15
Instructions about the WEEE 15

Installation 16

What's included 16
Installation requirements 18
Step-by-step installation 20

Before you start 29

Initial setup 29
Laundry guidelines 30
Detergent drawer guidelines 33

Operations 36

Control panel 36
Operating a cycle 38
Cycle overview 39
Additional functions 43
System functions 46
Special features 48
SmartThings 51
Open Source Announcement 52

Maintenance 53

Drum clean+ 53
Emergency drain 54
Cleaning 55
Defrosting your washing machine 59
Care against an extended time of disuse 59

Troubleshooting 60

Checkpoints 60
Information codes 65

Specifications 68

Fabric care chart 68
Protecting the environment 70
Specification sheet 70

Terms of Warranty 73

Warranty not applicable in any of the following cases 73

DC68-04384A-12

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine. Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**

⚠ CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage**

NOTE

Indicates that a risk of personal injury or material damage exists.

These warning signs are here to prevent injury to yourself and others. Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Safety information

2. For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. Children should be supervised to ensure that they do not play with the appliance.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

6. For washing machines having ventilation openings in the base, the installation instructions shall state that the openings must not be obstructed by a carpet.

7. For use in Europe: Children of less than 3 years should be kept away unless continuously supervised.

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

8. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

9. This appliance is intended to be used in household only and it is not intended to be used such as:

Specifications

Type		Front loading washing machine
Model name		WW9*T******
Dimensions	A (Width)	600 mm
	B (Height)	850 mm
	C (Depth)	550 mm
	D	635 mm
	E	1072 mm
Water pressure		0.05-0.78 (0.5-8.0) Mpa (kgf/cm[2])
Net weight		67.0 kg (WW**T*8****, WW**T*5****, WW**T*3****) 65.0 kg (WW**T*0****)
Maximum load capacity	Washing and spinning	9.0 kg
Power consumption	Washing and heating, AC 220-240 V / 50 Hz	1900-2300 W
Spin revolutions		1400 RPM

Type		Front loading washing machine	
Model name		WW8*T******	WW7*T******
Dimensions	A (Width)	600 mm	
	B (Height)	850 mm	
	C (Depth)	550 mm	
	D	635 mm	
	E	1072 mm	
Water pressure		0.05-0.78 (0.5-8.0) Mpa (kgf/cm[2])	
Net weight		67.0 kg (WW**T*8****, WW**T*5****, WW**T*3****) 65.0 kg (WW**T*0****)	
Maximum load capacity	Washing and spinning	8.0 kg	7.0 kg
Power consumption	Washing and heating, AC 220-240 V / 50 Hz	1900-2300 W	
Spin revolutions		1400 RPM	1400 RPM (WW7*T**4***) 1200 RPM (WW7*T**2***)

NOTE (Only Applicable to India)

- The design and specifications are subject to change without notice for quality improvement purposes.
- The energy label specifications have been determined by using the following program according to IEC 60456.
  - The program is "COTTON Cold + Intensive".

Terms of Warranty (Only Applicable to India)

Warranty not applicable in any of the following cases

1. The Complete warranty Card is not presented to the service engineer at the time of repairs being undertaken/ requested.

2. The Product is not purchased from an Authorized Samsung Sales Dealer.

3. The Product purchased is not used according to the instruction given in the INSTRUCTION MANUAL as determined by company personnel.

4. Defect Caused by improper use, as determined by the authorized service centers/ Company Personnel.

5. Modification or alterations of any nature mode in the circuitry by the Purchaser or unauthorized Personnel, as determined by Company personnel.

6. The Warranty is not applicable if the washing machine used for commercial purpose or Public places like Hotels, training centers and other similar applications.

7. The Original Serial number is removed, obliterated or altered from the Product.

8. Defect due to causes beyond control like lightening, abnormal voltage, acts of god or while in transit to service center or to the purchaser residence.

9. Correcting the installation for example leveling the product, adjustment of drain hose, Adjustment of Tap adopter.

10. Noise or Vibration that is considered as normal for example water drain sound, spin sound or warning beeps.

11. Removal of foreign objects/substances from machine, including the Drain Valve and inlet hose filter for example coin, Grit, safety pin, buttons, hooks, Dirt accumulation etc.

12. Replace fuse, correcting house wiring, house plumbing and defect or damage caused by household pets, rats, cockroaches or any other animals or insects.

For warranty conditions refer warranty card.

SAMSUNG **Helpline - Call : 1800 40 7267864 (1800 40 SAMSUNG) / 1800 5 7267864 (1800 5 SAMSUNG)**



This warranty card gives the key points related to warranty claim. for further details log on to www.samsung.com/in/support.

Warranty Card (Only Applicable to India)

*TERMS & CONDITIONS

1. Proof of purchase is a pre-requisite to claim warranty.
2. The product should have been purchased from an authorised Samsung Sales Dealer in India.
3. Warranty can be claimed only if the repair was carried out by the Samsung authorised service center.
4. Carry-in service or In-Home service applicability depends on the product category and Samsung policy.
5. Free installation or demo of the product, if applicable, can be availed only once and within 6month from the date of purchase. In case of installation, any additional material required over and above the standard installation kit shall be on the chargeable basis.
6. In case of defective accessory, only the accessory will be repaired or replaced.
7. Cosmetic/ Aesthetic / Plastic / Glass Parts /Bulbs / Cable /Wiring / Piping/ Consumables are not covered under warranty.
8. The defective parts/ products which were replaced by Samsung under this warranty shall be the property of Samsung.
9. While carrying out repair, Samsung may use accessories or parts that are new or refurbished or reconditioned.
10. Samsung shall not be liable for any losses or consequential losses due to product failure or the installed software.
11. Samsung shall be free to decide on whether or not to provide a software update for its products.
12. Samsung shall not be responsible for any loss or misuse of data, personal information, setting, third party software during product usage or repair or software update.
13. Samsung shall not be liable for any loss, cost, expense, inconvenience or damage that may result from use inability to use the product. Under no circumstances shall Samsung be liable for any loss, cost, expense, inconvenience or damage exceeding the purchase price of the product.
14. Defects caused by customer negligence, tampering shall void the product warranty.
15. Any extended/addition warranty offered by Samsung has to be supported by relevant proofs.
16. Usage of power stabilizers of proper rating is necessary unless explicitly mentioned by Samsung on product literature/instruction booklet.
17. In case of defect arising out of installation done by party other than Samsung authorised party, the limited warranty will be applicable as per revised T&C as Samsung shall deem fit.
18. Regular upkeep, maintenance and cleaning of parts are necessary in certain products. Such periodic maintenance shall be on chargeable basis unless otherwise provided and not covered under warranty.
19. In the event of any unforeseen circumstances, and spares not being available Samsung's prevailing depreciation rules will be binding on the purchaser and same shall be considered as a commercial solution in lieu of repairs.
20. Defects arising out of the following are not covered under warranty like Mishandling/Misuse,Improper ventilation, Improper voltage, Use of external material, Normal wear and tear, Physical damage and / or electrical damage caused by physical impact.
21. Complaints related to playability, printability, compatibility with external accessories, software, file systems, third party applications, CODEs, signals, Networks& ISP bandwidth shall not be considered as defect in product and not covered under warranty.
22. This warranty covers only the defects in products arising out of manufacturing or faulty workmanship.
23. This warranty covers repair/replacement of parts.
24. Warranty period of parts & accessories may vary from product to product.
25. Maximum liability out of this warranty is limited to the product purchase value/MRP.
26. No warranty on certain parts/conditions/types of product failures.
27. Under certain conditions where warranty obligations cannot be met, depreciation will be applicable on the existing product.

CUSTOMER DETAILS CUM WARRANTY CARD

Customer copy (to be retained by customer):

Model No: ____________________

Product Serial No: ____________________ Date of Purchase: ____________________

Name: ____________________

Address in Full: ____________________

Telephone No.: ____________________ Model No: ____________________

Dealer Name & Address : ____________________

Customer's Signature & Date
(I accept the Terms & Conditions of warranty)

Dealer 's Signature with rubber stamp

(Only Applicable to India)

The Warranty shall be null and void in any of the following cases, and in such cases Samsung may at its sole discretion repair the equipment on a chargeable basis. The decision of Samsung, whether a complaint falls in any of these categories or not shall be binding on the Purchaser.

- The dully filled warranty card/proof of purchase is not presented to the service engineer at the time of repairs being undertaken / requested.
- The original serial number of the product is removed, altered or obliterated from the product.
- The product purchased is not used as per the rated power conditions or instructions mentioned in the INSTRUCTION MANUAL.
- The product is being used for commercial purpose OR if the product has been used excessively and beyond reasonable usage as permitted within the product instruction manual.
- Site (premises where the product is used/ kept) conditions that do not conform to the recommended operations of the product.
- Defects caused due to exposure to moisture/dampness/extreme thermal or environmental conditions or rapid changes in such of conditions/corrosions/oxidations/spilling of food/liquid/influence of Chemical substances.
- Defects due to causes beyond control like lightning, abnormal voltage, spikes, external sources (ex: cable/set top box connections), fire, water logging, natural calamities, commotion, riots, theft, anti-social action, acts of God or while in transit.
- Defects caused by household pets, rats, cockroaches, ants, pests, fungi or any other animal/birds/insects.
- Defects caused due to negligence/omission of the Purchaser on account of periodic maintenance(s)/periodic servicing as mentioned in the instruction manual of the product.
- Defects caused due to usage of third party material/non Samsung Authorized Consumables.
- Any modifications, including but not limited to, rooting attempts, reverse engineering, unlocking, jail-breaking etc. of the original firmware(s) or software(s) of the product.
- Repair due to misuse/third party repair attempts are not covered in warranty.
- Warranty does not cover repair due to external factors/mediums/data types.
- Warranty shall apply only if the product is used as per its usage specifications (ex: personal, commercial etc.)
- Warranty shall be void if product has failed under certain conditions/types (ex: water logging, misuse, etc.)

All disputes arising out of this warranty are subject to Delhi jurisdiction only.

Warranty period commences from the date of purchase of the product unless specified otherwise.

Product Group	Product Description	Warranty Period (Months)	Parts/Accessory Warranty (if applicable)
Washing Machine	Semi Automatic	24	
	Rear control panel Top Loading Fully Automatic	24	AC Motor : 60 months# Digital Inverter Motor : 120 months #
	Front control panel Top Loading Fully Automatic	24	
	Fully Auto Front Loading	24	Universal motor : 60 months# Digital Inverter Motor : 120 months#

'20 year Digital Inverter Motor warranty applicable for purchases done till 31st March 2026. From 1st April 2026, 10 year warranty will be applicable.'

* 15 Months from date of purchase or 12 months from installation, whichever ends early. **12 Months from date of commissioning.

In case of parts warranty, labour cost and gas charging cost(if applicable) will be chargeable as per the applicable rates.

Correct disposal of the product (Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the electronic accessories (e.g. charger, headset, and USB cable) should not be dispose with other household waste at the end of their working life.

For more information on safe disposal and recycling visit our website or contact number.

SAMSUNG INDIA ELECTRONICS PRIVATE LIMITED

Registered Address:6th Floor,DLF Centre, Sansad Marg,New Delhi-110001,Visit : www. samsung.com/in

Samsung Helpline - Call : 1800 40 7267864 (1800 40 SAMSUNG) / 1800 5 7267864 (1800 5 SAMSUNG)

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
INDIA	1800 40 7267864 (1800 40 SAMSUNG) (Toll-Free) 1800 5 7267864 (1800 5 SAMSUNG) (Toll-Free)	www.samsung.com/in/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667	www.samsung.com/in/support
BANGLADESH	09612300300 08000300300 (Toll free)	www.samsung.com/in/support

This product is RoHS compliant.