How to get the best out of your

Godrej Eon Washing Machine?



*The image is for representation purpose only.

Fully automatic top load

User Manual

WTEON VLVT 70 5.0 FDTN

WTEON VLVT 75 5.0 FDTN

WTEON VLVT 80 5.0 FDTN

Congratulations!


You are now the proud owner of a Godrej washing machine. You can look forward to years of smooth & trouble-free washing with your machine as well as considerable savings in time, money and effort. Please read this manual carefully as it will tell you how to operate your machine optimally in order to get the best results. If you need any further clarifications, do contact your nearest Godrej dealer or any of our service centres/offices. We would be glad to help you. We wish you an easier, more convenient life with your new Godrej washing machine.

Contents

- Description Of Parts 1
- Specifications 2
- Know Your Washing Machine 3
- How To Install 7
  - Choosing the right location
  - Step-by-step installation
  - Ensuring proper earthing
  - Installing the drainage hose
  - Attaching the water supply hose to the tap
  - Connecting the water supply hose to your machine
- Description And Operations: Control Panel 10
- The Wash Programs 11
- Selective Wash Processes 14
- How To Select Water Level And Load Size 15
- How To Measure Wash Load 16
- How To Operate 18
  - When washing using wash programs
  - When washing blankets
- Washing Tips 19
- Safety Instructions 20
- How To Maintain 21
  - Water inlet
  - Washing machine body
  - Magic Filter

  When do you call the service personnel 22
- Don't Worry When 23
- Troubleshooting 24
- Key Checklist 25
- Branches/Service Connect 26
- Warranty 27

Description of parts

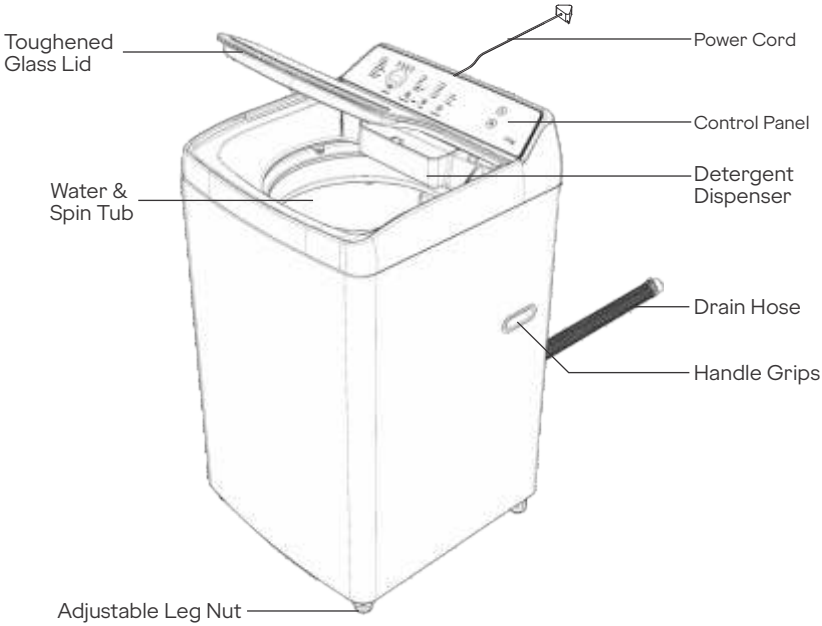

***The image is for representation purpose only.**

Specifications

Model		WTEON VLVT 70 5.0 FDTN WTEON VLVT 75 5.0 FDTN	WTEON VLVT 80 5.0 FDTN
Capacity(Maximum dry cloth load) kg		7.0, 7.5	8.0
Temperature Options		Regular	Regular
Power Source		230 V, 50 Hz, 6 A	230 V, 50 Hz, 6 A
Power Consumption		360 W	360 W
Water Consumption		Regular cycle: 180 L at Max water level	Regular cycle: 180 L at Max water level
Motor Type		Capacitor motor output: 84 W	Capacitor motor output: 84 W
Water Pressure		~0.02 MPa - 1 MPa^	~0.02 MPa - 1 MPa^
Water Tub	Outer	Poly Propylene	Poly Propylene
	Inner	Stainless steel	Stainless steel
Net Dimensions (WxDxH)		540 mm x 565 mm x 970 mm	540 mm x 565 mm x 1020 mm
Net Weight (kg)		31.5	32.2

In the view of Godrej policy of continous development, specification may change without notice.
^Total cycle time may vary according to the Inlet water pressure & water level selection.

Know your washing machine

1. Auto Logic Control
   The intelligent micro-computer controls all operations precisely to ensure a perfect wash. The machine is equipped with fuzzy load sensing to determine the water level for the wash load.
   Washing, rinsing and spin drying happens with a single selection on the control panel.

2. Eight Valuable Programs
   The Godrej washing machine provides you the right choices to select a program and cycle function as per your clothes and your desire. This includes the Auto/Mix Fabric, Whites, Rapid 30, Bulky, Delicate/Baby Care, Woollens , Deep Cleanse, Tub clean.

3. Six Wash Cycles
   The Godrej washing machine provides you the right choices to select a cycles function as per your clothes and your desire. This Includes Soak, Wash, Rinse, Spin, Hygiene Rinse and Super Dry added in Selected program.

4. + Wash Features
   The Godrej washing machine provides you the +WASH feature as per your clothes and your desire. This Includes +5 mins, +10 mins, +15 mins, +20 mins, +25 mins, + 30 mins in selected program.

5. Unbalance Load Corrector
   The Godrej washing machine automatically corrects a load unbalance that might occur during the spin Cycle. This protects the machine from damages.

6. Digital Display
   The Godrej washing machine comes with a 3-digit clear program selection indication P1, P2, P3, P4, P5, P6, P7, P8 Remaining Time Indicator, Error indication, Child Lock indication.

7. Rat Mesh
   The rat mesh is provided to protect your machine from damages due to rodent entry.

8. Pre Painted Galvanized Steel Cabinet
   The cabinet of Godrej washing machine is made from prime quality pre painted galvanized steel. This ensures a rust-free, fade and scratch resistant cabinet.

9. Auto Resume
   During program operation if there is a power failure, the machine memorizes the program operation. On restoration of incoming power, the machine will resume from exactly where it stopped due to power failure for the remaining operation.

Know your washing machine

10. Child Lock
    This feature allows machine keys to be locked during operation. This prevents unintended changes during a wash cycle. Wash cycle key and + Wash key press at a time for 3 sec then enter in Child Lock Mode, Again repeat this process to remove Child Lock.


11. Tub Clean
    This special feature allows clean the SPIN basket and outer tub to prevent stains on cloths as well as unpleasant odor from the machine.

12. Cloth Load Indication
    The machine comes with a cloth load indicator which indicates the weight of the dry load of clothes on the digital panel, enabling the user to be aware of the correct load that should be fed in the machine.

13. Detergent indicator
    Put indicated no. of standard detergent scoops inside the basket for better results. (Approximately 35 gm per scoop) Overdose of detergent will cause detergent deposits on clothes and/or drum.


How to install

Choosing the right location

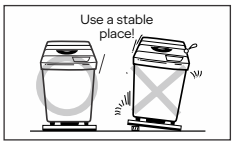


Install your Godrej washing machine in an even, stable place. An unstable location.

- Can create noise as your machine may vibrate.
- Can be dangerous since vibrations may cause the machine to move.

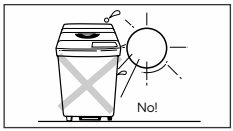

Keep a distance of at least 5 cm between the sides and rear of your machine to the nearest wall. This will prevent noise caused by the vibrations in your machine.


Do not place your machine in an area with high humidity or direct exposure to sunlight, rain or wet areas likebathrooms.

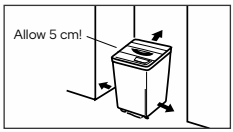


- This can result in damaged insulation or rusting
- Cause deformation or discolouration of plastic parts

Step-by-step installation

One front leg can be adjusted so that the machine is on level with the ground.

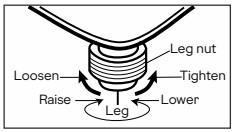

- After loosening the adjusting nut, adjust the leg to the correct height by turning it. Then tighten the adjusting nut securely.
- If the leg height is difficult to adjust because of an extremely uneven floor, place a board underneath and bring it to a level position
- To check whether your machine is in level, use a weight attached to a string. The distance between the string and your machine should be the same from top to bottom.

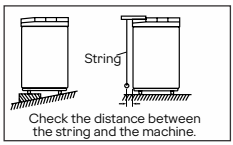

Ensuring proper earthing


Your washing machine has a three-core 6/16 A flexible cord. Make sure that electrical connections and earthing are done properly to avoid electrical shocks.

***The image is for representation purpose only.**


How to install

Installing the drain hose


- Insert the drain hose as far as it goes, then secure it tightly with the hose clamp. The hose may leak if not secured properly.




- While attaching the drain hose to a wash pan, leave a gap between the end of the hose and the adjacent surface. If the flat end of the hose comes in contact with a flat surface, drainage will be affected.



Caution: If the drain hose is not installed properly, your washing machine may not function well, and the overflow prevention mechanism may cause your machine to stop mid-cycle.

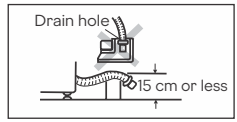


- While inserting the drain hose into a wash pan or drain pipe, move the hook for easier installation.
- Move the hook back to its initial position before placing it in the slot provided on the side of your machine.
- Make sure the drain hose is not too high, otherwise it may not drain properly.

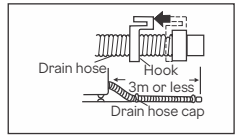


Installing the Rat Mesh

- Tilt the washer on one side & match the outline of the rat mesh with the bottom front side of the machine as shown in Fig. 1.

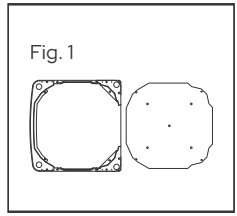

- Insert the rat mesh as shown in Fig. 2 & screw it to the base as shown in the picture.

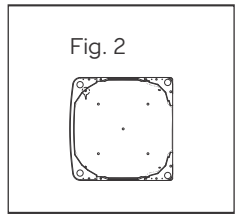



*The images are for representation purpose only.

How to install

Attaching the water supply hose to the tap

- Pull the sleeve down with your fingers as you lower the entire hose to disconnect the union
- Loosen the four screws on the hose union and then fit the union exactly over the mouth of the tap
- Tighten the four screws evenly around the tap
- Remove the seal from the union and turn the nozzle to tightly secure it (if the tap is large, square or oddly shaped, remove the inside ring to facilitate attachment).
- Grip the ring with your hand and pull it down, and then insert the nozzle. Separate the sleeve until you hear a click, and then push it back.
- After installation, check to ensure that the union does not come off while pulling down. Next, confirm that the union is properly installed by turning the water on and checking for leakage. If you see any leakage, adjust the section where there is leakage.

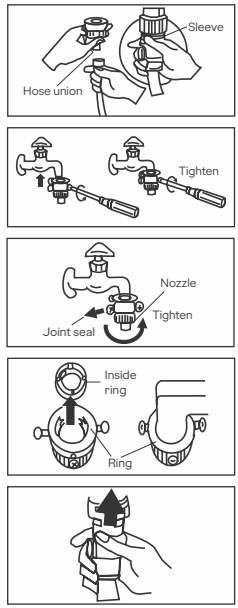

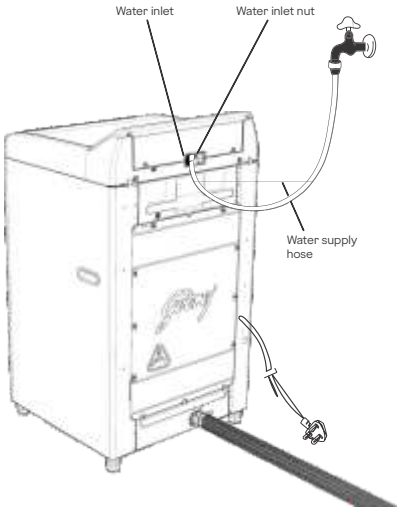

*The images are for representation purpose only.


Caution:

- Do not use water over 50°C (*Applicable to polypropylene inner tub only)
- Do not use a tap with a diagonal mouth or a movable tap since this may leak.

How to install

Connecting the water supply hose to your washing machine

- Turn the hose nut clockwise and tighten it on the end of the water supply hose securing it to the water intake valve

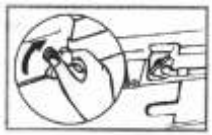


- Tighten further by turning the water supply hose and water intake valve in the direction of the arrow as shown in the image below.



- Hold the hose nut firmly. Turn the water supply hose back again only in the direction of the arrow as shown.




- Repeat steps 2 and 3, and tighten it until you find it difficult to turn the water supply hose further

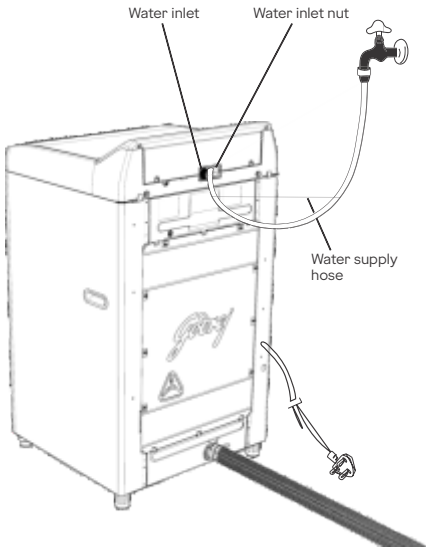

*The images are for representation purpose only.


How to install

Connecting the electrical plug of your washer to wall socket

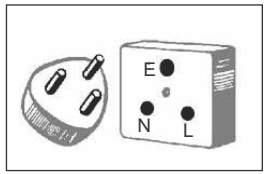

- Connect the 3-pin power cord to a proper ampere rating socket i.e 6 amp socket is required for non-heater machine & 16 amp socket would be required for heater machine.
- Connect the 3-pin power cord to a properly grounded standard Indian 3-pin outlet. Never plug it into an ungrounded outlet.
- If the external socket does not have grounding terminal, then a separate grounding is needed.
- Live and neutral terminals in socket should not be reversed.


Separate grounding methods (any one to be followed)

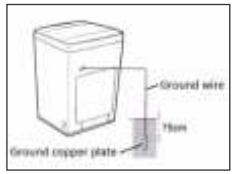

Burying copper plate:


- Connect the ground wire to a ground copper plate and bury it more than 75 cm in the ground.

Using Grounding Wire:

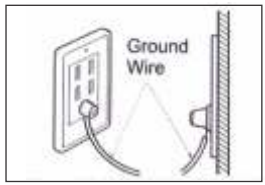

- Connect the ground wire to the socket provided exclusively for grounding.

Using a short-circuit breaker:

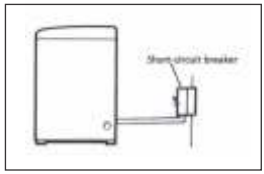

- If grounding methods described above are not possible, a separate circuit breaker should be employed and installed by a qualified electrician.

Never connect ground to:

- A gas pipe, telephone wire, lightening rod, neutral, extension cords without ground terminals, plastic, etc.

Note: All electrical wiring or modifications should be done by a qualified electrician only.

*The images are for representation purpose only.

ICON: Soak, Wash, Rinse, Spin ICON indication used to indicate selected and current operation of cycle.

3 Digit display: To indicate program name (P1 to P8), To indicate Remaining Time, To indicate Child Lock ('CL') indication, To indicate error

Wash Cycle Button: Used to select wash cycles as per requirement. By default, Auto program selected and Wash, Rinse, Spin cycle selected




Program Button: Program button is used to select program P1 to P8, by default P1- Auto program selected.

+ Wash: Add+ wash cycle in selected program as per desire.

Child Lock: Child Lock can be activated by pressing Wash cycle button and + Wash button simultaneously for 2 seconds. Once Child Lock is activated, 'CL' displayed on 7 segments. During Child lock, all the control panel buttons are inactive. Child Lock will be deactivated automatically after completion of wash cycle. Child Lock can be deactivated by pressing Wash cycle button and + Wash button again for 2 seconds.

ON/OFF Button: Used to ON or OFF the machine.

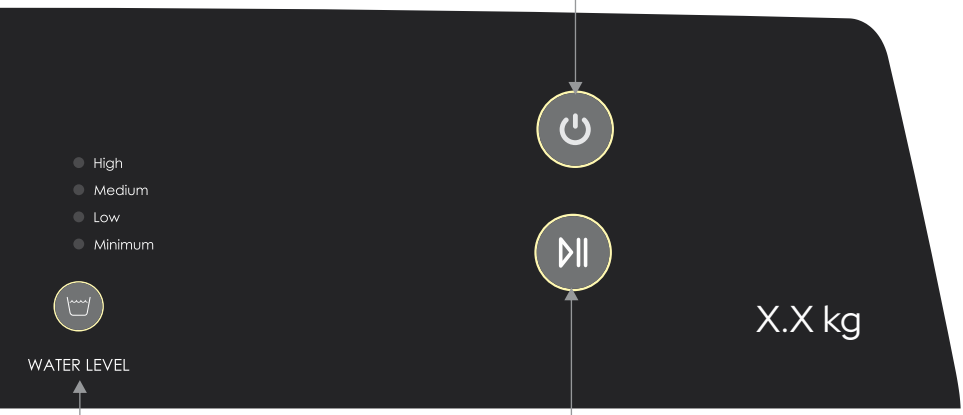

Start/Hold Button: Start the washing machine operation when pressed. Pressing this button, a second time will cause the machine to pause.

Water Level Button: Used to select the required water level

Capacity will vary by model.

Washing programs

Washing Program	Display Indication	Water Level	Procedure for Setting wash cycle	Process	Approx. Total wash time			
				Wash	Rinse 1	Rinse 2	Spin	Total Time
Auto /Mix Fabric	P1	Min	• Turn POWER ON button (Auto program gets selected automatically) • Water level and wash time is automatically selected by the machine. • Press water level button to change water level if desired • Press start/pause button to start the machine.	~4 mins water in + ~13 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	8 Mins	51 Mins
		Low		~4 mins water in + ~17 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	8 Mins	55 Mins
		Medium		~4 mins water in + ~21 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	8 Mins	59 Mins
		High		~4 mins water in + ~25 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	8 Mins	01:03 Hrs
Whites	P2	Min	• Turn POWER ON button (Auto program gets selected automatically) • Press program button to select Whites Program. • Water level and wash time is automatically selected by the machine. • Press water level button to change water level if desired • Press start/pause button to start the machine	~4 mins water in + ~15 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	9 Mins	53 Mins
		Low		~4 mins water in + ~19 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	9 Mins	57 Mins
		Medium		~4 mins water in + ~23 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	9 Mins	1:01 Hrs
		High		~4 mins water in + ~27 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	9 Mins	1:05 Hrs
Rapid 30	P3	Min/ Low/ Medium/ High	• Turn POWER ON button (Auto program gets selected automatically) • Press program button to select Rapid30 wash program. • Water level and wash time is automatically selected by the machine • Press water level button to change water level if desired • Press start/pause button to start the machine	~4 mins water in + ~6 mins wash (+ inbuilt soak)	11 -12 Mins	-	8 Mins	30 Mins
Bulky	P4	Min	• Turn POWER ON button | (Auto program gets selected automatically). • Press program button to select Bedsheet Program. • Water level and wash time is automatically selected by the machine. • Press water level button to change water level if desired. • Press start/pause button to start the machine.	~4 mins water in + ~18 mins wash (+ inbuilt soak)	13 -14 Mins	13 -14 Mins	10 Mins	01:00Hrs
		Low		~4 mins water in + ~21 mins wash (+ inbuilt soak)	13 -14 Mins	13 -14 Mins	10 Mins	01:03 Hrs
		Medium		~4 mins water in + ~24 mins wash (+ inbuilt soak)	13 -14 Mins	13 -14 Mins	10 Mins	01:06 Hrs
		High		~4 mins water in + ~30 mins wash (+ inbuilt soak)	13 -14 Mins	13 -14 Mins	10 Mins	01:12 Hrs
Delicate / Baby Care	P5	Min	• Turn POWER ON button (Auto program gets selected automatically). • Press program button to select Delicate/Baby program. • Water level and wash time is automatically selected by the machine. • Press water level button to change water level if desired. • P ress start/pause button to start the machine.	~4 mins water in + ~7 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	5 Mins	42 Mins
		Low		~4 mins water in + ~13 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	5 Mins	44 Mins
		Medium		~4 mins water in + ~15 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	5 Mins	46 Mins
		High		~4 mins water in + ~15 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	5 Mins	46 Mins

Washing programs

Washing Program	Display Indi-Cation	Water Level	Procedure for Setting wash cycle	Process	Approx. Total wash time			
				WASH	RINSE 1	RINSE 2	SPIN	TOTAL TIME
Woollens	P6	Min	• Turn Power On button (Auto program gets selected automatically). • Press program button to select Wool program. • Water level and wash time is automatically selected by the machine. • Press water level button to change water level if desired. • Press start/pause button to start the machine.	~4 mins water in + ~11 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	7 Mins	44 Mins
		Low		~4 mins water in + 11 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	7 Mins	44 Mins
		Medium		~4 mins water in + ~15 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	7 Mins	48 Mins
		High		~4 mins water in + ~15 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	7 Mins	48 Mins
Deep Cleanse	P7	Min	• Turn Power On button (Auto program gets selected automatically). • Press program button to select Deep cleanse program. • Water level and wash time is automatically selected by the machine. • Press water level button to change water level if desired. • Press start/pause button to start the machine.	~4 Mins water in + ~18 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	11 Mins	59 Mins
		Low		~4 Mins water in + ~24 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	11 Mins	01:05 Hours
		Medium		~4 Mins water in + ~30 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	11 Mins	01:11 Hours
		High		~4 Mins water in + ~33 mins wash (+ inbuilt soak)	12 -13 Mins	12 -13 Mins	11 Mins	01:14 Hours
Tub Clean	P8	High	• Turn Power On button (Auto program gets selected automatically). • Press program button to select Tub clean program. • Water level and wash time is automatically selected by the machine. • Press start/pause button to start the machine.	~4 Mins water in + ~33 mins wash (+ inbuilt soak)	11 -12 Mins	11 -12 Mins	10 Mins	36 mins

Energy Program ('EP')	• Turn Power On button (Auto program gets selected automatically). • Press program key & Water Level Key at a time for 3 sec. 'EP' displayed on display. • Water level and wash time is automatically selected by the machine. • Press start/pause button to start the machine.	~4 mins water in + ~24 mins wash (+ inbuilt soak)	13-14 Mins	NA	9 Mins	50 Mins

Energy label declaration: After power On press the 'Program Key + Water level key' at a time for 3 sec "EP" displayed on 7 segment display then press the start key to run energy program. Note: Time may change due to reasons like water intake pressure variation.

Selective washing processes

Select Process	Operation	Process Cycle
Soak + Wash+ Rinse + Spin	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle key to add soak (15min) in selected program • Press Start/Pause button to start.	Soak (15 min) added in selected program. Total time indicated on display (Eg.01:06 hours in P1- Auto for minimum water level)
Wash Only	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select wast option • Press Start/Pause button to start wash only	Wash operation and timing will be as per the program selected (Eg. 17 min in P1- Auto for minimum water level)
Rinse Only	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select rinse option • Press Start/Pause button to start rinse only	Rinse operation and timing will be as per the program selected (Eg. 25 min in P1- Auto for minimum water level)
Spin Only	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select spin option • Press Start/Pause button to start spin only	Spin operation and timing will be as per the program selected (Eg. 8 min in P1- Auto for minimum water level)
Wash + Rinse	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select spin wash+ rinse option • Press Start/Pause button to start spin wash+rinse only	Wash & Rinse operation and timing will be as per the program selected (Eg. 42 min in P1- Auto for minimum water level)
Rinse + Spin	• Press the power on button • Press wash cycle button till rinse & spin LEDs glow together • Press Start/Pause button to start rinse + spin only	Rinse & Spin operation and timing will be as per the program selected. (Eg. 34 min in P1- Auto for minimum water level)
Wash + Spin	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select wash+ spin option • Press Start/Pause button to start spin wash+rinse only	Wash & Spin operation and timing will be as per the program selected (Eg. 25 min in P1- Auto for minimum water level)
Wash + Rinse + Spin + Hygiene Rinse	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select wash + rinse + spin + hygiene rinse option • Press Start/Pause button to start	One extra rinse added in selected program. Total time indicated on display (Eg.1:04 in P1- Auto for minimum water level)
Wash + Rinse + Super Dry	• Press the power on button • Select any program (By default auto program selected) • Press wash cycle button to select wash + rinse + spin + super dry option • Press Start/Pause button to start	More Spin time (approx. 4-5 min) added in selected program. Total time indicated on display (Eg.56 in P1- Auto for minimum water level)

How to select water level And load size

HOW TO USE WATER LEVEL		
Water Level Setting	Weight of Clothes (kg)	Example of Load
HIGH	>3.1	3 trousers, 4 shirts, 2 skirts, 2 night gowns, 1 towel, 4 vests, 2 sarees, 2 dhoti, 2 blouses and 2 petticoat.
MEDIUM	1.51 - 3	3 trousers, 2 shirts, 2 skirts, 1 night gown, 1 towel, 3 vests, 1 saree, 1 dhoti, 3 blouses and 1 petticoat.
LOW	0.81 - 1.5	1 Trouser, 1 Shirt, 2 Vests, 1 Night Gown, 2 Blouses and 3 Skirts.
MIN	0 - 0.8	1 Trouser, 2 Shirt, 2 Vests, 2 undergarments, 1 Blouse.

While deciding the water requirement for the wash load, check the weight of the clothes and volume occupied by them.

How to measure wash load

Here are some of the average weights of commonly used clothes to help you estimate the weight of the load to be washed.


Approximate Weight of Clothes			
Item of Clothing	Weight (in gms.)	Item of Clothing	Weight (in gms.)
Double Bedsheet	1000	Single Bedsheet	500
Bath Towel	500	Table cloth	650
Trouser	400	Jeans	600
Shirt	300	Baggies	500
Saree	500	Petticoat	400
Skirt	250	Pyjamas	400
Dhoti	200	Lungi	225
Night Gown	250	Blouse	100
Vest	50		
Undergarment	50		

While deciding the water requirement for the wash load, check the weight of the clothes and volume occupied by them.

How to operate

When using the AUTO Cycle:

Preparation

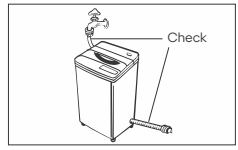


- Ensure that the electrical plug is properly connected.
- Ensure that the water supply and drain hose are correctly installed.

Put detergent only into detergent compartment and laundry in the basket

Add Detergent

Add detergent based on the requirement and manufacturer 's recommendations into the 'Detergent dispenser'. While adding more than 80% of rated capacity cloth load, we recommended to use liquid detergent. In case of low water pressure, distribute the detergent evenly on the basket for proper dispensing. Some detergents must be fully dissolved before putting into the dispenser for the best results. Check instructions if specified on the detergent pack. Pre dissolve the detergent powder in one-liter of warm water and pour directly into the basket before adding cloth load, which can improve wash performance. Good wash performance depends on the right quality, quantity & method of detergent usage (mentioned above) and even appropriate voltage and water-inlet pressure for the machine to deliver its optimum performance.

Turn the power ON

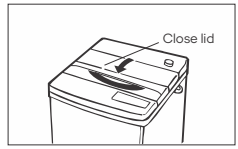

- Close the lid and turn the POWER key ON.

Start the cycle

- Press the START / PAUSE Key to start the machine.
- The machine will run through a full cycle, including RINSE and SPIN.

Cycle End

- A buzzer will signal the end of the cycle
- Turn OFF the water tap
- Machine will switch OFF after the completion of the cycle
- Turn OFF the Mains Power Supply and disconnect the Main Power Plug

Auto calibration for auto load sensing:

Due to aging, the mechanical friction on the motor belt tension and other mechanical parts. Hence it is required to calibrate the machine for auto load sensing. Calibration can be done by pressing "PROGRAM+START/PAUSE+POWER" button together for 3 sec. and the machine will perform the calibration automatically. The auto calibration should be started with empty tub i.e. without water and clothes inside the tub.

*The image is for representation purpose only.

When washing using blankets

Types of blankets which can be washed

Material	100% synthetic fibre
Weight	3 kg. or less (Use the auto cycle when the load is less than 2 kg.
Size	140 cm x 200 cm or less
Thickness	Single layer

Turn the power ON

- Select the P4- Bulky program (HIGH water level selected automatically). Add the detergent in detergent compartment and press the Start/Pause button to allow the water and detergent to mix for about one minute. After one minute passed, turn the ON/OFF switch OFF to stop the machine.


- Place the blanket into the basket. Press it in all the way to down by hand, ensuring that it is fully immersed in water.
- Restart the machine by switching ON ON/OFF switch.
- After restarting, PRESS Program key to select P4-Beedsheet program.
- Water level will be selected as per cloth load. To manually change water level, select the water level as per requirement and press Start.


Cycle end


- A buzzer will signal the end of the cycle.
- Turn OFF the water tap.
- Machine will switch OFF after the completion of washing.
- Disconnect the main power supply.

Washing tips

- Follow the instructions on the garment labels while washing laundry items. Avoid washing of all natural woolens and delicate knits such as lace knits.
- Turn garments inside out when washing to avoid piling and lint
- Strings and fasteners of aprons and pillow cases should be fastened or tied

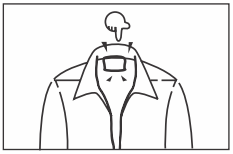

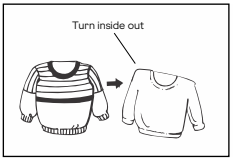

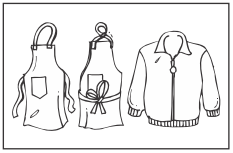




For hard-to-clean shirt collars and sleeves:


- Apply detergent to the soiled part of the garment and scrub by hands
- If a garment is exceptionally soiled, soak it in liquid detergent for about 10 minutes before washing
- Add clothing one by one, remove hooks, pins etc. and pull up all the zips. If the hooks cannot be removed then tie all of them up in one garment

*The image is for representation purpose only.

Safety instructions

Important Safety Instructions Read Carefully And Keep For Future Reference







*The images are for representation purpose only.

- Always use a proper power source.
- Do not use extension cords as these may not be properly earthed.
- Before connecting the power cord make sure to ground otherwise it may cause electric shock.
- Never use damaged electrical cords or plugs.
- This washing machine should be connected through a switch or MCB (6A for Non heater/ 16 A for heater model) so that it can be disconnected from power supply.
- Use a secure tap connection to avoid leakage and wastage of water.
- Never place your hand in the basket while it is moving! Do not place your hand under the machine while it is operating. (touching any of the machine's moving parts can be dangerous, even if it is moving slowly.)
- Do not press control panel pads with sharp objects. Using sharp objects to press the panel pads can result in electrical shocks or malfunctions.
- Do not pull the power cord with moist hands.
- Do not get the control panel wet. Getting the operation panel wet can result in shocks or malfunctions.
- Never wash or rinse articles of clothing treated with benzene, thinner, alcohol or other volatile or Organic solvents. The presence of such chemicals can result in a fire.
- Do not use water with temperature over 50°C. Water that is too hot can cause malfunctions and deformation of the machine.
- If it takes 15 seconds or more for the machine to stop moving completely after the lid is opened (during spin cycle with laundry in the basket), the brake is malfunctioning. You should have the machine repaired immediately.
- Do not use this product for business purpose.
- Young children should be supervised to ensure that they do not play with the appliance.
- Remove coins and pins from the pockets etc. As these may damage clothes or the machine.
- Disconnect the power plug when the supply voltage is very high and very low. The machine will detect automatically when supply voltage is very high or very low and display the errors EH or EL.

Children in the household


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Do not put your hand, foot or anything under the washing machine while the washing machine is in operation. There is a rotating mechanism under the machine, so you could be injured.
- Do not put or keep any magnet near the lid of the washer, it will result in malfunctioning of the product.
- Avoid electric heater, candle light, cigarette light, bug smoker, etc. Near the machine. It May ignite or deform the plastic part.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety: children should be supervised to ensure that they do not operate or play with the appliance inconstancy to this may damage the machine, leading to serious injury or electrical shock.
- Disconnect the washer from the household distribution panel by removing the power plug from Power socket outlet before attempting any maintenance or cleaning inconstancy to this may cause electrical shock. Make sure that drainage is working properly. If water is not drained properly, your floor may get flooded. Flooded floors may induce electricity leakage, further resulting in electric shock or fire.
- If, during spinning, opening the lid does not stop the tub within about 15 second, immediately discontinue operating the machine. Call for repair. A machine that spins with its door open may cause injuries.
- Never reach into the machine while it is running. Wait until the machine has completely stopped before opening the lid. Even slow rotation can cause injury.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Operating with a damaged plug may cause electric shock.
- Turn off the main power switch, at any time when any person is operating the machine, whether pre or post wash. If any intervention is to be done in between the operation, even then stop operation, turn off the main power switch & then conduct any intended operations.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

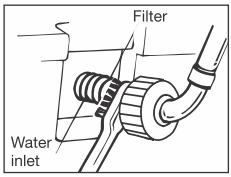

Water inlet

If the water fills into the basket too slowly, remove the water supply hose and clean the filter with a brush as shown alongside.

Washing machine body

Before doing any maintenance of your washing machine, be sure to remove the electrical plug from its power source.

Clean the main body and control panel with a soft cloth. Hard-to-remove dirt can be cleaned by wiping with a soft cloth soaked in a mild detergent


Caution:

Do not clean the body or control panel with benzene, thinner, cleanser or other chemical cleaners. This can discolour or damage your machine's finish..

The Magic Filter

Clean the lint collector after every use. Follow these steps:

- Remove the lint collector by pulling it out. If it is difficult to lift it out at the place where the machine has stopped, turn the basket by hand to a more convenient place and remove the lint collector.
- Open the cover of the lint collector as shown.
- Clean the filter in running water.
- When the lint collector has been emptied and cleaned, close the front cover and replace the lint collector by inserting it from the bottom and pressing it back into place.

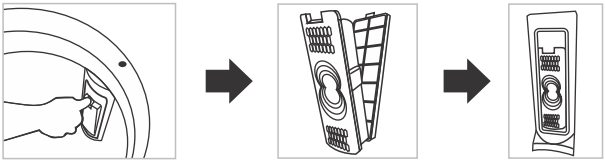

Press the lock to remove the magic filter.

Open the cover and clean the filter in running water.

Close the cover and fit the magic filter as shown.

When do you call the service personnel

Before you call the service personnel, please check the following:

When your washing machine does not operate,

Check

- Has your machine's plug been inserted properly into the main power supply socket?
- Is the water tap turned on properly?
- Has the drainage hose been placed down to allow drainage?
- Is the power switch ON?
- Is the lid securely closed? (When beginning operation from the WASH & SPIN cycle, you machine will not operate if the lid is open.)
- Is the laundry load unbalanced? Is the warning light ON? If so, correct unbalanced load by manually rearranging the laundry evenly.

When your washing machine leaks,

Check

- Is the hose coupling loose?
- Is the nozzle loose?
- Is the water feed hose connector clogged?
- Is the water inlet nut loose?

When your washing machine makes an unusual noise,

Check

- Is your washing machine installed on an incline or uneven surface?
- Are there any match sticks, hairpins or metal objects being washed with the laundry?
- Is the load unbalanced, causing the basket to spin off-centre?

When your washing machine does not drain,

Check

- Has the WASH-RINSE cycle been selected?
- Is the drainage hose bent?
- Has the drainage hose been placed down to allow proper drainage?
- Is the drainage hose properly connected to your machine?

When the washing cycle takes longer than usual,

Check

- Has the automatic load imbalance correction function (Fill - Agitate - Drain) been activated to correct a load unbalance?
- Is the water intake pressure less?

Don't worry when

- A small amount of water drains out of the drainage hose the first time you use your washing machine. This is merely the water left over from the performance inspection performed on your washing machine before it was shipped from the factory.

- Buzzing noises occur when the tub fills with water. They are caused by the operation of the water supply valve.

- Sloshing sounds are made by your machine during the spin cycle. These are made by the water in the liquid balancing ring which is meant to maintain balance of the spin tub and does not indicate a malfunction.

- When you restart your machine after opening the lid or pausing the machine during the spin cycle, there may be a small pause before the machine begins to spin as the drainage valve opens. Also, when you start your machine immediately after stopping it, there will be a short pause. This happens for safe operation.

Trouble shooting

Trouble Indication	Kind of Trouble	Where to Check	How to Resolve the Problem
No LED glow on panel or no movement inside machine	The washer does not work at all	Check if the power cord is securely plugged in. Press the power ON/OFF button Press the Start/Pause button Check whether power failure has occurred Check the main power fuse or circuit breaker has been activated	
E1 Error	Water does not flow into wash/spin tub in 15 min. E1 will be indicated (along with beeps for some time)	Check whether the tap is open Check whether the water supply hose is frozen Check whether the water supply hose or the metal filter in the water inlet is blocked Check whether the water is out of supply	Check and resolve the problem, then open & close the lid to restart the washer
E1 Error	If the water does not drain from machine E2 error will indicate (along with beeps for some time) after 10 minutes of starting drain operation	Check whether the outfall is too high Check whether the drain hose is placed correctly Check whether the drain hose is blocked by scrap or fibre Check whether the drain hose is too long or bend	Check and resolve the problem, then open & close the lid to restart the washer
E3 Error	During spin operation if the lid is open, E3 error will indicate (along with beeps for some time	Check whether the lid is open during spinning	Close the lid to restart the washer
E4 Error	If there is load unbalance for two times, the machine will try to balance it out automatically. If machine for the imbalance third time, E4 error will indicate (along with beeps for some time)	Check whether the washing machine is placed steadily Check whether the cloth load is appropriate Check whether the clothes are spread out evenly in the wash basket	Balance the clothes evenly and close the lid to restart the washer
EH Error	If input voltage from your socket is very high above 290 V, EH error will indicate (along with beeps)	Check the voltage in power socket for proper operating voltage and unplug the machine to avoid further damage	Wait till your input voltage becomes normal
EL Error	If input voltage from your socket is very low below 150 V, EL error will indicate (along with beeps)		
EE Error	Water Level Sensing Error	Call an authorized technician	Call an authorized technician

Key checklist

Almost every district in the country has a Godrej Dealer - who has service representatives. Should you need any assistance, please get in touch with the nearest service provider and he'll send a dependable mechanic to you. Your feedback, suggestions and ideas about washing machine care will help us serve you better.

Please check with the dealer of your washing machine as to who would be your service provider. For your convenience, please note down the details below.

Whom to contact in case you need assistance:

Name:

Phone:

Address:

Always quote the following when you require assistance of a Godrej Dealer or Branch.

Washing Machine Model:

Purchased on: Bill No.:

Machine Sr. No.: Colour

Purchased from:

Environment & Energy Conservation Suggestions:

Disposal of Packaging Material

After installing the washing machine, recycle/ reuse the corrugated box. Fitments and polythene cover/ straps - Do not dispose them off as garbage. This helps to conserve natural resources and prevents pollution.

Energy Conservation Tips for Washing Machine Use

You can help save limited natural resources like oil and coal by saving electricity. Simply follow these guidelines.

1. Use the correct quantity of water depending on the quantity of clothes to be washed.
2. Use less foam making detergent for washing and use the correct quantity of detergent.
3. Use the correct cycle. This helps in saving electricity.
4. At the end of the cycle, please switch off the machine from mains.
5. Reuse the soap water if possible. Please follow the instructions for reuse of soap water

Branches / service connect

For any further assistance, please contact our nearest branches office or service center:

Branches			
Ahmedabad Bangalore Bhopal Bhubaneshwar Chandigarh/Mohali Chennai	Coimbatore Delhi Ghaziabad Guwahati Faridabad Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

Call	WhatsApp
080 -6743 -6743	Text 'Hi" to 9321665511 on WhatsApp

24 X 7 Call Centre * Visit Up to 9 Pm * Weekend service*

Website : http://www.godrejenterprises.com/support &
www.godrejenterprises.com/appliances

E-mail: smartcare@godrej.com
SMS <godrejcare> to 56677

Warranty washing machines

The Godrej Fully Automatic Washing Machine comes with 2 years comprehensive warranty & 10 years motor warranty from the date of purchase, against defective material or workmanship. In case of any such defect, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) undertakes to get the appliance repaired free of charge during warranty period, subject to terms & conditions below.

Instructions for the customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorised Godrej & Boyce Service Centre for obtaining warranty service and provide the defect, model details & serial number.
4. Product will function between +/- 5% of rated volts. For any fluctuation beyond specified limit, company shall not be responsible. In turn warranty stands terminated.
5. Earthing provision is necessary for the safety.
6. Frequency must be between 5% variation of 50 Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock, etc. & the warranty stands terminated.
7. Appliance or any part thereof is subjected to neglect, abuse or misuse, tampering, alteration, accident, fire, floods or other act of God, or damage by rodents or insects, the company is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, not refund of purchase price or replacement of the appliances.
8. In event of a repair/replacement of any part/s of the unit, this warranty will thereafter continue & remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/replacement and in transit wether under the warranty or otherwise shall not be excluded from the warranty period.
9. Any damage/defect arising due to entry of coin/foreign particle into the machine, and causing malfunctioning is not covered under warranty. These calls will be chargeable to customer during warranty period.
10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.
11. Calls related to lint filter or water inlet filter cleaning are not covered under warranty and are chargeable to customer.

Terms and conditions

1. Repairs and replacement of parts will be carried out through the Authorised Customer Service Centre.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorised service centre, charges towards technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorised service center will collect any parts, components that are replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only. The maximum claim/s if entertained by the company will be subject to the maximum retail price of the product purchased or purchase price, whichever is lower.
8. In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
9. Warranty is not applicable incase the original number (serial no. sticker) is removed, obliterated or altered from the machine or cabinet.

Notes

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model no.

Unit sr. No.

Date of purchase

Customer's name & address	Dealer's name & address
Tel.	Tel.

Customer's Signature:

Protection of Environment:
Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or **www.godrejenterprises.com/green-think** for details about authorised collection points.

'This product is RoHS compliant'

Godrej

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)
Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.

55101521SD02568

Eon/Cresta_series_FL_V10_15072024