Shark HYDROVAC™

Cordless 3-in-1 Cleaner

WD210IN Series

INSTRUCTION BOOKLET



IMPORTANT SAFETY INSTRUCTIONS

FOR HOUSEHOLD USE ONLY.
READ ALL INSTRUCTIONS BEFORE USING THIS 3-IN-1 CLEANER

⚠ WARNING


To reduce the risk of fire, electric shock, injury, or property damage:

1. If the charging cord plug does not fit fully into the outlet, contact the place of purchase. **DO NOT** force into outlet or try to modify to fit.
2. To reduce the risk of shock and unintended operation, turn off power before servicing.
3. This 3-in-1 Cleaner consists of a motorised nozzle, main body, pole, and handle. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
4. Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
5. Use only identical replacement parts.
6. Use only as described in this Owner's Guide Instruction Booklet. **DO NOT** use the 3-in-1 Cleaner for any purpose other than those described in this Instruction Booklet.
7. **DO NOT** immerse or spray water on the body of the 3-in-1 Cleaner. To clean the surface, wipe with a dry cloth.
8. 3-in-1 Cleaner and dock's cord out of reach of children. **DO NOT** allow the appliance to be used by children. **DO NOT** allow to be used as a toy. Close supervision is necessary when used near children.
9. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance should not be done by children.
10. Always turn off the 3-in-1 Cleaner before connecting or disconnecting any current-carrying hoses, motorised nozzles, chargers, or other electrical or mechanical parts.
11. **DO NOT** handle plug or 3-in-1 Cleaner with wet hands.
12. **DO NOT** use without the dirty water tank, clean water tank, filter, brushroll, and brushroll cover in place.
13. Only use Shark® branded filters and accessories.
14. **DO NOT** put any objects into nozzle or accessory openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
15. **DO NOT** use if nozzle or accessory airflow is restricted. If the air paths or the motorised floor nozzle becomes blocked, turn the 3-in-1 Cleaner off. Remove all obstructions before you turn on the unit again.
16. Keep nozzle and all 3-in-1 Cleaner openings away from hair, face, fingers, uncovered feet, or loose clothing.
17. **DO NOT** use if 3-in-1 Cleaner is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
18. Use extra care when cleaning on stairs.
19. **DO NOT** leave the 3-in-1 Cleaner unattended while powered on.
20. When powered on, always keep the 3-in-1 Cleaner moving over the floor surface to avoid damaging the surface.
21. **DO NOT** place 3-in-1 Cleaner on unstable surfaces such as chairs or tables.
22. **DO NOT** use to pick up:
    - **a)** Large objects
    - **b)** Hard or sharp objects (glass, nails, screws, or coins)
    - **c)** Large quantities of dust (including drywall, fireplace ash, or embers).
    - **d)** Smoking or burning objects (hot coals, cigarette butts, or matches)
    - **e)** Flammable or combustible materials (lighter fluid, petrol, or kerosene)
    - **f)** Toxic materials (chlorine bleach, ammonia, or drain cleaner)
23. **DO NOT** use in the following areas:
    - **a)** Poorly lit areas
    - **b)** Outdoor areas
    - **c)** Spaces that are enclosed and may contain explosive or toxic fumes or vapours (lighter fluid, petrol, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).
24. Turn off the 3-in-1 Cleaner before any adjustment, cleaning, maintenance, or troubleshooting.
25. During cleaning or routine maintenance, **DO NOT** cut anything other than hair, fibres, or string wrapped around the brushroll.
26. Allow all filters to air-dry completely before reinstalling them in the 3-in-1 Cleaner to prevent liquid from being drawn into electric parts.
27. **DO NOT** modify or attempt to repair the 3-in-1 Cleaner yourself, except as indicated in this Instruction Booklet. **DO NOT** use the 3-in-1 Cleaner if it has been modified or damaged.
28. Use only Shark® brand cleaning fluids intended for use with this appliance to prevent internal component damage.
29. The 3-in-1 Cleaner will not run without sufficient water supply in the clean water tank.


SAVE THESE INSTRUCTIONS

ASSEMBLY

1. Align the **Pole** with the opening in the **Main Body** and insert it until it clicks into place.

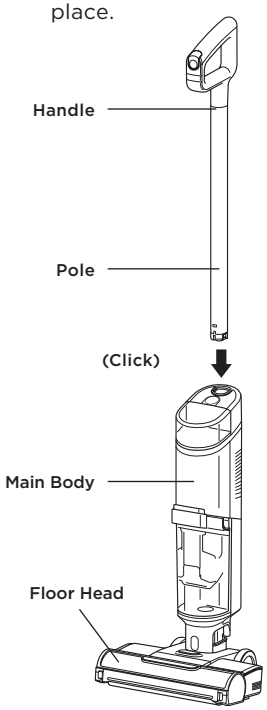

2. Place the **Storage Dock** on the floor near a wall outlet. Place the 3-in-1 Cleaner on the tray.

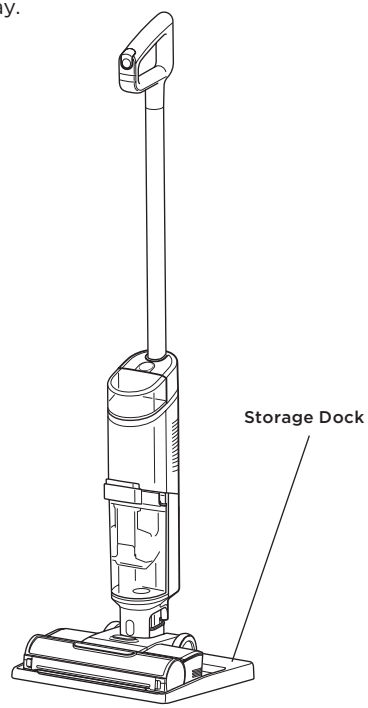


NOTE: To remove the Handle, press the release button located on the back of the unit with a thin tool while pulling up on the Handle.

NOTE: When assembling your HydroVac, there may be a little water in or around the water tanks. This is because we test all our HydroVacs before you buy them to ensure the highest quality.


USING YOUR 3-IN-1 CLEANER

FILLING THE CLEAN WATER TANK

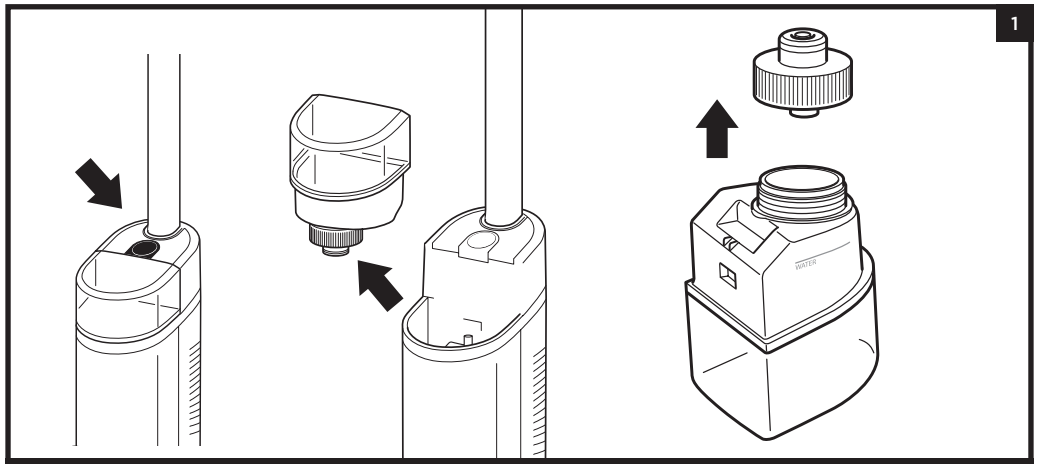

REMOVE THE CLEAN WATER TANK

Press the release button and lift off the **Clean Water Tank**.

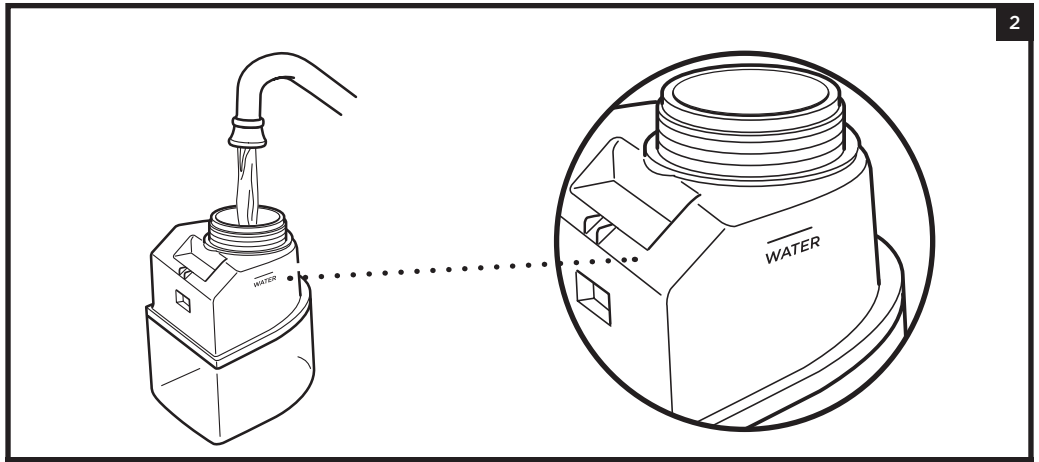


FILL THE CLEAN WATER TANK

Unscrew the cap and add water to the tank, up to the WATER line. Replace the cap and reinsert the tank until it clicks into place. The top of the tank should be flush with the top of the body.

NOTE: Only use water with this product.
NOTE: Be sure to not overfill the Clean Water Tank with more water than instructed, as this may cause issues while in use.
NOTE: Without sufficient water supply in the Clean Water Tank, HydroVac will not run.

USING YOUR 3-IN-1 CLEANER


CONTROLS

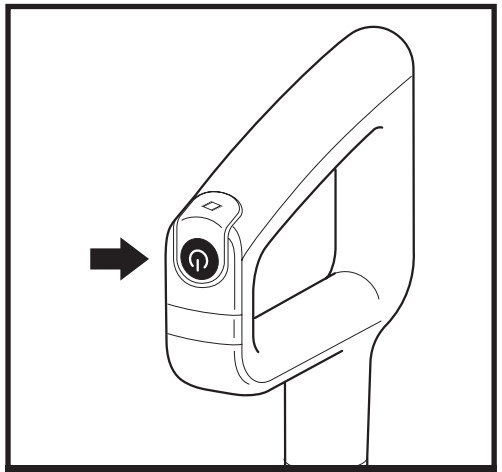

POWER


Press and release the **Power** button on the handle to turn on power. To turn off power, press the button again.

CLEANING MODES

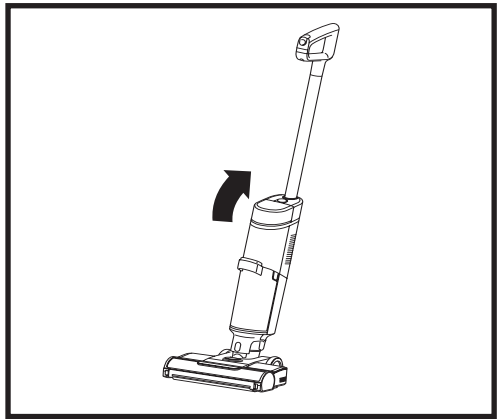

HARD FLOOR MODE

Use Hard Floor mode for powerful cleaning on bare floors. To activate Hard Floor mode, turn on the unit and tilt the handle back.

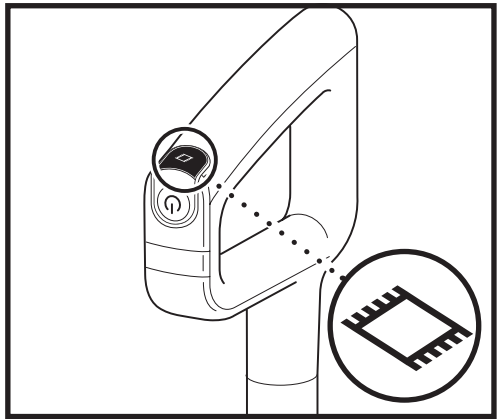

FRESHEN MODE

To clean area rugs, press the Freshen Mode icon on top of the handle. The Freshen Mode light on the main body will illuminate. To turn off Freshen Mode mode, press the button again.

NOTE: To prevent leakage, DO NOT place the main body on the floor. The nozzle should always be kept flat on the floor.


NOTE: If you encounter a difficult stain, use Freshen Mode for improved stain cleaning.


NOTE: If you encounter a stubborn odor on your floor or area rug, continue to clean in Freshen Mode until the odor is gone.

NOTE: If your floors are cloudy, streaky, or spotty after cleaning, it may be due to accumulated soap or grease residue. The floor may require several cleanings with the HydroVac.

MAINTAINING YOUR 3-IN-1 CLEANER

SELF-CLEANING MODE

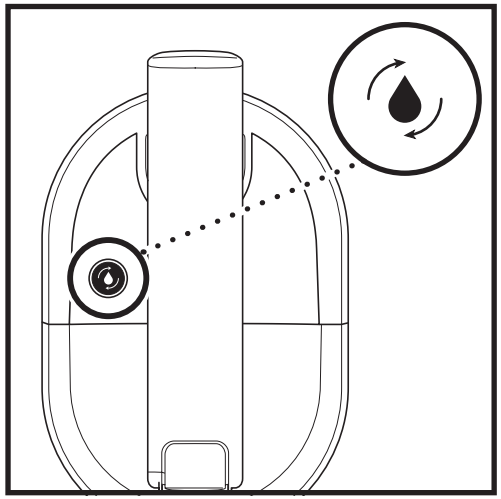


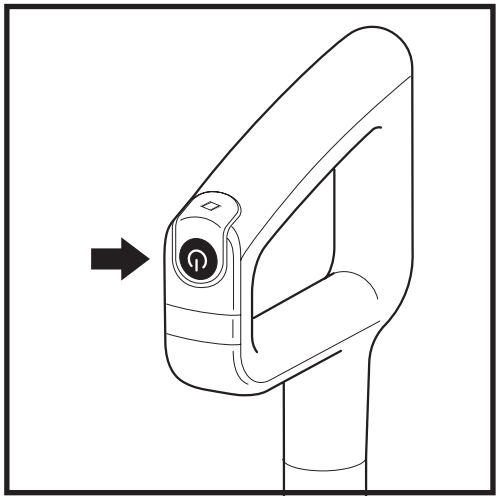

RECOMMENDED AFTER EVERY USE

1. Place the unit on the Storage Dock. The Self-Clean mode icon located on the top of the main body will pulse.
2. Empty the **Dirty Water Tank** and make sure the Clean Water Tank is at least half full.
3. Press the **Power Button** to start the self-clean cycle. The icon will illuminate for the full 2-minute duration of the cycle.
4. **DO NOT** remove the unit from the tray during the self-cleaning cycle. The icon will turn off when the cycle is complete.
5. Empty the Dirty Water Tank.


   See **Troubleshooting** for more information on Self-Clean information.

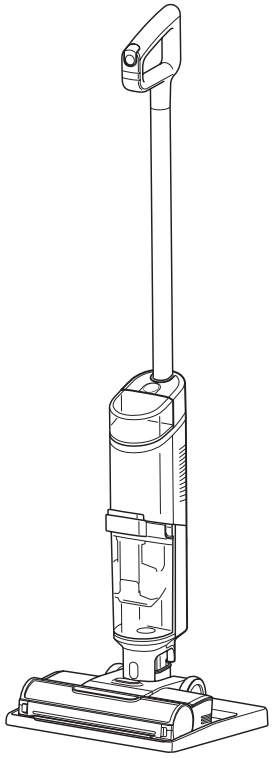


NOTE: Make sure the Clean Water Tank is at least half full and that the Dirty Water Tank is empty before running the self-cleaning cycle.

MAINTAINING YOUR 3-IN-1 CLEANER

CLEANING THE BRUSHROLL

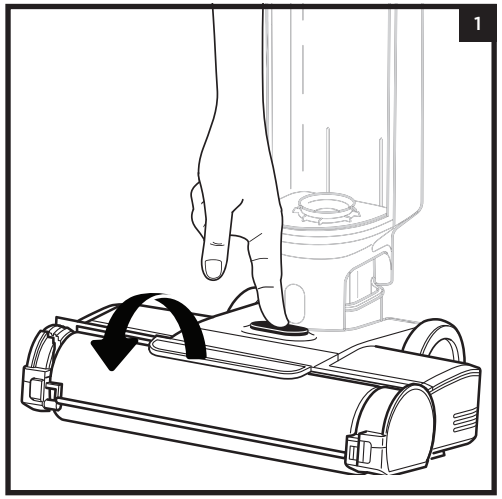


1. To access the Brushroll, press the button on the top of the nozzle and lift off the Brushroll Cover.

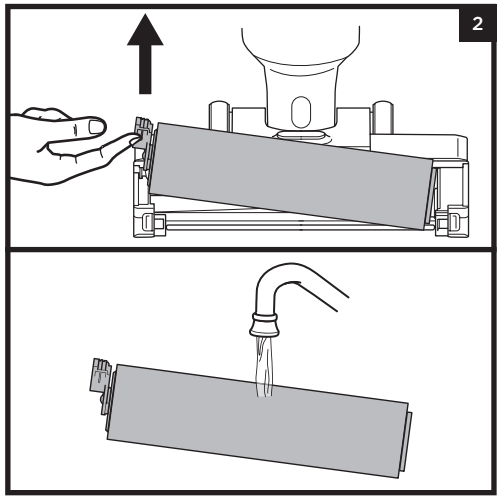


2. Remove the Brushroll by pulling up on the pull tab on the left side of the nozzle.

Wash thoroughly with warm water. Allow the Brushroll to air-dry completely in a well-ventilated area for at least 24 hours.

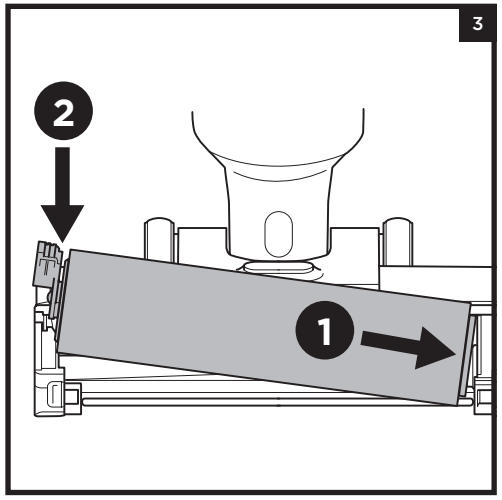

3. Reinsert the Brushroll by lining up the grooves on the end of the Brushroll with the helix on the inner right side of the nozzle, then press down on the left side of the Brushroll. When properly installed, the Brushroll tab will be flush with the left side of the nozzle.

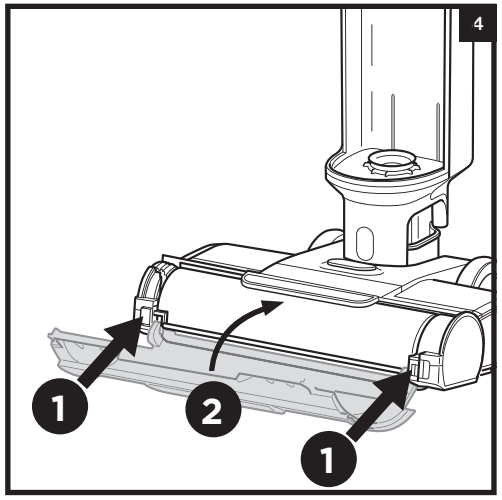


4. To reinstall the Brushroll Cover, insert the hooks on the bottom of the cover into the unit first. Press down on the cover until it clicks into place.


NOTE: Do not place Brushroll in washing machine or dishwasher. Replace the Brushroll after 6 months.

MAINTAINING YOUR 3-IN-1 CLEANER


CLEANING THE DIRTY WATER TANK

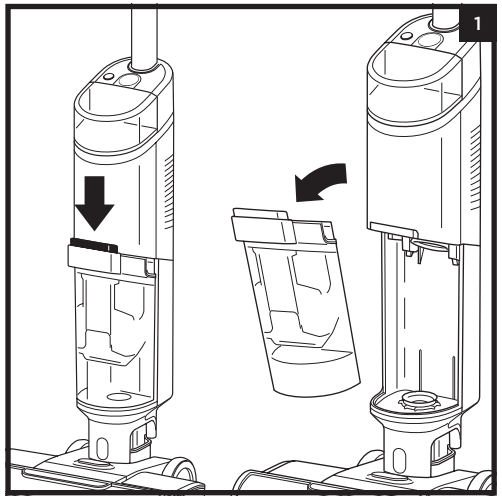


1. To remove the Dirty Water Tank, press the release button and pull out the tank.

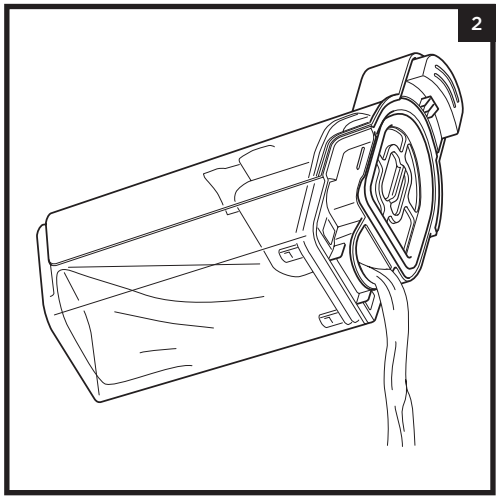

2. To dispose of liquid waste only, pour it out though the **Express Clean Spout** on the back of the Dirty Water Tank.

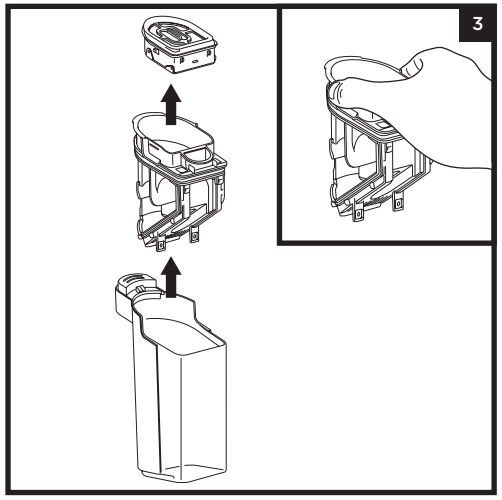


3. To dispose of solid debris, lift out the **Solids Separator**. Grasp the recessed areas on the sides of the separator and lift it out. Empty the solid debris into the trash. If any liquid waste remains in the tank, pour it down a drain. To clean, rinse the separator and the tank with water.

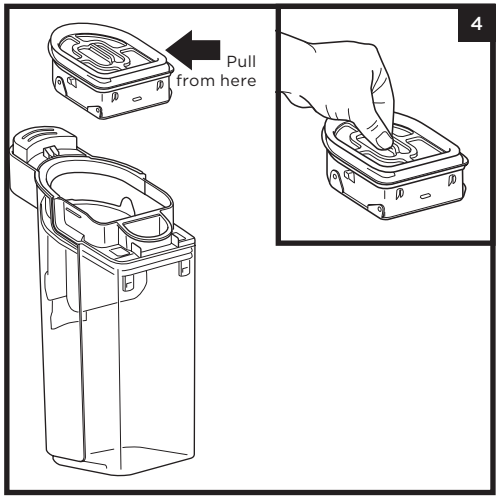

4. Clean the Filter in the top of the Solids Separator every month. Pull out the Filter and hand-wash with warm water and soap. Allow the Filter to air-dry completely in a well-ventilated area before reinstalling it.

NOTE: Replace the Filter every **6 Months**.


NOTE: Do not place Dirty Water Tank in washing machine or dishwasher.

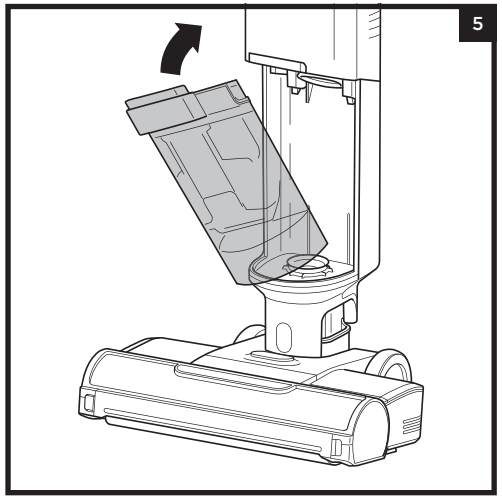

5. After cleaning the Dirty Water Tank and the Solids Separator, allow them to air-dry in a well-ventilated area for at least 24 hours. To reinstall the tank, insert the bottom into the opening in the main body, then tilt the tank back until it clicks into place.

CHECKING FOR BLOCKAGES

If you run over a hard or sharp object or notice a noise change while using your unit, check for blockages or objects caught in the brushroll, nozzle chamber, or inlet hose.

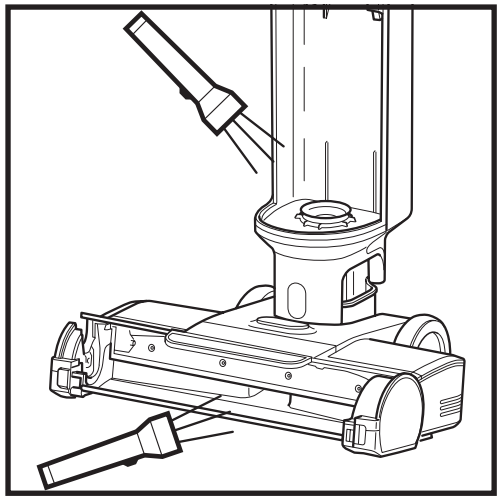

1. Turn off the power.

2. Remove the Brushroll Cover, Brushroll, and Dirty Water Tank.

3. Check the openings and remove all debris.

4. When finished, reinstall the brushroll and the cover.

MAINTAINING YOUR 3-IN-1 CLEANER

TROUBLESHOOTING

⚠ **WARNING: To reduce the risk of shock and unintended operation, turn off power before servicing.**

LED INDICATOR	WHAT IT MEANS	WHAT TO DO
The Water Droplet LED is pulsing red.	The Dirty Water Tank is full.	Empty the fluid in the Dirty Water Tank. *If this is a false error, remove solids separator and clean completely. Allow part to dry for 24 hours or dry manually.
The Water Droplet LED is pulsing aqua.	The Clean Water Tank is empty.	Fill the Clean Water Tank. Refer to the “Filling the Clean Water Tank” section.
The Freshen Mode icon and the three water droplet lights are flashing red at the same time.	Brushroll Cover is not installed properly.	Refer to the “Cleaning the Brushroll” section, step 4
The Freshen Mode icon and the three water droplet lights are flashing red out of sync.	The Brushroll is jammed.	Turn off the power before cleaning the Brushroll and any debris that may be causing the jam. Refer to the “Cleaning the Brushroll” section.
Self-Clean icon and droplets are flashing blue.	Not enough solution to run Self-Clean Cycle.	Fill Clean Water Tank to allow self-clean cycle to run.
Self-Clean icon and droplets are flashing red.	Dirty Water Tank is full and preventing Self-Clean Cycle to run.	Empty Dirty Water Tank to allow self-clean cycle to run.

ORDERING REFILLS AND PARTS

Replace the filter and brushroll every 6 months. Only use water with the Shark HydroVac™. To order Brushrolls, Filters, and other Replacement Parts, please visit sharkclean.in or scan the QR code here.

NOTE: If 3-in-1 Cleaner still does not operate properly, contact Customer Service at 1800-296-0076.

TWO (2) YEAR LIMITED WARRANTY

The warranty commences on the date of purchase and expires at the end of the two (2)-year period. In the unlikely event of a defect due to faulty materials or workmanship within the warranty period we will replace the defective/faulty part with a new part/product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.

For warranty claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the original date of purchase.

Any personal data collected through this warranty process will be used for warranty-related purposes and for marketing communications, subject to the customer's right to opt out. All data will be handled in accordance with applicable data protection laws.

Your warranty is subject to the following conditions:

- DO NOT operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.
- Any parts/product which are replaced will become the property of Shark Ninja.
- The company reserves the absolute right to amend, extend, cancel, and/ or discontinue terms and conditions or any part thereof without giving any reason or prior notice to the customer.
- Force Majeure: The company shall not be liable for the non-performance of its obligation under this terms and conditions where such failure is due to a force majeure event i.e. any act of God, orders, restrictions, or regulations of Government(Central or State), war, working conditions, hostilities, riots, civil commotion, strike, lock-out, lockdown, pandemic, labour trouble, explosion, or any other cause or circumstances of whatsoever nature beyond control.
- Any dispute shall be subject to the exclusive jurisdiction of Bengaluru Courts .

What is covered by this warranty?

This warranty applies only to the original purchaser, who bought the product from an authorised retailer and may not be transferred. Proof of purchase is required.

The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to two (2) years from the original purchase date.

In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

This warranty applies only to products purchased in India from authorized sellers and is valid for service within India. No international warranty is offered.

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear (including, but not limited to, batteries, fuse, belt, brush rolls, filters etc.) caused by normal use in accordance with operating instructions. Replacement parts are available for purchase at www.sharkninja.in or reach out to us atcustomerservice@sharkninja.in.
- In case, model number, serial number, or production date code on the product has been altered, removed, or is no longer legible.
- Unauthorised/ improper maintenance/ handling or overload is excluded from this warranty.
- Repairs or alterations carried out by repair persons not authorized by SharkNinja.
- Accidental damage including, but not limited to, transit, weather, electrical outages or power sags/surges.
- Damage resulting from use not in accordance with the rating plate.
- Removal of blockages. If a blockage does occur, please refer to the trouble shooting guide within your Shark Operating manual.
- Use of parts and accessories that are not genuine Shark components.
- Products purchased, used, or operated outside India.

TWO (2) YEAR LIMITED WARRANTY

Waste Electrical and Electronic Equipment (WEEE)



This symbol (with or without a solid bar) means that according to local laws and regulations your product and/ or its battery shall be disposed of separately from household waste. When this product reaches its end of life, the user may choose to hand over the product to a competent recycling organization. Proper recycling of your product will protect human health and the environment.

If you are unsure what to do with e-waste, please contact your local authorities, retailer, or household waste disposal service.

For more information on safe disposal and recycling you may log on to https://www.sharkninja.in/legal/e-waste-management or contact our Toll Free No: 1800-296-0076

Reduction of Hazardous Substances

This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment. For declarations of conformity about REACH, please visit our website www.sharkninja.in

Contact Us

If you have any questions, or would like to claim your warranty, please contact us as follows:

Website: www.sharkninja.in

Email: customerservice@sharkninja.in

Toll Free Telephone: 1800-296-0076

NOTES

REGISTER YOUR PURCHASE

sharkclean.in

RECORD THIS INFORMATION

Model Number: _____

Date Code: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TIP: You can find the model on the QR code label on the bottom of the back of the 3-in-1 Cleaner.

All testing on carpet (e.g. per ASTM-F608) shall be conducted in Freshen Mode.

TECHNICAL SPECIFICATIONS

Voltage: 21.6V ⎓

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.
This Owner's Guide is designed to help you keep your Shark HydroVac™ 3-in-1 Cleaner running at peak performance.

@SharkNinjaIndia

@SharkHomeIN

@SharkHomeIN

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Instruction Booklet is designed to help you get a complete understanding of your new Shark HydroVac™ Cordless 3-in-1 Cleaner.

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

SHARK is a registered trademark of SharkNinja Operating LLC.

SHARK HYDROVAC is a trademark of SharkNinja Operating LLC.

© 2025 SharkNinja Operating LLC.
WD210IN_IB_MP_Mv4
PRINTED IN VIETNAM