

フィリップス ボディグルーマー
品番 BG3005/15

取扱説明書

©2019 Philips Japan, Ltd.
4222.002.9212.1(04/19)

フィリップス ボディグルーマー 保証書

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行なうことをお約束するものです。お買い上げ日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にて記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品名	ボディグルーマー
品番	BG3005/15
保証期間	お買い上げ日より2年
対象部分	本体、充電アダプタ(刃、コームを除く)
お買い上げ日	年月日
お客様	ご住所 ご姓名 電話番号 販売店名・住所・電話番号
★販売店	★保証書は再発行しませんので、大切に保管してください。 ★お店舗へ、この保証書はお客様のアフターサービスの実施と責任を明確にするものであります。商品名、記念品の場合も必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859
受付時間:9:00~18:00(年末年始除く)

Webからの
お問い合わせ

MyPhilips登録のご案内
QRコードを読み取って登録して顶くことで、製品登録をやすやすしくできます。
MyPhilips登録写真も保管でき、万が一購入明細書が紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

この印刷物は再生紙を使用しております。

フィリップス、ボディグルーマーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただきたくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつも見られるところに必ず保管してください。



お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

目次

- ① 必ずお守りください
- ② 各部の名称
- ③ 充電の仕方
- ④ 基本的な使い方
- ⑤ トリミングの仕方
- ⑥ ボディシェーピングの仕方
- ⑦ ボディシェーピングのコツ
- ⑧ お手入れ方法
- ⑨ 製品を廃棄するとき
- ⑩ 故障かな?と思ったら
- ⑪ 保証とアフターサービス
- ⑫ 仕様
- ⑬ 無料修理規定
- Guidance in English

① 必ずお守りください

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

●誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区分けています。

○絵表示について

△ 警告 人が死亡または重傷を負う可能性が想定される内容。

△ 注意 人が傷害を負う可能性及び物的損害の発生が想定される内容。

○絵表示の例

△ 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁じられた内容(左図の場合は分解禁止)を示します。

△ 記号は、必ずしてほしい「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

△ 警告

●本体ならびに充電アダプタは改造しないでください。また、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はフィリップスサポートセンターにお問い合わせください。

●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。

●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電、ショート・発火の原因になります。

●充電アダプタを水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。

●本体を水洗う場合は、必ずコンセントから電源プラグを抜いてください。

●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、ねたねたなど、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損・火災・感電の原因となります。

●乳幼児の手の届くところに本製品を置かないでください。

●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するは危険ですのでおやめください。

●自分で意思表示ができるない人(乳幼児を含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。

●充電アダプタの寿命は、保管などの状態により異なります。

●シックル水素電池の性能上、電池容量を便りやすく充電を繰り返すと使用可能時間が減少することがあります。これを避ける為、最後まで充電をさせてから、充電することをおおすすめします。

△ 注意

●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の充電アダプタ部を持って引き抜いてください。感電やショートを防ぐことがあります。

●充電アダプタは付属の充電アダプタを使用してください。また付属の充電アダプタでの商品を充電しないでください。

●刃は強く押さないでください。破損して皮膚を傷つけることがあります。

●刃やコームなどの部品が破損または開放した場合は、本製品を使用しないでください。カガマの原因になります。交換の際には必ずフィリップス社製の同型部品と交換してください。

●充電コネクタ部にビニールを付着せないでください。感電、ショート・発火の原因になります。

●刃を剃った頭髪を刈るなど、本来の目的以外で使用しないでください。

●電源のON/OFFを差し替えたまま使用はできません。

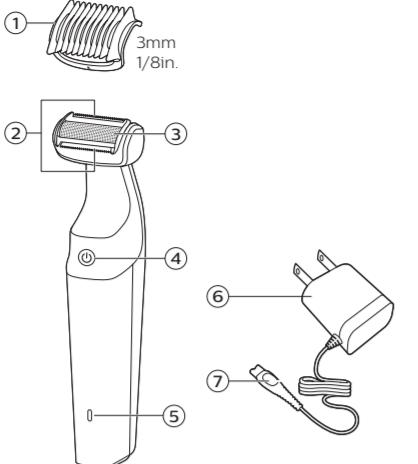
*使用後は電源をOFFにして使用のために掃除をしてください。

●刃は強く押さないでください。破損して皮膚を傷つけることがあります。

●刃やコームなどの部品が破損または開放した場合は、本製品を使用しないでください。カガマの原因になります。交換の際には必ずフィリップス社製の同型部品と交換してください。

●刃を剃った頭髪を刈るなど、本来の目的以外で使用しないでください。

●刃やコームなどの部品が破損または開放した場合は、本製品を使用しないでください。カガマの原因になります。交換の際には必ずフィリップ

**Charging**

Charging takes approx. 8 hours. Charge the appliance before you use it for the first time and when the display indicates that the battery is almost empty.

- Charging, recharging or using the product at temperatures below 40°F (4.5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.

- 1 Make sure the appliance is switched off.
- 2 Insert the small plug into the shaver and put the supply unit in the wall socket (Fig. 3).
- 3 After charging, remove the supply unit from the wall outlet and pull the small plug out of the appliance.

Operating time BG3005

When the appliance is fully charged, it has a cordless operating time of up to 40 minutes.

Using the appliance

You can use the appliance wet or dry to shave hair on all parts of your body below the neckline (Fig. 5). (Fig. 6).

Always check the appliance and all accessories before you use them. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- Use this appliance for its intended household use as described in this manual.
- For hygienic reasons, the appliance should only be used by one person.
- Trimming is easier when the skin and hair are dry

Note: This appliance is for cordless use only.

Switching the appliance on and off

- 1 Press the on/off button once to switch the appliance on or off (Fig. 7).

Attaching and detaching combs

- 1 To attach a comb, snap the front part of the comb onto the teeth of the shaving unit and push the projection at the back of the comb into the appliance ('click') (Fig. 8).
- 2 To detach a comb, carefully pull the back part off the appliance and then remove it from the shaving unit (Fig. 9).

Trimming**Trimming**

- 1 Snap the trimming comb onto the appliance (Fig. 8).
- 2 Press the on/off button to turn on the appliance (Fig. 7).
- 3 Move the appliance against the direction of hair growth (Fig. 11), (Fig. 12).

Note: Make sure that the flat part of the trimming guard is always fully in contact with the skin.

- 4 Switch off and clean the appliance after each use (see 'Cleaning').

- If you are trimming for the first time, be careful. Do not move the appliance too fast. Make smooth and gentle movements
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and be sure the surface of the comb always stays in contact with your skin.
- Body hair can be trimmed wet or dry, however dry is preferable because wet hair tends to stick to the body."
- When trimming sensitive areas, always use a trimming comb.

Trimming length settings

The trimming comb allows you to cut hair to a length of 3 mm (1/8 in.)

Shaving

This product is only intended for shaving and trimming body parts below the neckline. Do not use it to shave or trim facial or scalp hair.

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.

- If your hair is longer than 10mm, trim hair to a length of 3mm first for optimum shaving results.

- For dry use, make sure that your skin is clean and dry before using the shaving unit.

- For wet use, prepare your skin with lathered soap or shaving foam before you use the appliance.

- Remove any trimming comb from the appliance (Fig. 9).

- 2 Press the on/off button to switch on the appliance (Fig. 7).

- 3 Stretch your skin taut with your free hand (Fig. 13). Gently press the shaving unit onto skin and move it slowly and smoothly against the direction of hair growth (Fig. 14), (Fig. 15).

- Do not press too hard. Too much pressure can distort the foil and cause skin irritation.

- Make sure the shaving unit is always in full contact with your skin.

- The shaver is bi-directional, which means that you can shave by moving the appliance up and down. Shave against the hair growth for optimal performance.

- 4 Switch off and clean the appliance after each use (see 'Cleaning').

Cleaning

Clean the appliance after every use. Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Note: After approx. 30 minutes, the light goes out automatically.

Never dry trimmer or shaving foil head with a towel, brush or tissue, as this may cause damage.

- 1 Switch off the appliance (Fig. 7).
- 2 Remove any trimming comb from the appliance (Fig. 9).
- 3 Hold the shaving unit by pulling it off the appliance (Fig. 16).
- 4 Rinse the shaving foil head with warm running tap water (Fig. 17).
- 5 Allow the shaving unit to air dry completely.
- Never dry trimmer or shaving foil head with a towel, brush or tissue, as this may cause damage.
- 6 Rinse the hair chamber under warm running tap water to remove any residues (Fig. 18).
- 7 Reattach the shaving unit by snapping it back onto the appliance (Fig. 19). ('click')

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

- Model TT2000 Philips replacement shaving unit (Fig. 6).

Replacement**Replacing the shaving foil head**

For maximum shaving performance, we advise you to replace the shaving unit every year (TT2000). If the shaving unit is worn or damaged, do not use the appliance and replace the shaving unit immediately. Always replace the shaving unit with original Philips TT2000 shaving unit. Accessories (Fig. 20).

- 1 Switch off the appliance and disconnect it from the wall socket (Fig. 7).
- 2 Pull the shaving unit out of the appliance (Fig. 16).

Note: The foil is delicate. Handle the shaving unit with care.

- 3 Snap the new shaving unit into the appliance ('click') (Fig. 19).
- 4 Check if the shaving unit is firmly attached before you use the appliance.

Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).
- This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC). Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Place a flathead screwdriver in the hole above the socket for the small plug. Twist the screwdriver to create a gap between the front and back panel of the appliance (Fig. 21).
- 2 Place a flathead screwdriver between the front and back panel. Twist the screwdriver to remove front panel of the appliance (Fig. 22).
- 3 Place a flathead screwdriver between the inner body and the back panel. Twist the screwdriver to remove the back panel of the appliance (Fig. 23).
- 4 Remove the two screws in the back of the appliance (Fig. 24).
- 5 Pull the panel with the on-off button from the inner body (Fig. 25).
- 6 Remove the transparent inner cover by bending the transparent flaps away from the hooks (Fig. 26).
- 7 Pull the printed circuit board off the inner body (Fig. 27).
- 8 Cut the wires that connect the batteries to the printed circuit board and remove the batteries (Fig. 28).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.