
Single Electric Blanket

150 x 80 cm


PEBL120CWT1

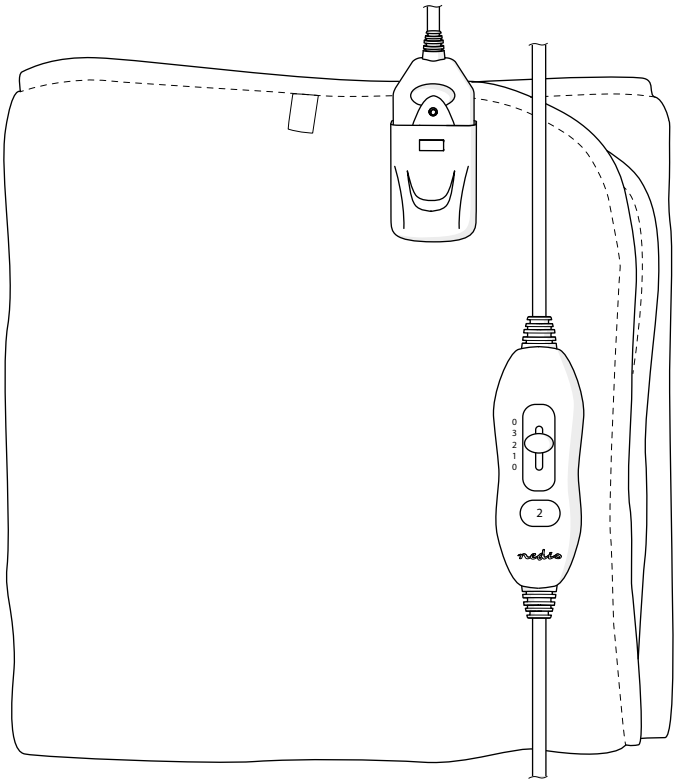


ned.is/pebl120cwt1

EN Quick start guide 4
DE Kurzanleitung 5
FR Guide de démarrage rapide 7
NL Snelstartgids 8
IT Guida rapida all'avvio 10
ES Guía de inicio rápido 12
PT Guia de iniciação rápida 13
SV Snabbstartsguide 15
FI Pika-aloitusopas 16
NO Hurtigguide 18
DA Vejledning til hurtig start 19
HU Gyors beüzemelési útmutató 21
PL Przewodnik Szybki start 23
EL Οδηγός γρήγορης εκκίνησης 24
SK Rýchly návod 26
CS Rychlý návod 27
RO Ghid rapid de inițiere 29


A

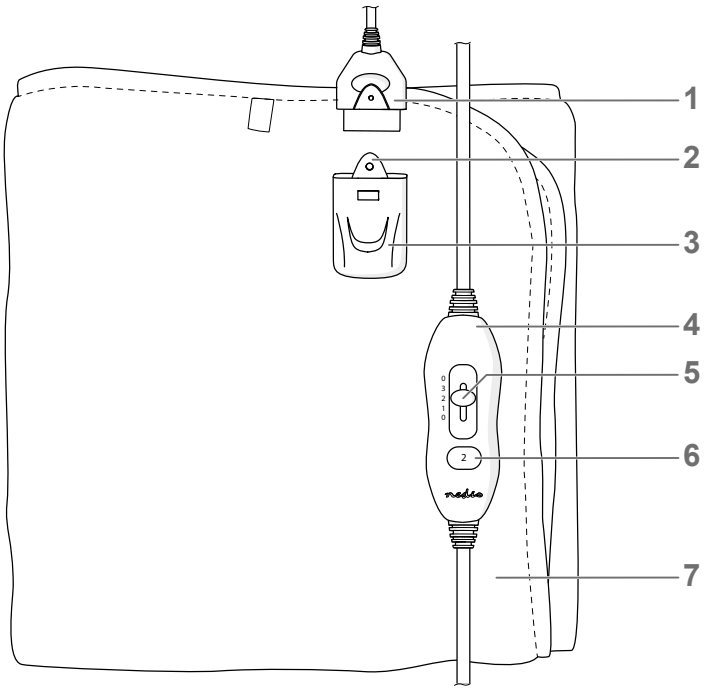

B

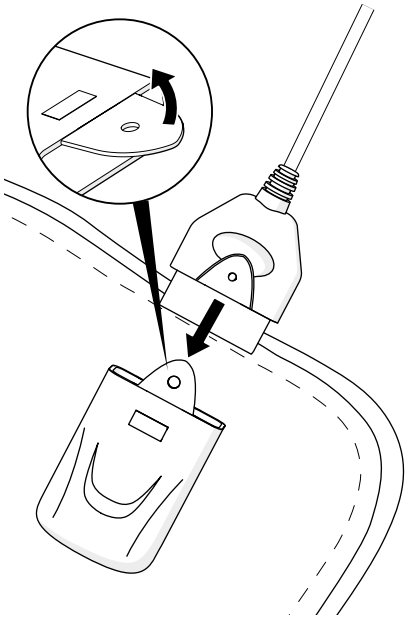

C

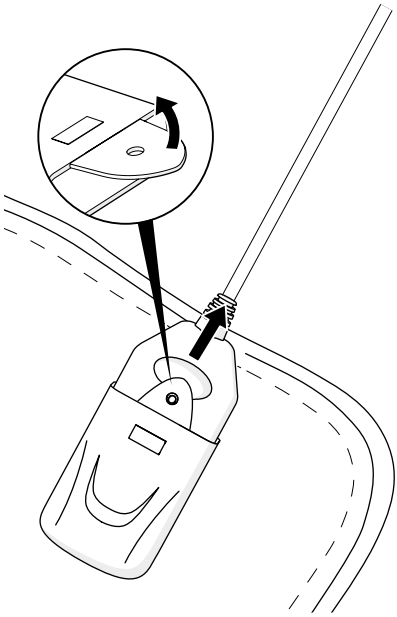

EN **Quick start guide**

Single Electric Blanket PEBL120CWT1

For more information see the extended manual online: **ned.is/pebl120cwt1**

Intended use

The Nedis PEBL120CWT1 is a single electric underblanket with a detachable controller that includes 3 heat levels.
This product is intended for indoor use only.
The product is not intended for professional use.
The product is not intended for medical use in hospitals.
This product is not intended for warming animals.
This product is not intended for use on an adjustable bed.
This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be done by children without supervision.
This product is not intended for persons insensitive to heat and other vulnerable persons, such as children under the age of 3, who are unable to react to overheating.
The product is intended for use in household environments for typical housekeeping functions that may also be used by non-expert users for typical housekeeping functions, such as: shops, offices other similar working environments, farm houses, by clients in hotels, motels and other residential type environments and/or in bed and breakfast type environments.
Any modification of the product may have consequences for safety, warranty and proper functioning.

Specifications

Product	Single Electric Blanket
Article number	PEBL120CWT1
Dimensions (l x w)	150 x 80 cm
Input voltage	AC 220 - 240 V ~ 50 Hz
Wattage	60 Watt
Temperature settings range	3 heat levels
Material	Polyester

Main parts (image **A**)

1. Power plug
2. Locking tab
3. Power socket
4. Controller (TWK-1/T4K)
5. Power switch
6. LED indicator
7. Blanket

Safety instructions

⚠ WARNING

- Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep this document for future reference.
- Only use the product as described in this manual.
- Do not use the product if a part is damaged or defective. Replace a damaged or defective device immediately.
- This product may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Unplug the product from the power source if problems occur.
- Do not drop the product and avoid bumping.
- Use only the type of controller marked on rating label.
- Always switch off the controller before you insert or remove a plug.
- Adjust the controls to a setting recommended for continuous use when the product is likely to be used for an extended period, for instance by the user falling asleep.
- Always use the voltage (A.C. Only) marked on the rating label.
- Keep distance from flammable objects.
- Do not expose the product to direct sunlight, naked flames or heat.
- Do not expose the product to water or moisture.
- Do not use the product when it is damp or wet.
- Do not use the product in wet or damp environments.
- Used only as underblanket.
- Only use the product with the provided controller.
- The product is not intended for medical use in hospitals.
- Do not use together with another heating appliance.
- Make sure the product and power cable do not get trapped when in use.
- Children should be supervised to ensure that they do not play with the product.
- Cleaning and user maintenance shall not be done by children without supervision.
- The product must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of 3 are not to use the product due to their inability to react to overheating.
- The product is not to be used by young children over 3 years of age, unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- The product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Do not crease the product by placing items on top of it during storage.

Connecting the controller (image **B**)

1. Lift the locking tab **A**(2).
2. Push the power plug **A**(1) into the power socket **A**(3).

Removing the controller (image **C**)

⚠ Make sure the control switch **A**(5) is switched to '0'.
⚠ Do not pull on the cable of the controller **A**(4).
⚠ Do not try to pull the power plug **A**(1) out without lifting the locking tab **A**(2).

1. Lift **A**(2).
2. Pull **A**(1) out of **A**(3).

Preheat

⚠ Do not use the product when it is damp or wet.
⚠ Do not place the blanket under a pillow.
⚠ This product is not intended for use on an adjustable bed.
⚠ Ensure people do not trip over the cable.

1. Place the blanket on the mattress.
2. Secure the blanket with the tie loops to the mattress.
⚠ Make sure that the blanket will not move or crease.
3. Cover the blanket with a fitted sheet.
4. Connect the controller.
5. Connect the power cable to a power outlet.
6. Switch the control switch **A**(5) to mode '3' to preheat the blanket.

ⓘ Preheat 30-60 minutes before using.

Using the product

⚠ If you go to sleep or use the product for a long time, set **A**(5) to '1', to avoid overheating.

1. Switch **A**(5) to set the desired temperature between '1' (low) '2' (medium) and '3' (high).