Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Elica SAPPHIRE CT VETRO (DT SERIES)

Elica SAPPHIRE CT VETRO (DT SERIES) 4 Burner Gas Stove User Manual

Model: SAPPHIRE CT VETRO (DT SERIES) | Brand: Elica

1. Introduction

Thank you for choosing the Elica SAPPHIRE CT VETRO (DT SERIES) 4 Burner Gas Stove. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions carefully before using the gas stove and retain them for future reference.



Image 1.1: Top-down view of the Elica SAPPHIRE CT VETRO (DT SERIES) 4 Burner Gas Stove, showcasing its black toughened glass top and four brass burners.

2. Safety Information

Your safety and the safety of others are paramount. Please observe all safety precautions outlined below.

General Safety Guidelines:

- Ensure adequate ventilation in the kitchen area during operation.
- Do not store or use flammable materials near the gas stove.

- Keep children and pets away from the appliance during use.
- If you smell gas, immediately turn off the gas supply, open windows, and do not operate any electrical switches or appliances. Contact your gas supplier or a qualified technician.
- Always use stable, appropriately sized cookware on the burners.
- Do not leave cooking unattended.
- Ensure the gas stove is installed by a qualified technician.

3. Product Features

The Elica SAPPHIRE CT VETRO (DT SERIES) gas stove is designed with features for efficient and safe cooking.

- **High-Efficiency Vertical Flame Burners:** Precision-engineered burners optimize the air-gas mixture, producing a strong vertical flame for faster cooking and even heat distribution. The stove features 4 powerful burners: 2 Jumbo, 1 Medium, and 1 Small.



Image 3.1: A close-up view of a gas burner demonstrating the vertical flame technology, which ensures efficient heat distribution.

- **Toughened Glass Top:** The durable black toughened glass top resists stains and heat discoloration, providing an elegant appearance and long-lasting performance.

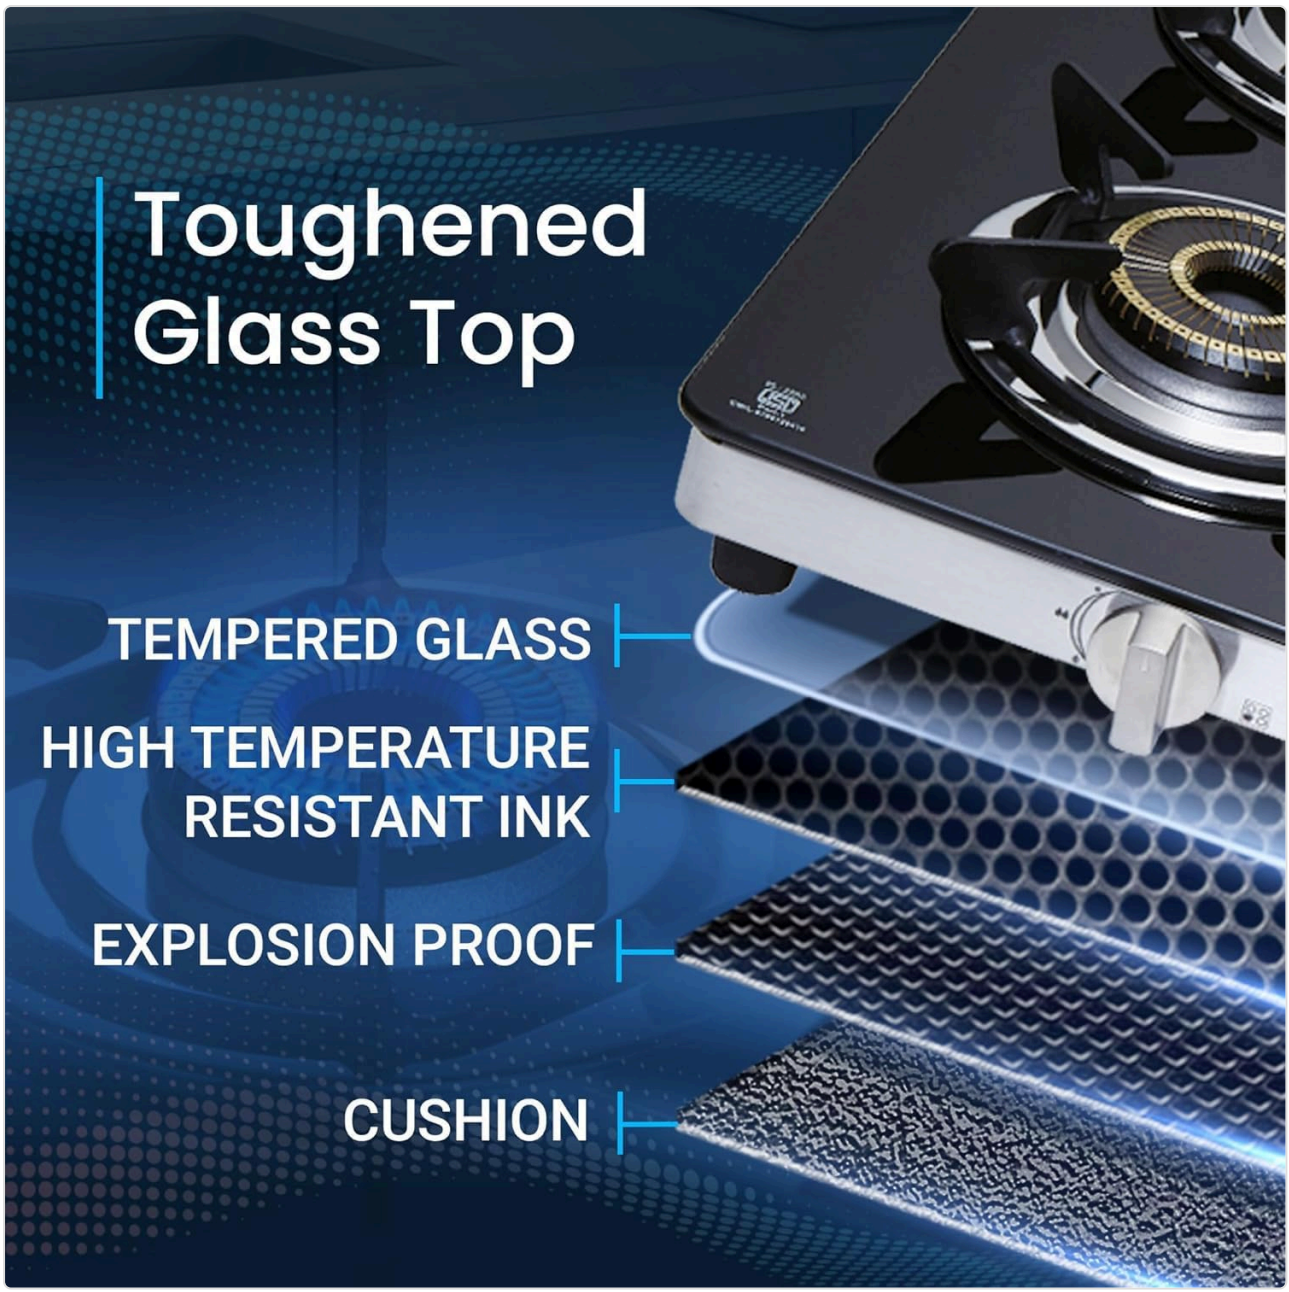


Image 3.2: An exploded diagram illustrating the multi-layered construction of the toughened glass top, including tempered glass, high-temperature resistant ink, and an explosion-proof layer with a cushion.

- **Double Drip Tray Design:** Integrated double drip trays effectively prevent messy spills by trapping food and liquids, simplifying the cleaning process.
- **Stainless Steel Frame:** A robust stainless steel (SS) frame provides enhanced sturdiness and a modern aesthetic.
- **High Efficiency Brass Burners:** The burners are constructed from brass for durability and high thermal efficiency.



Image 3.3: A detailed view of a heavy-duty, high-efficiency brass burner, highlighting its robust construction and pan support.

4. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your gas stove. It is highly recommended that installation be performed by a qualified and authorized technician.

Unpacking:

- Carefully remove the gas stove from its packaging.
- Verify that all included components are present: 1 Gas Stove, 1 User Manual.
- Inspect the appliance for any signs of damage during transit. Do not install if damaged.

Placement:

- Place the gas stove on a stable, level, and heat-resistant surface.
- Ensure adequate clearance from adjacent walls and overhead cabinets to allow for proper ventilation and prevent fire hazards.
- The area should be well-ventilated.

Gas Connection:

- Connect the gas stove to the appropriate gas supply (LPG or PNG) using a certified gas hose and regulator.
- Ensure all connections are tight and leak-free. A soap solution can be used to check for leaks (bubbles indicate a leak).

5. Operating Instructions

Follow these steps for safe and effective operation of your Elica gas stove.

Ignition:

1. Ensure the gas supply to the stove is open.
2. Place your cookware on the pan support over the desired burner.
3. Push down and turn the corresponding control knob counter-clockwise to the 'Ignite' position.
4. Simultaneously, use a gas lighter to ignite the burner. Hold the lighter near the burner until the flame ignites.
5. Once the burner is lit, release the knob and adjust the flame intensity by turning the knob between the 'High' and 'Low' settings.

Turning Off:

- To turn off a burner, turn its control knob clockwise to the 'Off' position.
- After cooking, ensure all burners are turned off and, if necessary, close the main gas supply valve.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your gas stove.

Daily Cleaning:

- Allow the stove to cool completely before cleaning.
- Wipe the toughened glass top with a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can scratch the surface.
- Clean the stainless steel frame with a damp cloth and dry thoroughly.

Burner and Drip Tray Cleaning:

- Remove the pan supports, burners, and double drip trays.
- Wash these components with warm soapy water. For stubborn stains, a non-abrasive scrub brush can be used.
- Ensure burners are completely dry before reassembling to prevent ignition issues.
- Regularly check burner holes for blockages and clean them with a fine wire or needle if necessary.

7. Troubleshooting

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply; burner cap/skirt incorrectly placed; clogged burner holes; faulty lighter.	Check gas cylinder/pipeline supply; correctly position burner parts; clean burner holes; replace lighter.
Weak or uneven flame	Clogged burner holes; low gas pressure; incorrect air-gas mixture.	Clean burner holes; check gas regulator; contact service technician if issue persists.
Gas smell without ignition	Gas leak; knob not fully off.	Turn off gas supply immediately, ventilate area, do not use electrical switches, contact gas supplier/technician. Ensure knobs are fully off.

If the problem persists after attempting these solutions, please contact Elica customer support.

8. Specifications

Specification	Detail
Brand	Elica
Model Number	SAPPHIRE CT VETRO (DT SERIES)
Colour	Black
Material	Glass
Heating Elements	4
Product Dimensions (D x W x H)	50D x 77W x 11H Centimeters
Item Weight	8.8 Kilograms
Controls Type	Knob
Recommended Uses	Cooking
Included Components	1 Gas Stove, 1 User Manual

9. Warranty and Support

Your Elica SAPPHIRE CT VETRO (DT SERIES) gas stove comes with a comprehensive warranty to ensure peace of mind.

- **Glass Warranty:** 7 Years on the toughened glass top.
- **Comprehensive Warranty:** 2 Years comprehensive warranty from the date of purchase.

Manufacturer Contact:

For warranty claims, service requests, or technical support, please contact:

ELICA PB WHIRLPOOL KITCHEN APPLIANCES PRIVATE LIMITED
32/5 A1 Kondhwa-Pisoli Road, Pisoli, Pune 411060 Maharashtra India