



For FAQs and more information, please visit:
www.eufylife.com



Handstick Vacuum Cleaner

Owner's Manual

T2501 51005002031 V01

Gebrauchsanweisung | Manual del propietario | Manuel de l'utilisateur
Manuale d'uso | Handleiding | Руководство пользователя

English	01
Deutsch	16
Español	31
Français	46
Italiano	61
Nederlands	76
Русский	91

Table of Contents

02	Important Safety Instructions
05	Overview
07	Assembling
08	Wall Mounting
09	Recharging
11	Using
11	Maintenance
14	Specifications
15	Customer Service

Thank you for purchasing this appliance. Carefully read all instructions before using this product, and keep this manual for future reference.

Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM CLEANER

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- Recharge only with the charger (US: YLS0241A-T300080; UK: YLS0241A-U300080; AU: YLS0241A-A300080; EU: YLS0241A-E300080) specified by the manufacturer. A charger that is suitable for one type of battery pack may cause a risk of fire when used with another battery pack.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- The battery must be removed from the device before the device is disposed of.
- This appliance must be disconnected from the mains supply when removing the battery.
- The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- Fully assemble before operating.
- Intended for household use only.
- Do not use outdoors or on wet surfaces.
- Do not leave this appliance unattended when it is plugged in. Unplug it from the outlet when you are not using it and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer recommended attachments.

- For the purposes of recharging the battery, only use the detachable power supply unit provided with this device.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, or has been dropped, damaged, or submerged in water, contact our customer service for advice.
- Do not handle the plug or appliance with wet hands.
- Do not unplug the adapter by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not put any object into openings or vents. Do not use if any opening is blocked. Keep free of dust, lint, hair, and anything else that may reduce airflow.
- Keep hair, loose clothing, fingers, and other body parts away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Always turn off this appliance before connecting or disconnecting the motorized floor brush.
- To prevent unintentional starting, ensure the appliance is switched off before installing the battery pack, picking up or carrying the appliance. Do not carry the appliance with your finger on the power switch, doing so may cause accidents.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without the dust collector and/or filters in place.
- Store this appliance indoors, in a cool and dry area.
- Make sure that the outlet voltage corresponds to the voltage rating on the charger's label.
- Do not attempt to repair or disassemble this appliance. There are no user-serviceable parts inside. Repair or service must be performed by a qualified repairman and only identical replacement parts can be used. This will ensure the safety of the appliance.
- This appliance includes a rechargeable lithium-ion battery pack. Do not expose the battery pack or appliance to fire or excessive temperature (above 130°C), as it may catch fire and/or explode.
- Do not use a damaged or modified battery pack, as it may catch fire and/or explode.
- Charging, using and storage of the appliance should be within the ambient temperature range of 8-35°C.
- Follow all the charging instructions and do not charge the battery pack out of the temperature range specified in the instructions, otherwise, it may damage the battery and increase the risk of fire.
- Do not attempt to disassemble the battery pack.

SAVE THESE INSTRUCTIONS



This symbol on the device or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

Declaration of Conformity


Hereby, Anker Innovations Limited declares that the product type T2501 is in compliance with Directives 2014/35/EU & 2014/30/EU.




The full text of the EU declaration of conformity is available at the following internet address:
<https://www.eufylife.com/>

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong


Overview

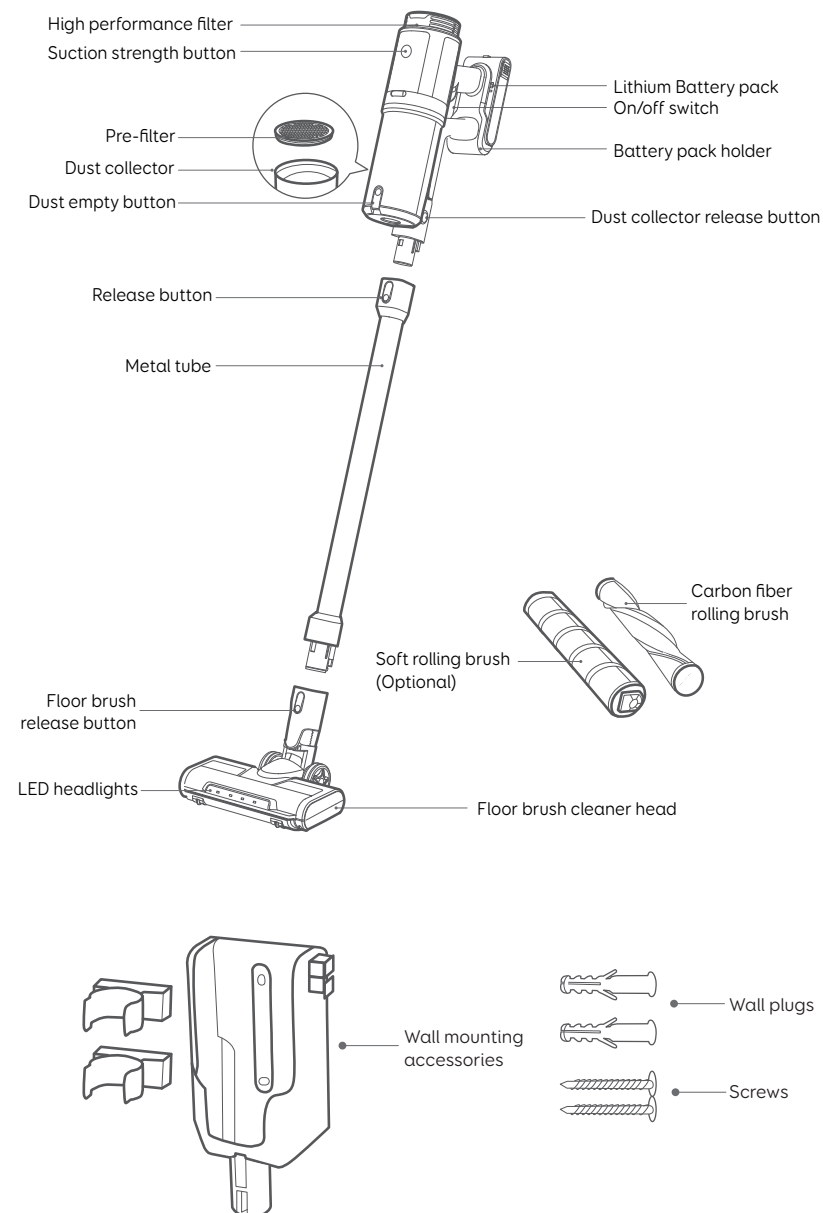

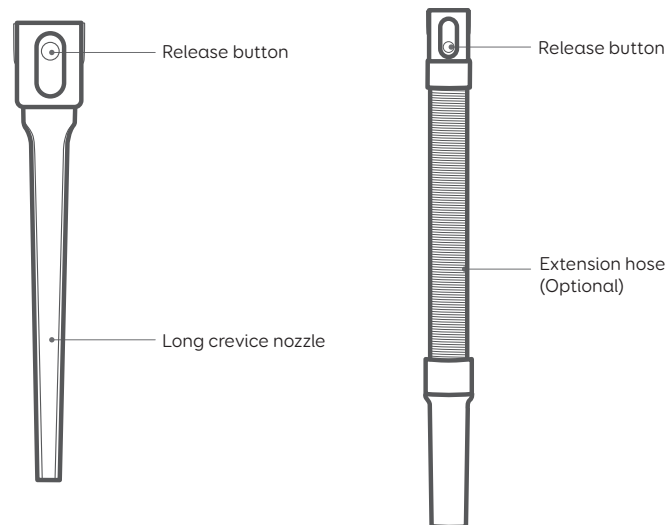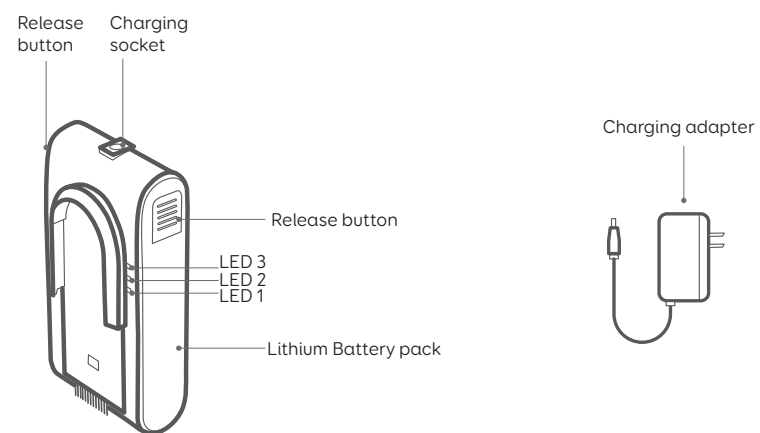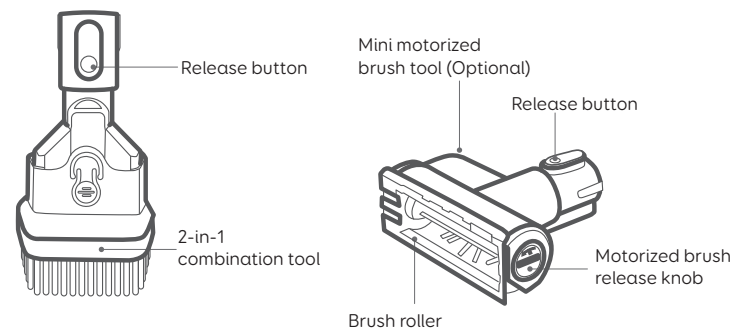






Assembling

Attach your desired cleaning accessory to the metal tube as illustrated.

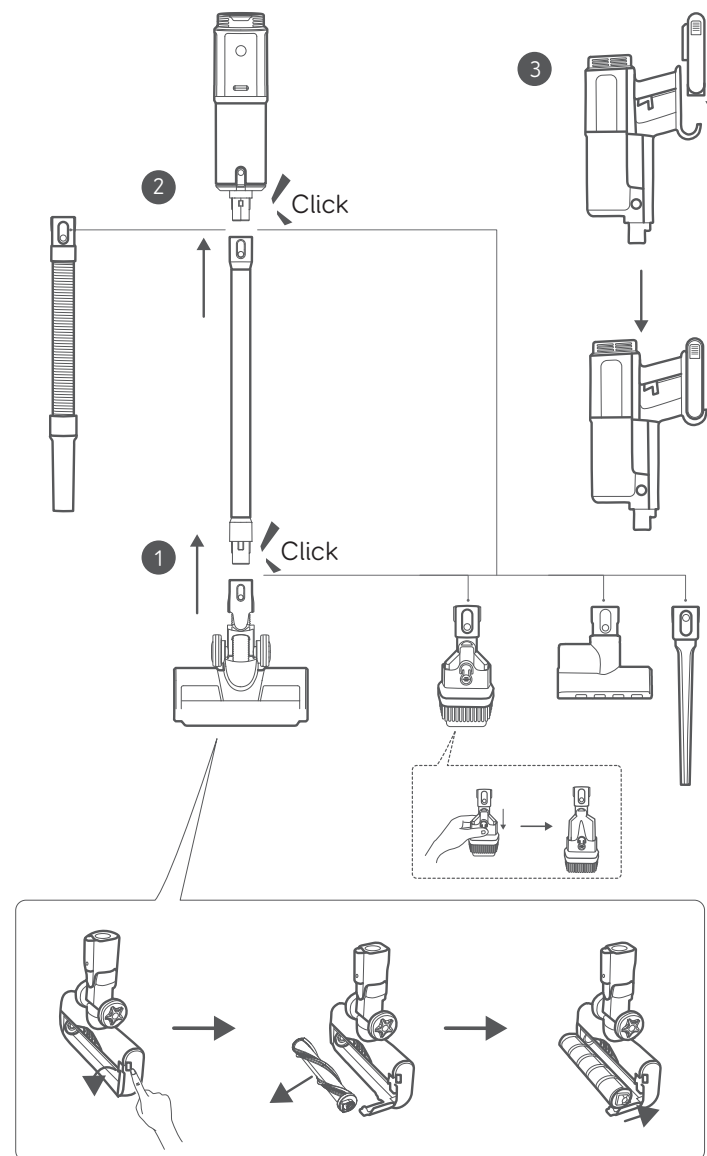

Wall Mounting


 The vacuum cleaner cannot stand on its own. Make sure it is mounted securely.

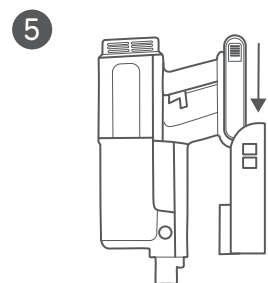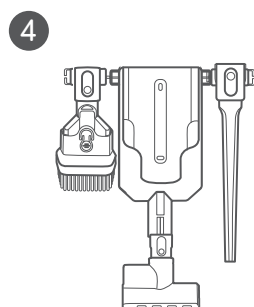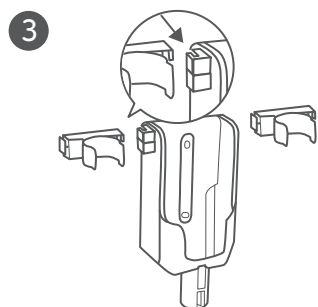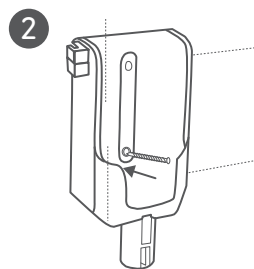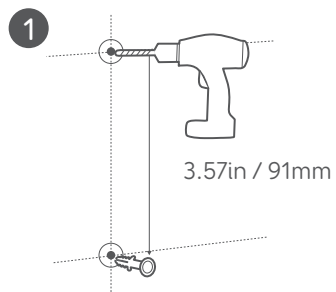

Recharging

The vacuum cleaner is powered by the built-in lithium battery. Before first use, charge the battery for more than 3.5 hours.

-  The vacuum cleaner cannot work while charging.
- The vacuum cleaner cannot be charged when the ambient temperature is above 35°C.

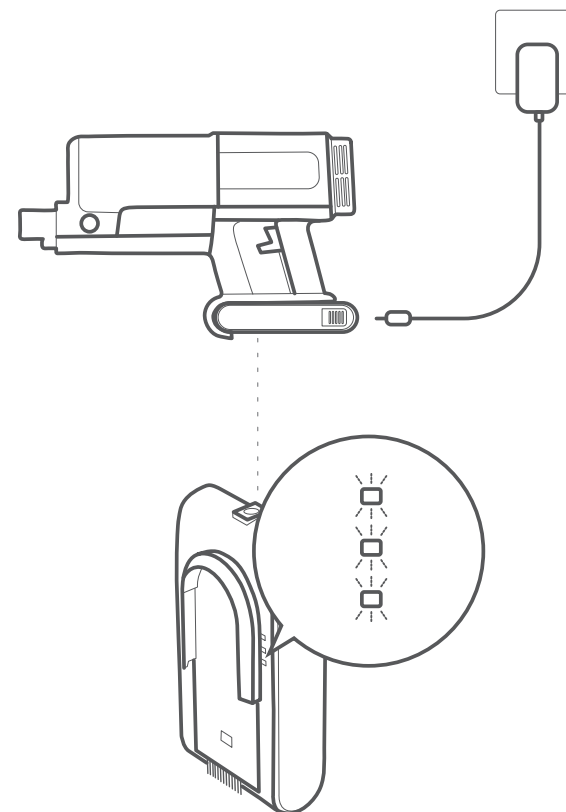

Lights during charging

	LED 1: flashing blue		LED 1: solid blue LED 2: flashing blue
	Charging, low battery		Charging, medium battery
	LED 1 & 2: solid blue LED 3: flashing blue		LED 1 & 2 & 3: solid blue, then off after 5 minutes
	Charging, nearly full		Fully charged

Lights during vacuuming


	LED 1 & 2 & 3: solid blue		LED 1: solid blue
	High battery level		Low battery level
	LED 1 & 2: solid blue		LED 1: flashing blue for 8 times, then off
	Medium battery level		Empty, needs charging

Lights when in trouble

	LED 1: slowly flashing red for 8 times, then off	Overhigh temperature
	LED 1: slowly flashing red for 12 times, then off	Battery fault
	LED 1: quickly flashing red for 8 times, then off	Motor fault

Using


-  Before use, make sure that
- the battery is fully charged.
 - the dust cup and filters are cleaned, dried, and fixed in place.

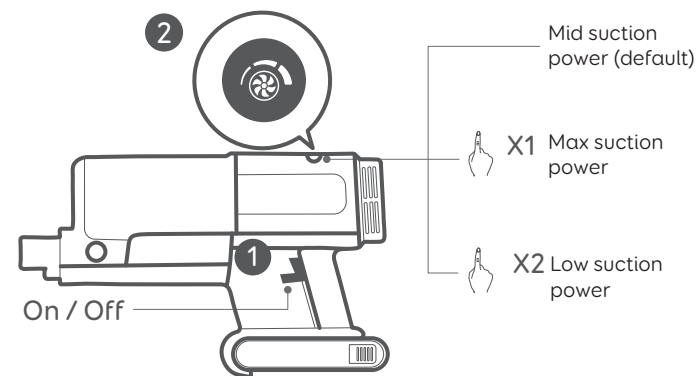


-  Do not use to clean up water.

Maintenance

Empty the Dust Collector

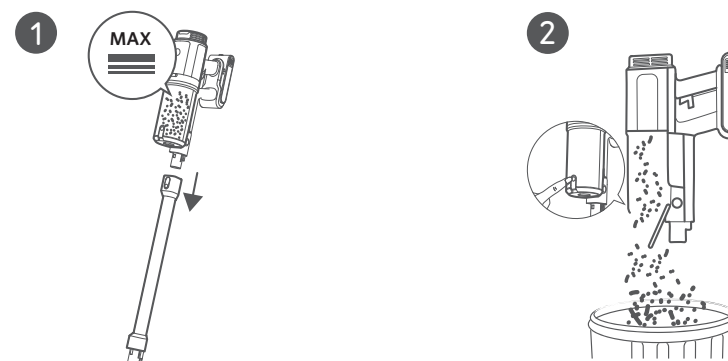


Clean the Dust Collector

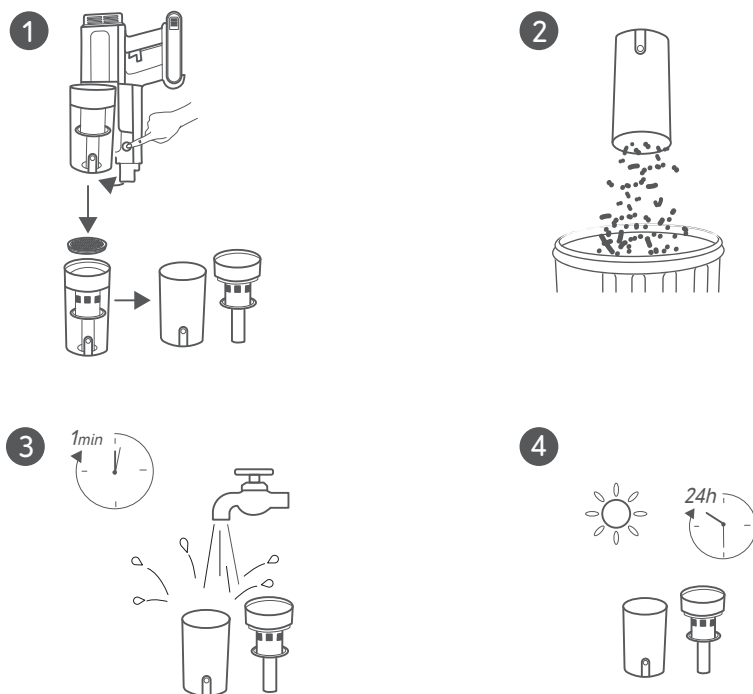


Clean the Filters

Wash the filters with cold water at least once every month. Ensure the filters are completely dry before reassembly.

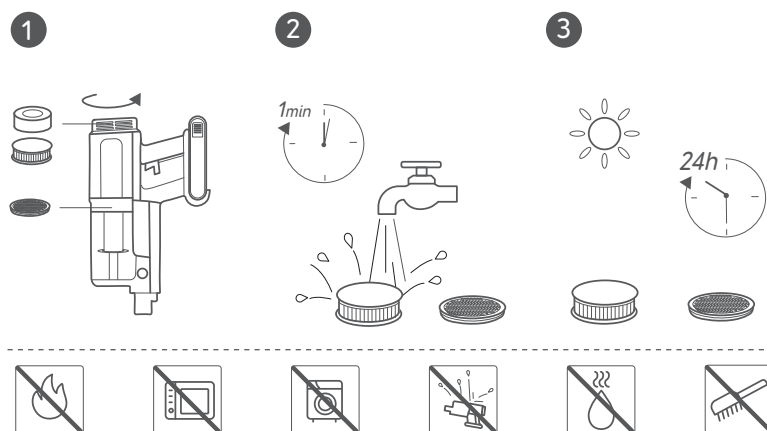


HomeVac Part	Cleaning Frequency	Replacement Frequency
Dust collector	After each use	-
Filter	Once every week (Twice a week if you have a pet)	Every 6 months or after every 50 rounds of cleaning

Clean the Rolling Brushes

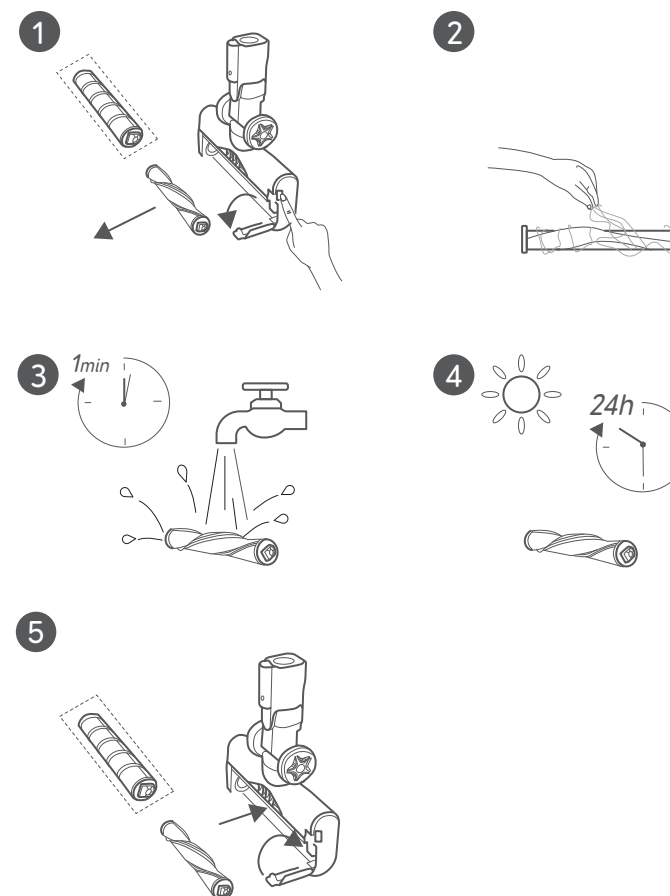

Clean the Mini Motorized Brush

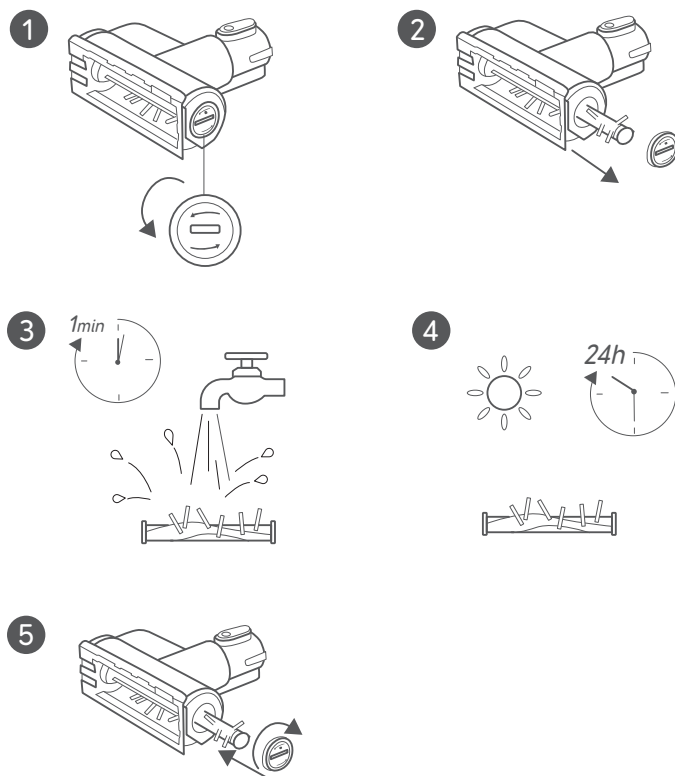

Specifications

Model	T2501
Charging Input	30V $\overline{\text{---}}$ 0.8A
Rated Power	350W
Running Time	Max. 40 minutes (one battery)
Battery Cell Capacity	2500 mAh
Battery Rating	DC25.2V Li-ion 2500mAh 63Wh
Charging Time	3.5 hours

Customer Service

For FAQs and more information, please visit www.eufylife.com.

✉ support@eufylife.com

💬 www.eufylife.com



(US) +1 (800) 988 7973 Mon-Fri 9:00am - 5:00pm (PT)

(UK) +44 (0) 1604 936200 Mon-Fri 6:00 - 11:00 (GMT)

(DE) +49 (0) 69 9579 7960 Mo-Fr 6:00 - 11:00

(中国) +86 400 0550 036 周一至周五 9:00 - 17:30

(日本) +81 03 4455 7823 月-金 9:00 - 17:00



@EufyOfficial



@EufyOfficial



@EufyOfficial



@EufyOfficial

Inhaltsverzeichnis

17	Wichtige Sicherheitsinformationen
20	Übersicht
22	Zusammenbau
23	Wandhalterung
24	Aufladevorgang
26	Verwendung
26	Wartung
29	Technische Daten
30	Kundenservice

Vielen Dank, dass Sie dieses Produkt gekauft haben. Lesen Sie alle Anweisungen aufmerksam durch, bevor Sie dieses Produkt verwenden, und bewahren Sie sie gut auf.

Wichtige Sicherheitsinformationen

ALLE ANWEISUNGEN VOR DEM GEBRAUCH DES STAUBSAUGERS LESEN

WARNUNG - ZUR VERRINGERUNG DES RISIKOS VON BRÄNDEN, STROMSCHLÄGEN ODER VERLETZUNGEN:

- Laden Sie das Gerät nur mit den Ladegeräten (US: YLS0241A-T300080; UK: YLS0241A-U300080; AU: YLS0241A-A300080; EU: YLS0241A-E300080) auf, wie vom Hersteller angegeben werden. Ein Ladegerät, das für eine Batterienart geeignet ist, kann bei der Verwendung mit einer anderen Batterie zu einem Brand führen.
- Dieses Gerät kann von Kindern ab 8 Jahren sowie von Personen mit physischen, sensorischen, psychischen oder geistigen Beeinträchtigungen verwendet werden, sofern sie angemessene Überwachung oder Einweisung in die sichere Verwendung des Geräts erhalten und die damit einhergehenden Risiken richtig einordnen können. Kinder dürfen nicht mit dem Gerät spielen. Das Gerät darf von Kindern nur unter Aufsicht gereinigt und gepflegt werden.
- Der Akku muss aus dem Gerät entfernt werden, bevor das Gerät entsorgt wird.
- Dieses Gerät muss beim Entfernen des Akkus vom Netzstrom getrennt sein.
- Der gebrauchte Akku muss in einem versiegelten Plastikbeutel aufbewahrt und gemäß den örtlichen Umweltvorschriften entsorgt werden.
- Vor Inbetriebnahme komplett zusammenbauen.
- Nur für den Haushaltsgebrauch bestimmt.
- Nicht im Freien oder auf nassen Oberflächen verwenden.
- Lassen Sie dieses Gerät nach dem Einstecken nicht unbeaufsichtigt. Stecken Sie es aus, wenn Sie es nicht verwenden oder warten.

- Darf nicht als Spielzeug verwendet werden. Beim Gebrauch durch Kinder oder in der Nähe von Kindern ist besondere Aufmerksamkeit erforderlich.
- Nur wie in diesem Handbuch beschrieben verwenden. Nur vom Hersteller empfohlenes Zubehör verwenden.
- Zum Aufladen des Akkus nur das abnehmbare Netzteil verwenden, das im Lieferumfang des Geräts enthalten ist.
- Gerät mit beschädigtem Kabel oder Stecker nicht verwenden. Wenn das Gerät nicht ordnungsgemäß funktioniert oder heruntergefallen ist, beschädigt ist oder in Wasser getaucht wurde, bitte Unterstützung bei unserem Kundenservice anfordern.
- Stecker oder Gerät nicht mit nassen Händen anfassen.
- Das Netzteil nicht am Kabel aus der Steckdose ziehen, sondern am Stecker anfassen.
- Das Kabel nicht um scharfe Kanten oder Ecken herumführen. Mit dem Gerät nicht über das Kabel fahren. Das Kabel von erwärmten Oberflächen fernhalten.
- Keine Gegenstände in Öffnungen oder Lüftungsöffnungen stecken. Nicht verwenden, wenn Öffnungen blockiert sind. Vor Staub, Fusseln, Haaren und allem anderen, was den Luftstrom beeinträchtigen kann, schützen.
- Haare, locker getragene Kleidung, Finger und andere Körperteile von Öffnungen und beweglichen Teilen fernhalten.
- Alle Bedienelemente vor dem Ausstecken ausschalten.
- Bei der Reinigung von Treppen besonders vorsichtig sein.
- Dieses Gerät immer ausschalten, bevor die motorisierte Bodenbürste angebracht oder entfernt wird.
- Zum Schutz gegen unbeabsichtigtes Einschalten sicherstellen, dass das Gerät ausgeschaltet ist, bevor der Akku eingesetzt bzw. das Gerät hochgehoben oder getragen wird. Das Gerät nicht mit einem Finger am Netzschalter tragen, da dies zu Unfällen führen könnte.
- Das Gerät nicht verwenden, um brennbare oder entzündliche Flüssigkeiten wie Benzin aufzusaugen, und nicht in Bereichen einsetzen, in denen solche Flüssigkeiten vorhanden sein können.
- Mit dem Gerät keine brennbaren oder qualmenden Gegenstände wie Zigaretten, Streichhölzer oder warme Asche aufsaugen.
- Mit dem Gerät keine harten oder scharfen Gegenstände wie Glas, Nägel, Schrauben, Münzen usw. aufsaugen.
- Nicht ohne Staubbehälter und/oder Filter verwenden.
- Lagern Sie dieses Gerät in Innenräumen, in einem kühlen und trockenen Bereich.
- Stellen Sie sicher, dass die Ausgangsspannung der Kennzeichnung des Ladegeräts entspricht.
- Versuchen Sie nicht, dieses Gerät zu reparieren oder auseinanderzunehmen. Keine Teile im Inneren des Geräts können durch den Benutzer gewartet werden. Reparatur- oder Wartungsarbeiten sind von einem qualifizierten Mechaniker durchzuführen und es sind ausschließlich identische Ersatzteile zu verwenden. Dadurch wird die Sicherheit des Geräts gewährleistet.

- Dieses Gerät enthält einen aufladbaren Lithium-Ionen-Akku. Den Akku oder das Gerät keinem Feuer bzw. keinen zu hohen Temperaturen (mehr als 130°C) aussetzen, da sich diese entzünden und/oder explodieren können.
- Keinen beschädigten oder modifizierten Akku verwenden, da sich dieser entzünden und/oder explodieren kann.
- Das Laden, die Verwendung und die Lagerung des Geräts muss in einer Umgebungstemperatur von 8 bis 35°C erfolgen.
- Alle Anweisungen zum Laden befolgen und den Akku nur innerhalb des in den Anweisungen angegebenen Temperaturbereichs aufladen. Andernfalls kann der Akku beschädigt werden und es besteht erhöhte Brandgefahr.
- Den Akku nicht zerlegen.

DIESE ANWEISUNGEN AUFBEWAHREN



Dieses Symbol auf dem Gerät oder der Verpackung hat die folgende Bedeutung:

Entsorgen Sie elektrische Geräte nicht im Haushaltsabfall; geben Sie sie bei separaten Sammelstellen ab. Wenden Sie sich an die örtliche Kommunalverwaltung, um Informationen über die verfügbaren Sammelstellen einzuholen. Wenn Elektrogeräte in Mülldeponien entsorgt werden, können Gefahrstoffe in das Grundwasser und somit in die Nahrungskette gelangen und Ihre Gesundheit und Ihr Wohlbefinden beeinträchtigen. Wenn Sie neue Elektrogeräte kaufen, sind die Einzelhändler gesetzlich verpflichtet, Ihre Altgeräte kostenlos zur Entsorgung anzunehmen.

Konformitätserklärung



Anker Innovations Limited erklärt hiermit, dass das Produkt des Typs T2501 den Richtlinien 2014/35/EU und 2014/30/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist online unter der folgenden Adresse verfügbar:
<https://www.eufylife.com/>

Anker Innovations Limited


Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hongkong

Übersicht

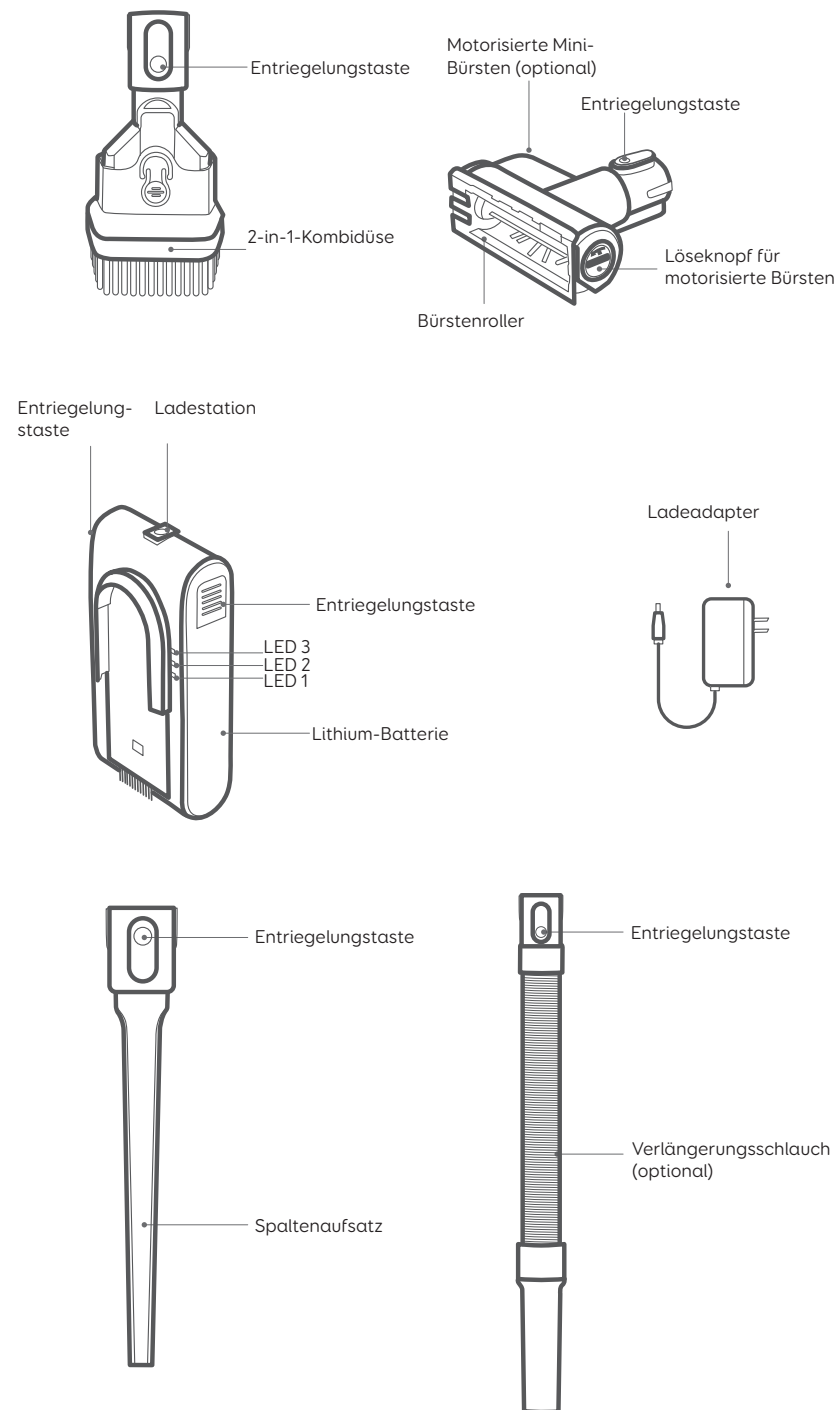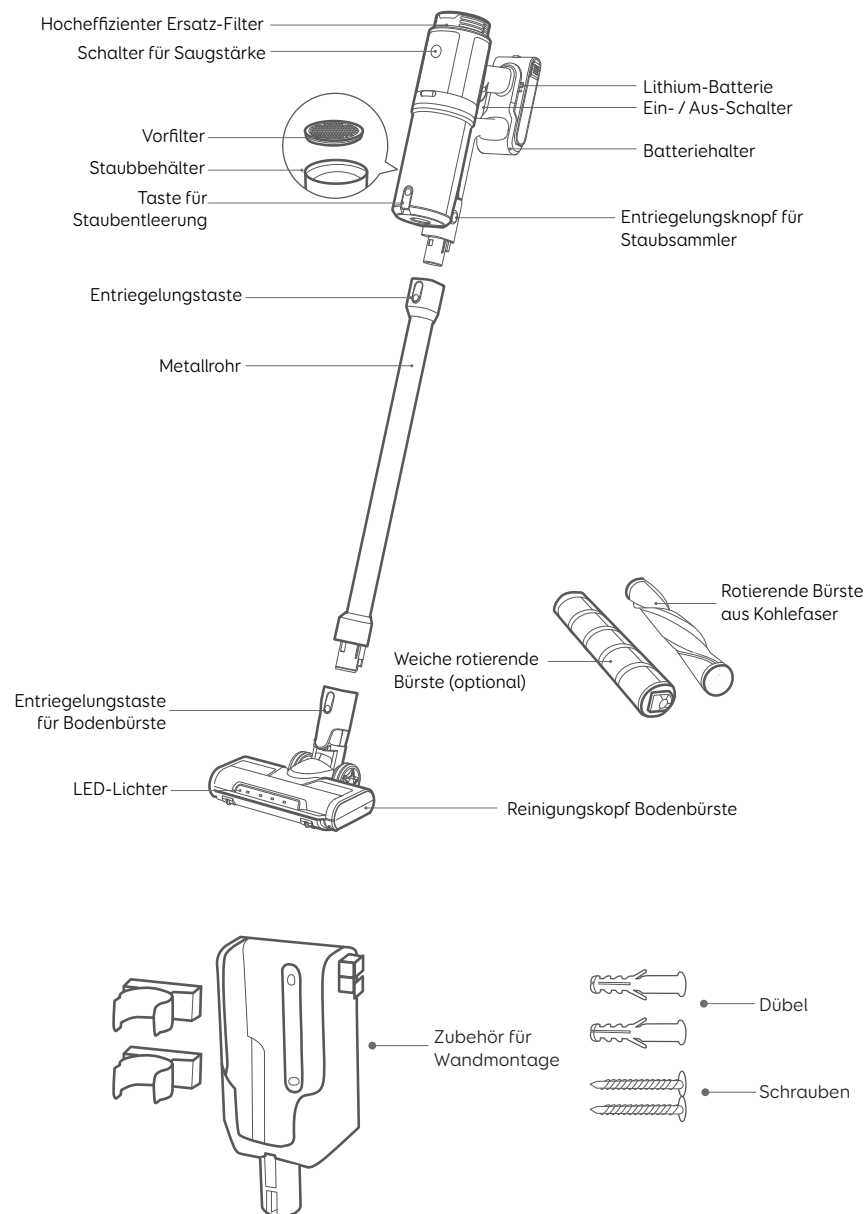


Zusammenbau

 Bringen Sie Ihr gewünschtes Reinigungszubehör wie gezeigt am Metallrohr an.

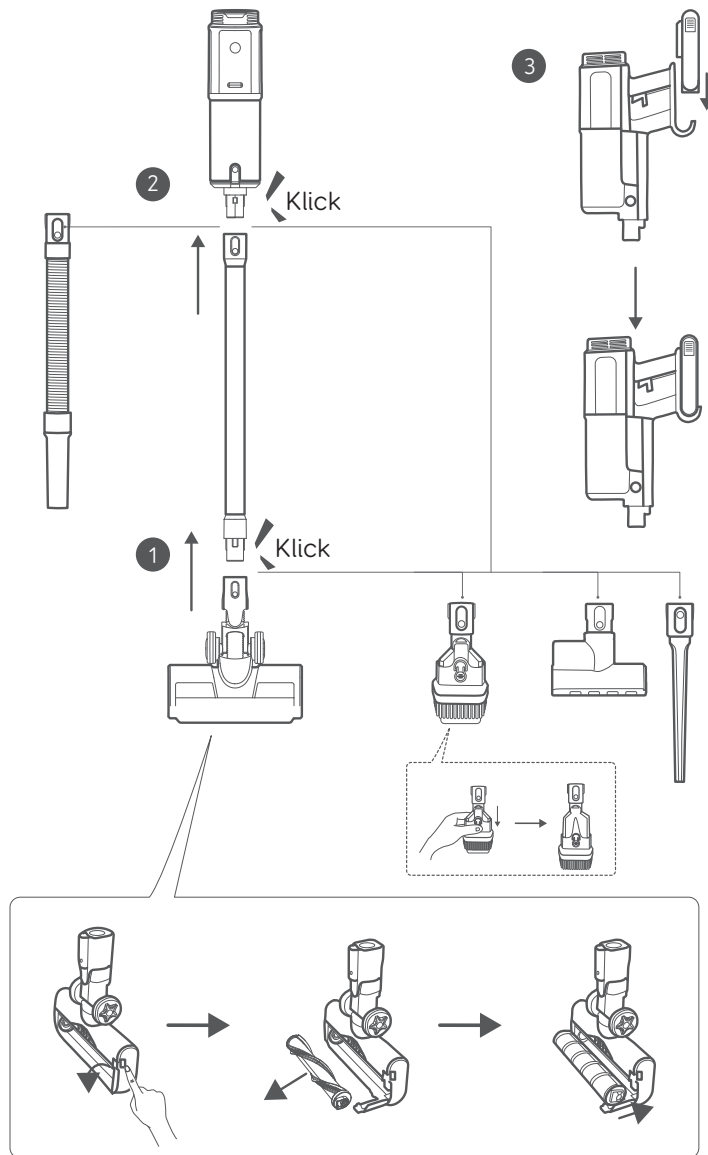

Wandhalterung

 Der Staubsauger kann nicht eigenständig stehen. Vergewissern Sie sich, dass er sicher angebracht ist.

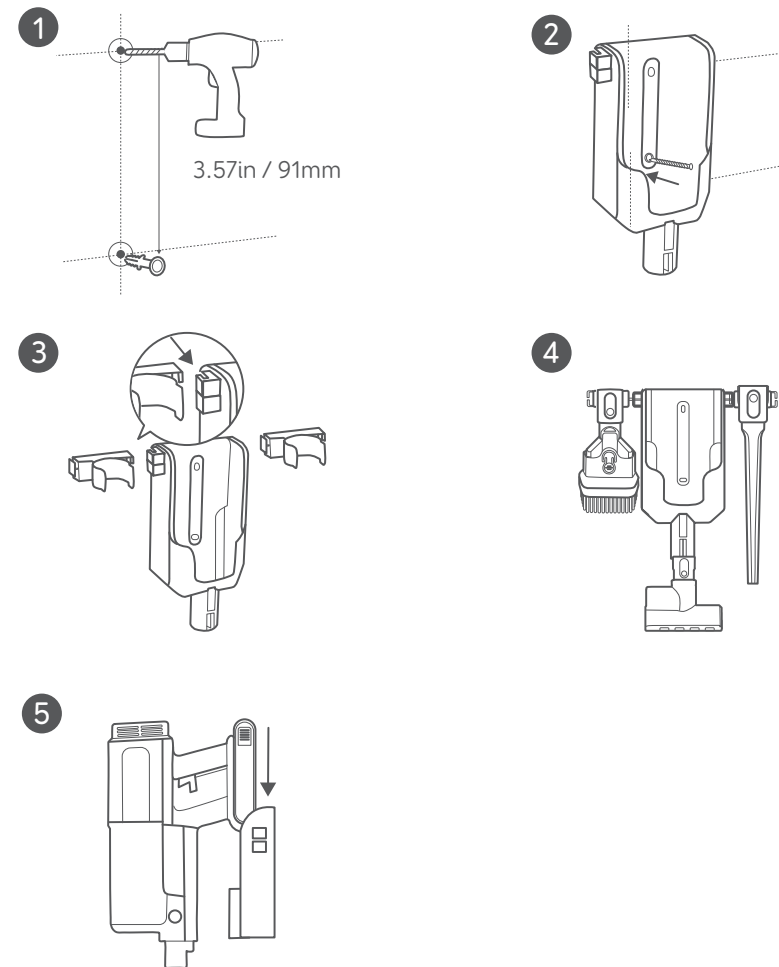


Aufladevorgang

Der Staubsauger wird von einem eingebauten Lithium-Akku angetrieben. Vor dem ersten Gebrauch muss der Akku mehr als 3,5 Stunden lang aufgeladen werden.



- Der Staubsauger kann während des Ladevorgangs nicht verwendet werden.
- Der Staubsauger kann bei einer Umgebungstemperatur v^on mehr als 35°C nicht aufgeladen werden.

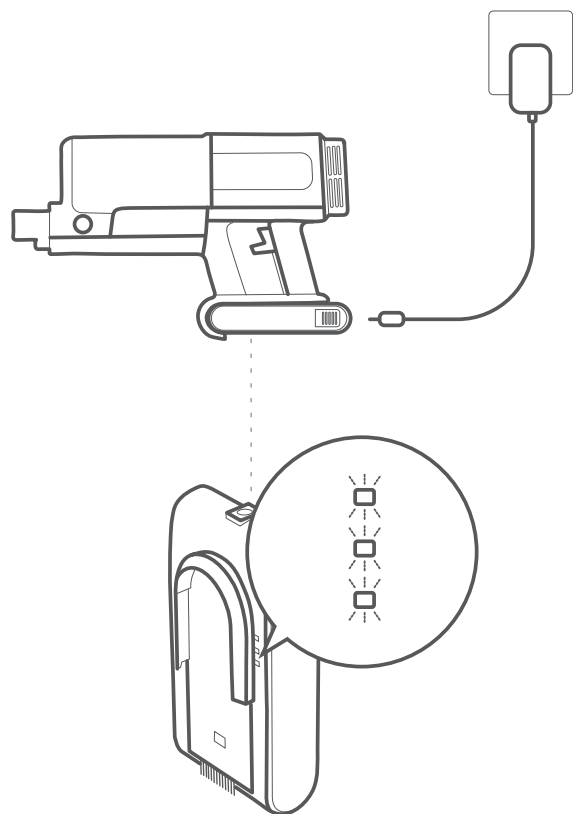

Lichtanzeige während des Ladevorgangs

	LED 1: Blinkt blau Ladevorgang läuft, niedriger Akkustand		LED 1: Durchgehend blau LED 2: Blinkt blau Ladevorgang läuft, mittlerer Akkustand
	LED 1 & 2: Durchgehend blau LED 3: Blinkt blau Ladevorgang läuft, fast vollständig aufgeladen		LED 1 & 2 & 3: Durchgehend blau, nach 5 Minuten aus Vollständig aufgeladen

Lichtanzeige während des Saugvorgangs

	LED 1 & 2 & 3: Durchgehend blau Hoher Akkustand		LED 1: Durchgehend blau Niedriger Akkustand
	LED 1 & 2: Durchgehend blau Mittlerer Akkustand		LED 1: Blinkt 8 Mal blau, dann aus Leer, muss aufgeladen werden

Lichtanzeige bei Fehlfunktion

	LED 1: 8 Mal langsames rotes Blinken, dann aus	Überhitzung
	LED 1: 12 Mal langsames rotes Blinken, dann aus	Batteriefehler
	LED 1: 8 Mal schnelles rotes Blinken, dann aus	Motorfehler