Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Russell Hobbs RHCV1611 Bagless Cylinder Vacuum Cleaner User Manual


Contents Show




Russell Hobbs


STEAM & CLEAN
Operating Manual
RHSM1001-G

ASSEMBLY

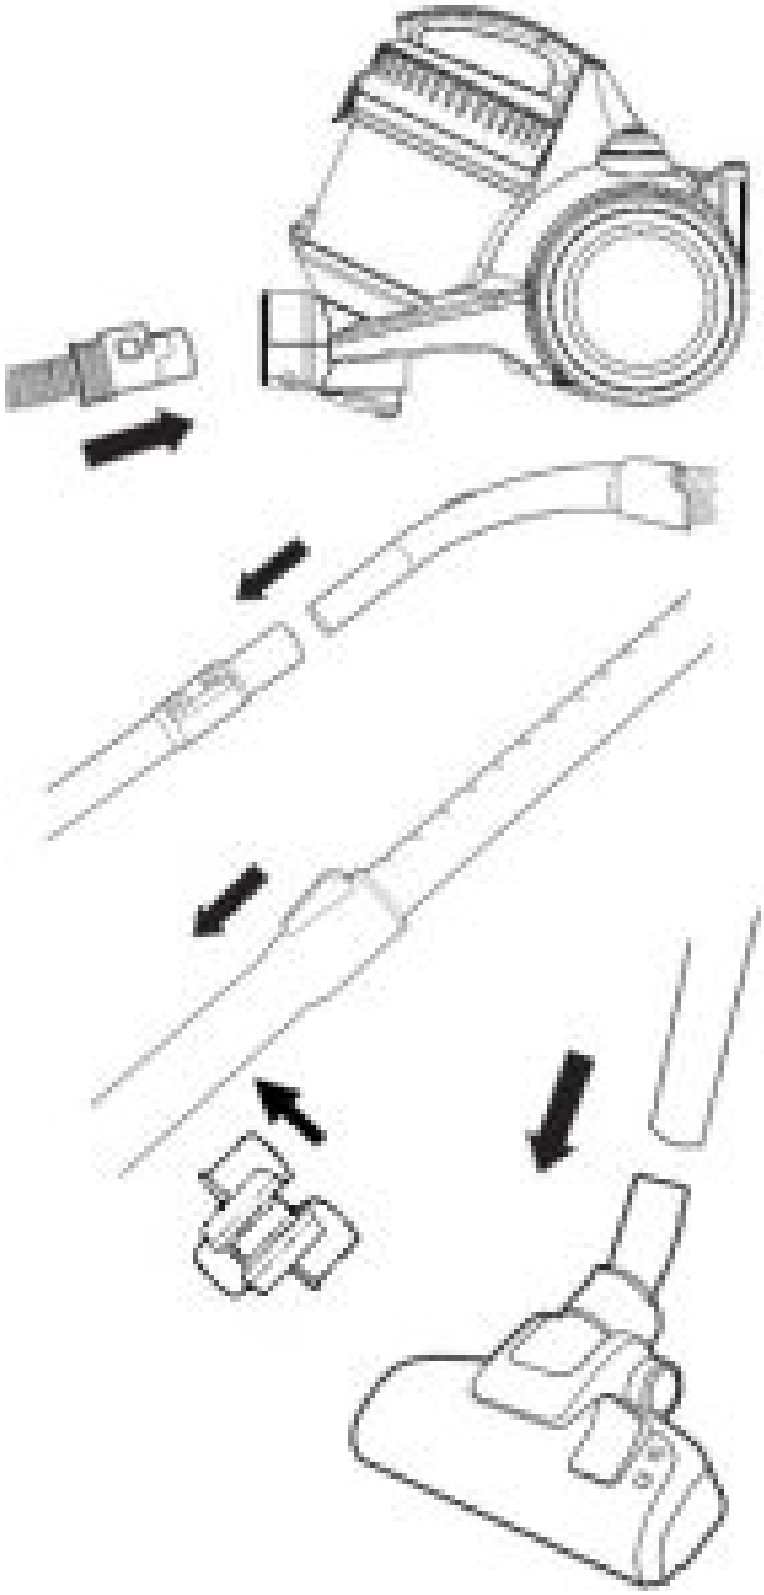


POWERING ON

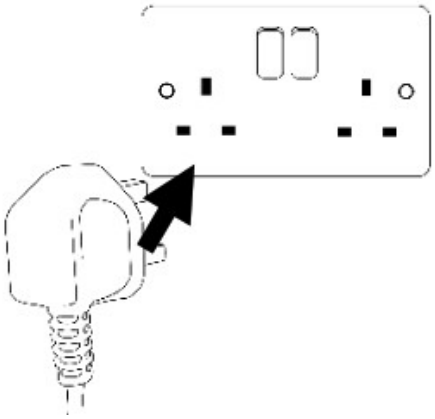


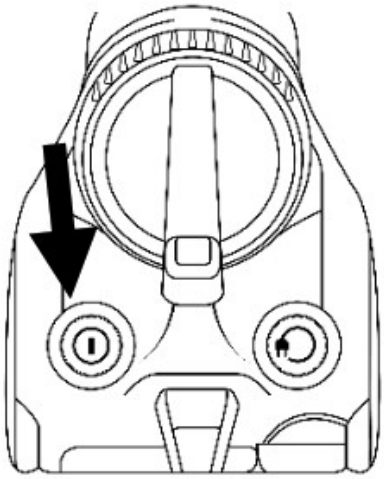

SUITABLE FOR USE

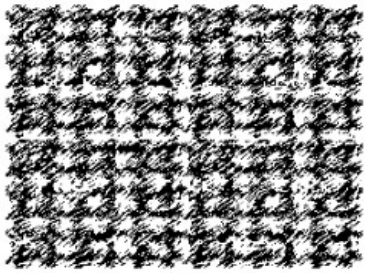

Carpet

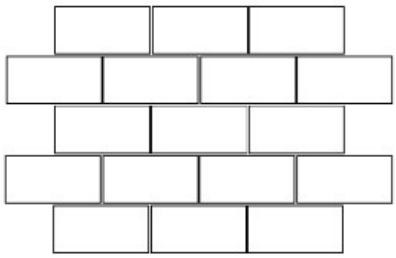

Hard Floors

WASH FILTERS
Wash the filters with cold water at least once a month
1 MONTH
REGISTER YOUR FREE ADDITIONAL 1 YEAR GUARANTEE TODAY

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.
Feel free to contact our Product Care Team, on 0345 209 7461 who will be more than happy to assist you.
This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.
Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use that are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

RUSSELL HOBBS CONTACT DETAILS
Website: https://mda.russellhobbs.com
Telephone: 0345 209 7461
Address: Product Care Customer Service, Green Bank Business Park, Hindley Green, Wigan, WN2 4AY

Note your serial number below for future reference.



Image for illustration purposes only


REGISTER ONLINE
Visit our website to register your full parts and labor guarantees online.
https://mda.russellhobbs.com

REGISTER BY PHONE
Call our friendly Product Care team.
0345 209 7461


IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover that gives protection against exposure to electrical parts.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not use with damaged cord or plug. Do not run the vacuum cleaner over any cables, or its own power cable. As this will result in damaging the cable.
- This product is intended for household use only. Do not use outdoors.


- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not direct at people, animals, electrical outlets, or equipment containing electrical components.
- Do not use this appliance to pick up water or any other liquids, combustible substances or hot/burning objects.
- Unplug from outlet when not in use, and before putting on and taking off parts, and before cleaning. Do not leave unattended whilst plugged in.
- Do not use an appliance if it has been dropped, damaged, left outdoors or dropped into water. Do not operate this appliance for anything other than its intended use.
- Keep the appliance and adapter away from water; do not allow it to get wet.
- If the unit is wet, do not plug the unit into a wall socket or turn the unit on. Do not immerse in water or other liquids for cleaning. Do not handle the appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- The use of accessory attachments not recommended by the manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.
- Only use the appliance when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the cleaner if improperly used.
- Caution: Exhaust air discharged from the sides of the appliance may extinguish a gas fire, pilot light, or disturb ashes in an open fire. Always avoid directing the appliance toward naked flames. Before use, ensure that all of the air vents are clear and there is no restriction of airflow.

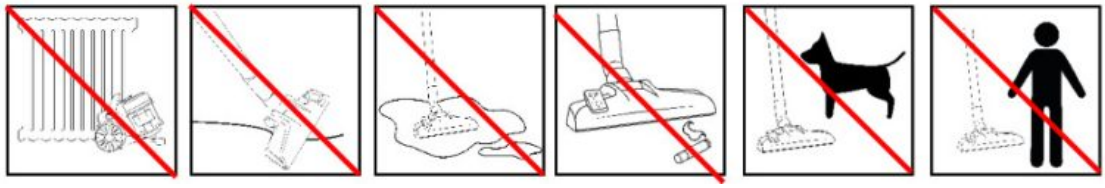


OPERATION

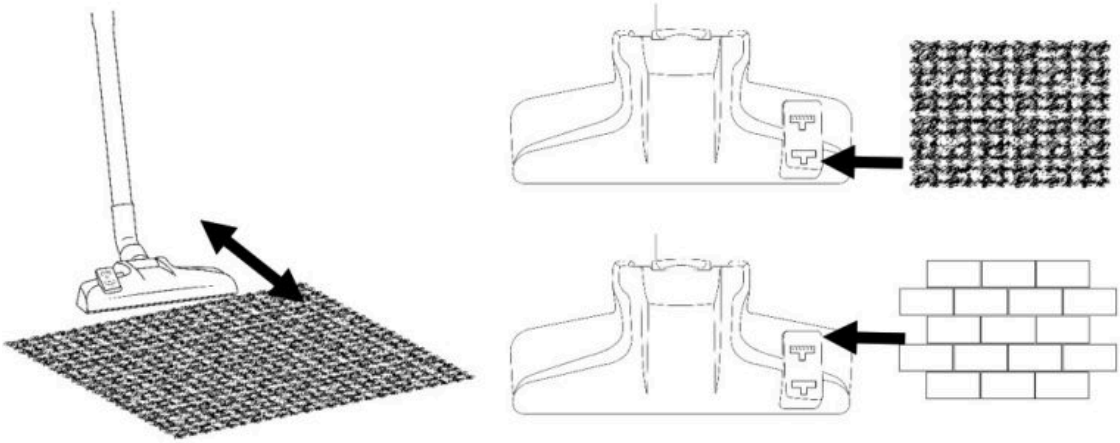


CARRYING THE APPLIANCE

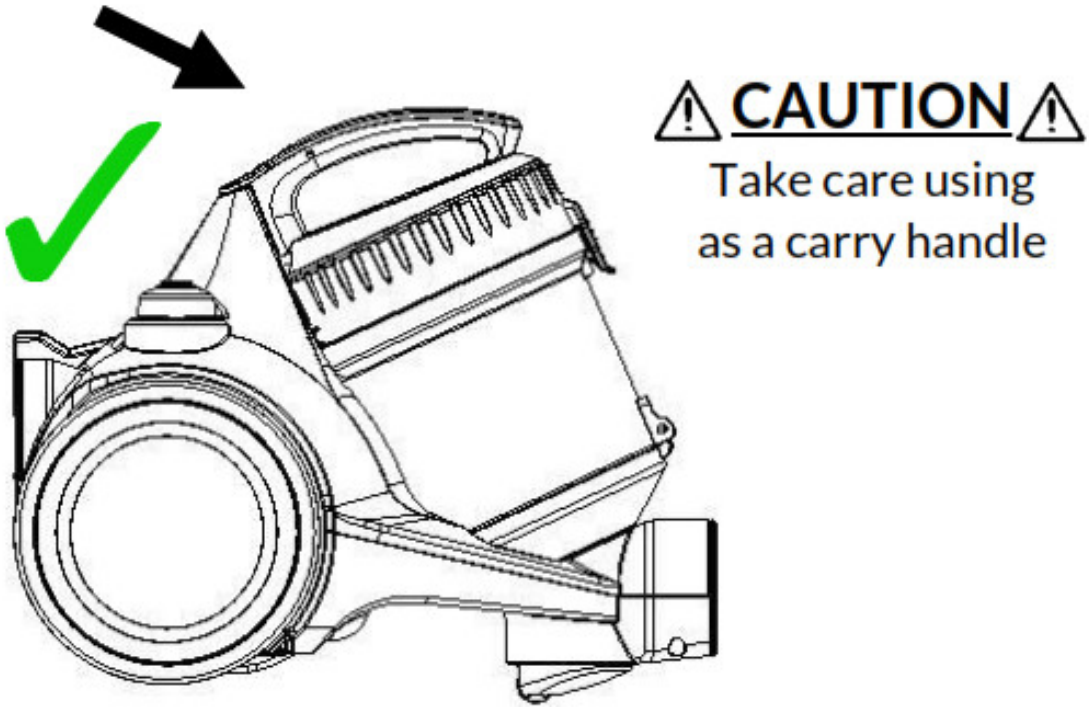


TOOL ATTACHMENTS

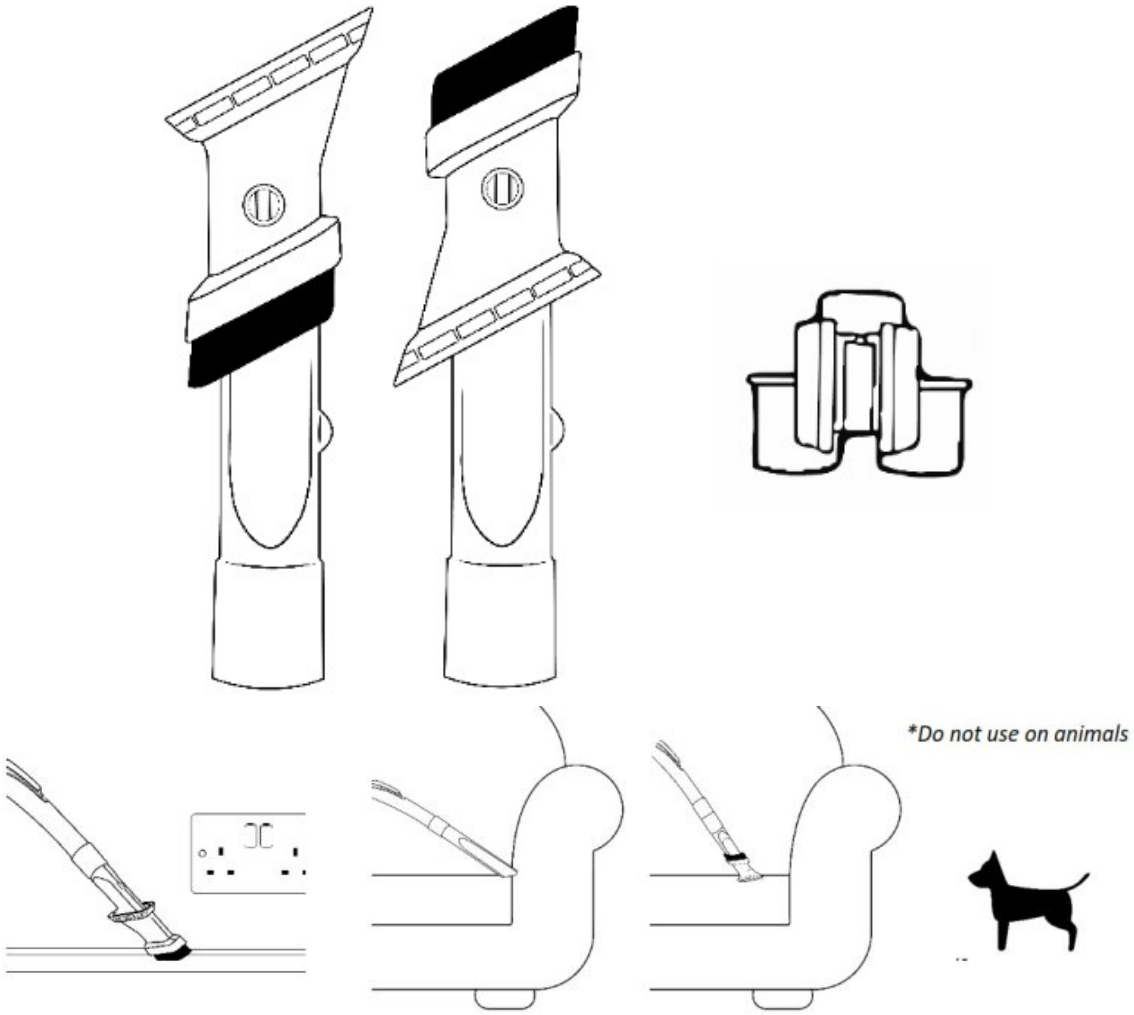


EMPTYING THE BIN

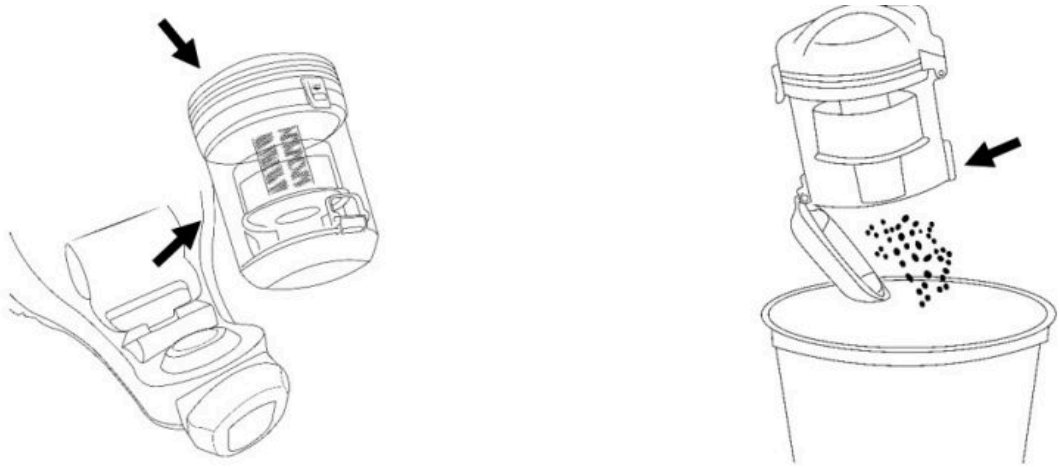


CARPETS OR HARD FLOORS

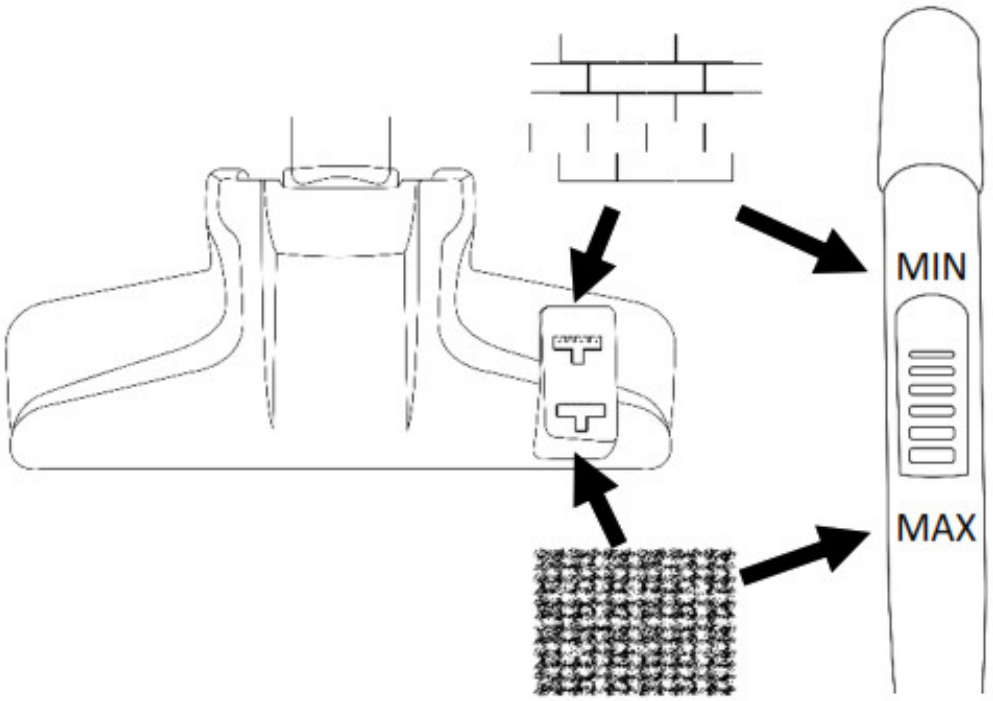


CORD REWIND

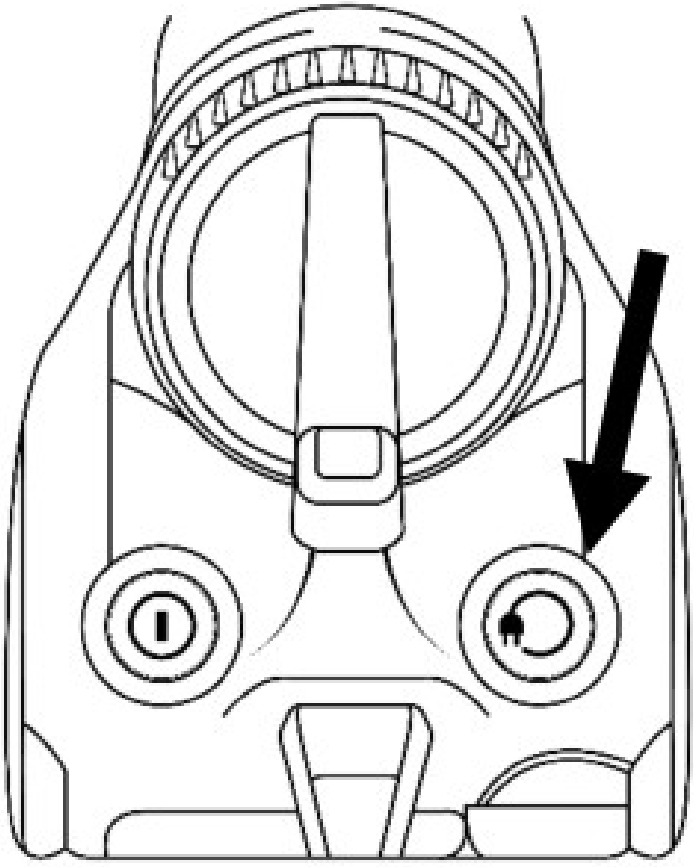



CHECKING FOR BLOCKAGES

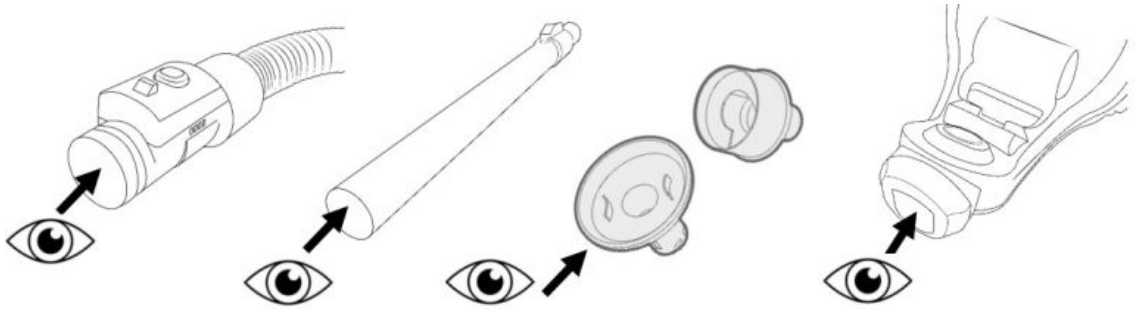


IMPORTANT! WASH THE FILTERS

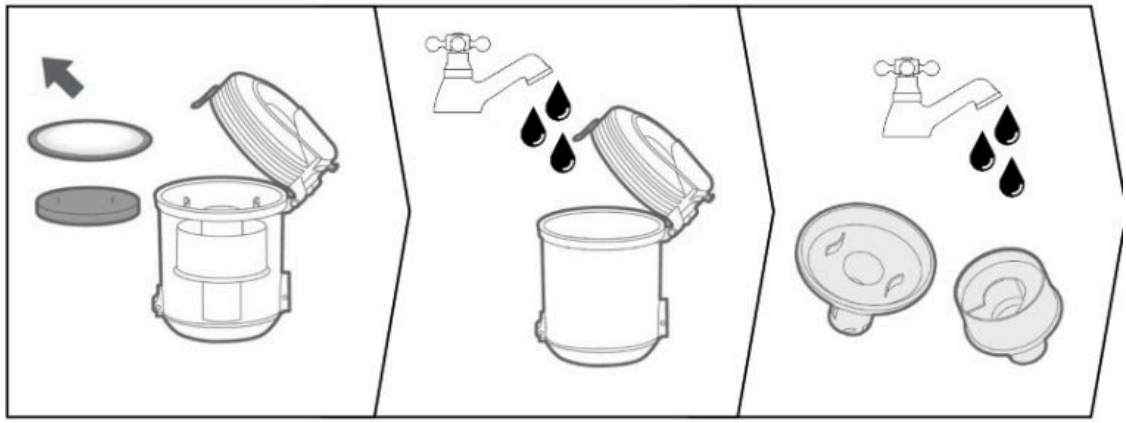

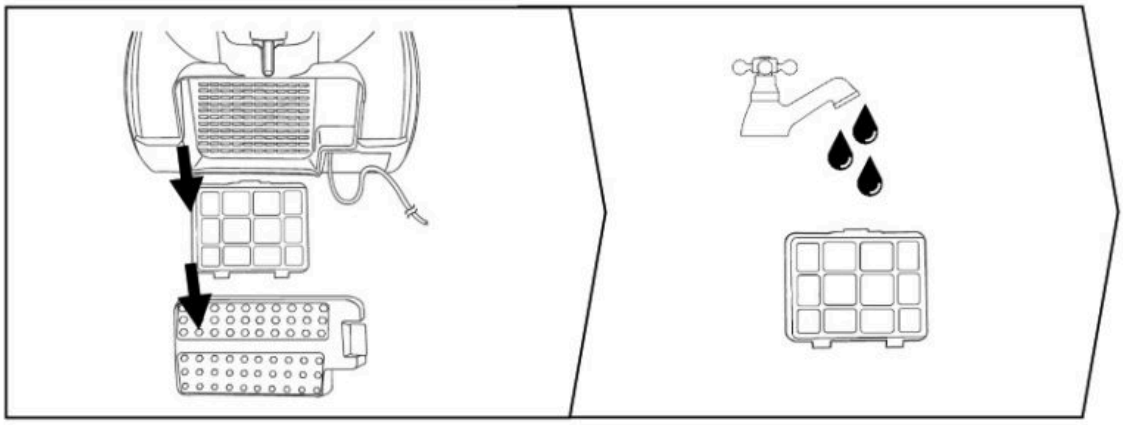

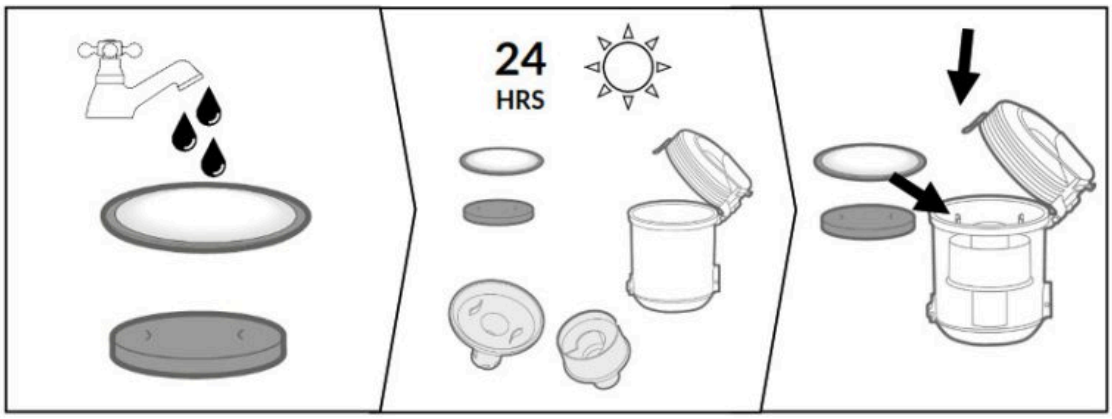

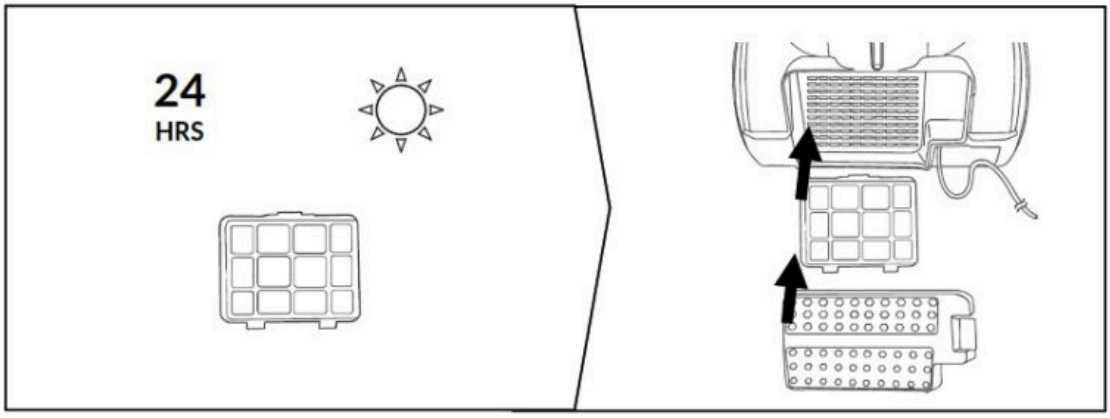

REGISTER YOUR FREE 1 YEAR GUARANTEE TODAY
IMPORTANT! WASH THE PADS
WASH FILTERS
Wash the filters with cold water at least once a month
1 MONTH

PROBLEM-SOLVING

The vacuum cleaner doesn't switch on	• Check the vacuum is plugged in • Check the socket is switched on • Check another appliance in the socket • Check for any obvious signs of damage to cord or plug • If recently used, allow to cool for 1 hour then try again
The suction is decreasing and dirt is not adequately being picked up	• Check if the dust canister is full; if so, empty it • Clean the filters following the instructions in this manual • Check there are no blockages in the hose, and clear any obstructions
The vacuum cleaner is overheating	• Check the filters are clean
Dust is coming out of the vacuum	• The dust canister has not been fitted correctly. Refit the canister following the instructions in this manual.
The air exhausted from the vacuum smells	• Clean the filters, hose, and dust container following the instructions in this manual
The vacuum cleaner has cut out	• Allow the vacuum to cool for 1 hour. Clean all filters and dust containers before trying to use again.

If you are still experiencing difficulties with the appliance please contact us BEFORE returning the appliance to the retailer it was purchased from:
Website: **https://mda.russellhobbs.com**
Telephone: 0345 209 7461
Address: Product Care Customer Service, Green Bank Business Park, Hindley Green, Wigan, WN2 4AY

IMPORTANT!
WASH FILTERS
Wash the filters with cold water at least once a month
The filters may require more frequent washing if vacuuming fine dust
1 MONTH
This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.
By registering your product with us you will get an additional year guarantee free of charge. Further cover can be purchased through the website.

REGISTER ONLINE
Visit our website to register your full parts and labor guarantee online
https://mda.russellhobbs.com

REGISTER BY PHONE
Call our friendly Product Care team. 0345 209 7461

NOTES

Russell Hobbs is a registered trademark used under license from Spectrum Brands (UK) Ltd. Made under license by G2S Limited, Wigan, WN2 4AY/G2S (NI) Ltd, Belfast, BT5 5AD Russell Hobbs Support: call 0345 209 7461 or visit
https://mda.russellhobbs.com

The 'wheelie bin' symbol is known as the 'Crossed-out wheelie bin Symbol'. When this symbol is marked on a product/battery, it means that the product/batteries should not be disposed of with your general

household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit **www.recycle-more.co.uk** or ask in-store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit **www.sedex.org.uk** for further information.

We reserve the right, due to possible changes to the design, to alter the instruction manual without prior notice.

Documents / Resources



RHCV1611 Bagless Cylinder Vacuum Cleaner

User Manual · RHCV1611, Bagless Cylinder Vacuum Cleaner, RHCV1611 Bagless Cylinder Vacuum Cleaner, Cylinder Vacuum Cleaner, Vacuum Cleaner

References

User Manual

manual.tools

Published: November 24, 2021
Updated: November 25, 2021

Related Topics

Vacuum Cleaner | Cylinder Vacuum Cleaner | Bagless Cylinder Vacuum Cleaner