ZEBRONICS
ALWAYS AHEAD

5.1 Speaker
ZEB BT8490RUCF

User Manual

Thank you for purchasing the **ZEB-BT8490RUCF** 5.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:
• Avoid the usage of this speaker at the high temperature and high humidity environment.
• Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features
Wireless BT/USB/SD/FM/AUX/AC-3
LED Display
13.33 cm subwoofer
Remote control
Wall Mountable

Specifications
Output power (RMS)
Subwoofer	: 30W
Satellite	: 10W x 5
Total	: 80W

Driver size
Subwoofer	: 13.33 cm x 1
Satellite	: 7.62 cm x 5

Impedance
Subwoofer	: 8Ω
Satellite	: 4Ω
Frequency response	: 35Hz-20kHz
S/N Ratio	: ≥ 68dB

Separation	: ≥ 45dB
File format support (USB/SD)	: MP3
Line input	: 2ch RCA, AC-3
Max. supported memory size	: 32GB (USB/SD)
FM frequency range	: 87.5MHz-108MHz
BT name	: ZEB-BT8490RUCF
BT version	: 4.2 + EDR
Product dimension (W x D x H)	
Subwoofer	: 170 x 323 x 300 mm
Satellite	: 105 x 94 x 170 mm
Net. weight	
Subwoofer	: 4.77 kg
Satellite	: 498g x 5
Total	: 7.26 kg

Package Content

|	
Subwoofer	: 1 U
Satellite	: 5 U
Remote	: 1 U
QR Code Guide	: 1 U
Input cable (RCA - RCA)	: 2 U
Input cable (RCA - 3.5 mm)	: 1 U

Control Panel Description
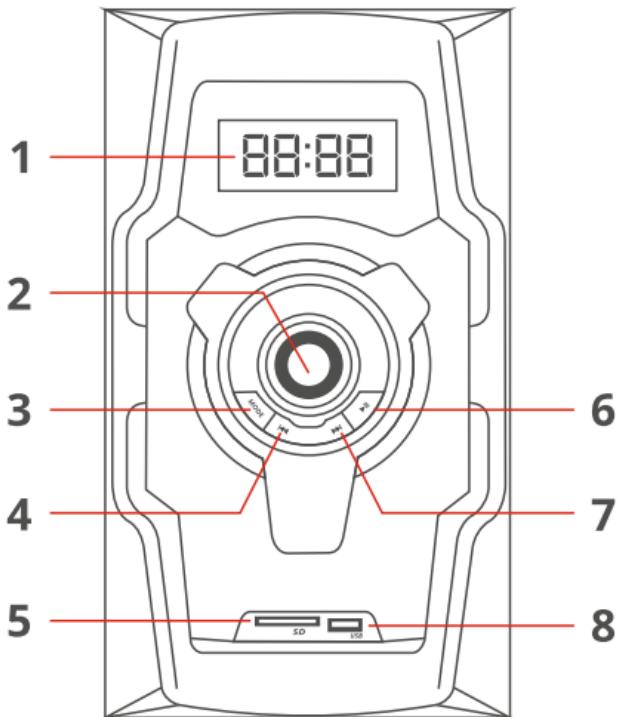
1. LED display
2. Volume/Mode adjustment
3. MODE
4. Previous track/FM Channel-
5. SD/MMC Port
6. Play/Pause
7. Next track/FM Channel+
8. USB input

Back Panel Description

5.1Input from external
audio source

AUX Input for TV/Mobile/MP3
Players or Stereo Devices

Power Plug
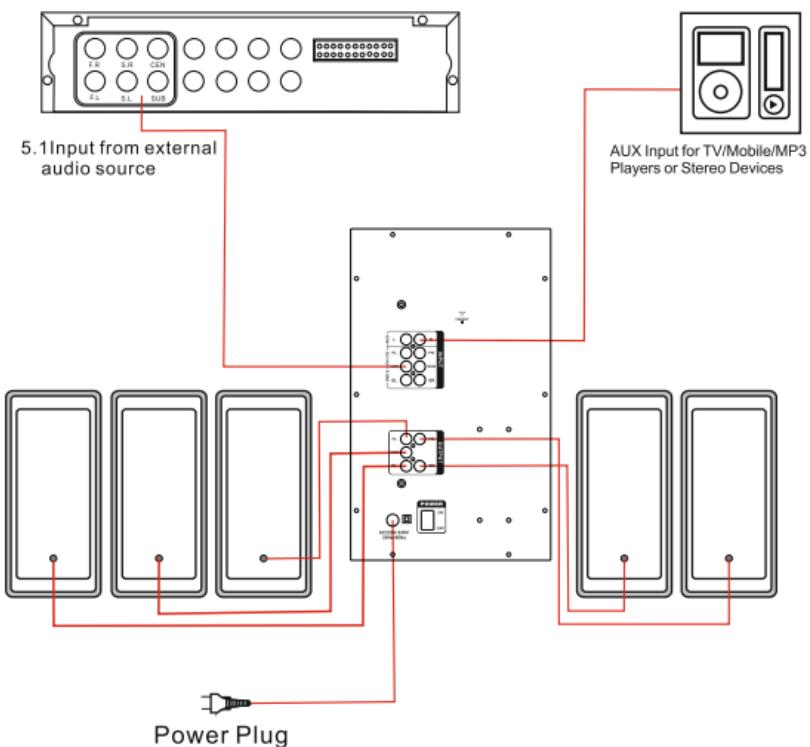
Remote Control
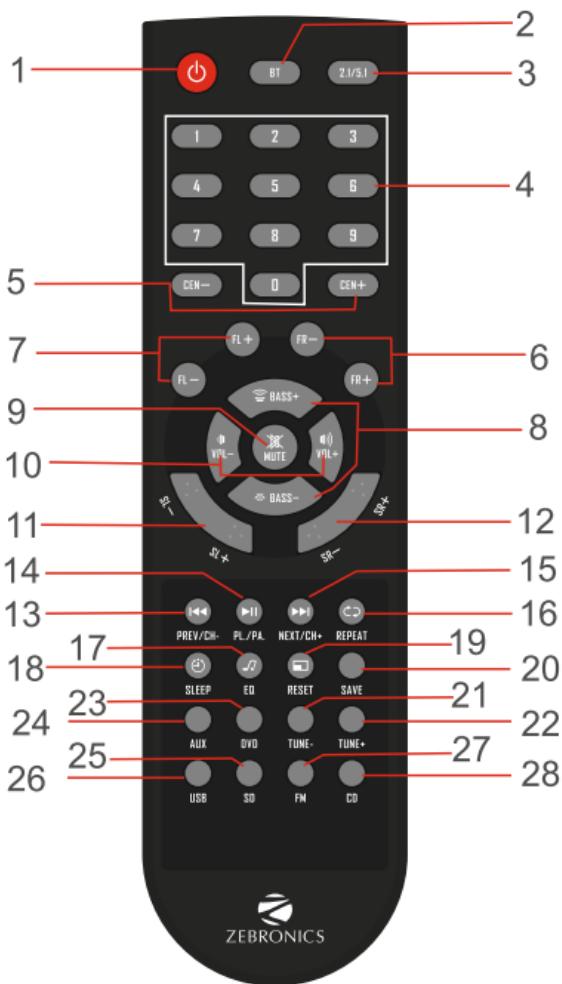
1. **STANDBY:** press this button to turn on/off the woofer.
2. **BT:** BT Input .
3. **2.1/5.1:** 2.1 CH and 5.1 CH output transformation, prologic. on when analogue 5.1 input.
4. **0-9:** To choose 0-9 Numerical play
5. **CEN+/-:** Increase or reduce the Center speaker volume
6. **FR+/-:** Increase or reduce the Front Right speaker volume
7. **FL+/-:** Increase or reduce the Front Left speaker volume
8. **BASS+/-:** Increase or reduce the bass level.
9. **MUTE:** To mute the sound.
10. **VOLUME+/-:** Increase volume or reduce the volume.
11. **SL+/-:** Increase or reduce the Rear Left volume.
12. **SR+/-:** Increase or reduce the Rear Right volume.
13. **PREV/CH-:** to select the previous track in BT/USB/Memory card or to select previous channel in radio station.
14. **PLAY/PAUSE:** to play/pause in BT/USB/Memory card, Long press "PLAY/PAUSE" for 3 seconds to search and save channels automatically in radio.
15. **NEXT/CH+:** to select the next track in BT/ USB/Memory card or to select next channel in radio.
16. **REPEAT:** Repeat an audio track/ all track.
17. **EQ:** To choose audio equalizer presets.
18. **SLEEP:** Sleep timer.
19. **RESET:** Reset to the default mode.
20. **SAVE :** Save the FM after fine tuning of the radio.
21. **TUNE-:** FM tuning decrease.
22. **TUNE+:** FM tuning increase.
23. **DVD:** DVD 5.1 channels audio input mode.
24. **AUX:** AUX audio input mode.
25. **SD/MMC:** SD/MMC mode.
26. **USB:** USB audio input.
27. **FM:** FM mode.

General Instructions
BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on "**ZEB-BT8490RUCF**" to connect.

USB/SD Mode:

Insert the USB/SD flash drive to the speaker. The speaker will detect the USB/SD and the audio files from flash drive will be played automatically. (This mode isn't selectable on the speaker or remote control unless a USB/SD flash drive is connected).

Ensure that your USB/SD flash drive contains MP3/WAV/WMA files (other file types not supported).

FM Radio:

Switch the speaker to FM mode. In FM mode, press &hold the "**Play / Pause**" button in the remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play. The next button or previous button in the remote can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source.

The songs from the audio source can be heard through the speaker.