Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ILIFE T20s Ultra Robotic Vacuum Cleaner User Manual

Contents

Hide

1 INSTRUCTION
2 Specifications
3 What's in the Box
4 Product Overview
5 Remote Control Guide
6 Placement Guidelines
7 Charging Steps



ILIFE T20s Ultra Robotic Vacuum Cleaner



INSTRUCTION

The ILIFE T20s Ultra is an indoor robotic vacuum cleaner designed for daily home cleaning. Before use, read the manual to understand safe operation, correct setup (including the auto-empty station), and maintenance requirements for best performance.

Specifications

Product	ILIFE T20s Ultra Self-Empty Robotic Vacuum Cleaner
Indoor use	Indoor home use only (do not use outdoors or in commercial environments)
Provided auto-empty station model for recharging	P500
Recommended power accessory	Use only manufacturer-recommended accessories and original rechargeable battery and charging dock
Charging voltage requirement	Ensure voltage matches the specifications on the charging dock
Wireless frequency bands	Bluetooth: 2402–2480 MHz; Wi-Fi: 2412–2472 MHz

What's in the Box


Robot Vacuum

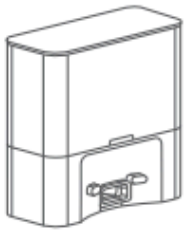
Self-empty Station

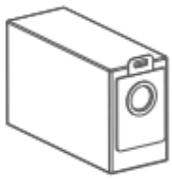
Dust Bag × 5

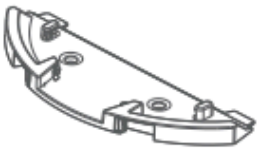
Mopping Support


Mop Cloth × 2


Remote Control


Cleaning Brush


Extra Side Brush



User Manual


High Performance Filter


AAA Battery ×2

Note:
Product illustrations in this manual are for reference only. Due to updates and
improvements, actual products may differ slightly from illustrations.

Technical Specifications
Robot
Specification
Model
Dimensions
Battery Type
Charging Time
Dustbin Capacity
Water Tank Capacity
Net Weight

Self-Empty Station
Specification
Dimensions
Rated Input
Rated Output
Dust Bag Capacity
Net Weight
Details
T 20s Ultra
335 x 335 x 95 mm
Li-ion
< 360 minutes
0.3 L
0.2 L
3.4 kg
Details
323 x 153 x 321 mm
220V-240V 50/60 Hz
191/ = IA
3.5 L
3.7 kg

Product Overview

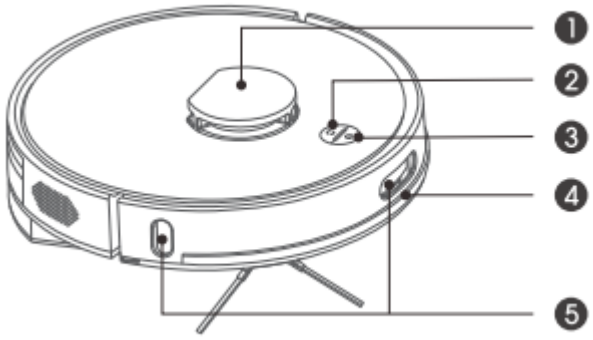

o
Recharge Button
o
Power/Clean/Pause Button
o
Bumper
Infrared Receiver Sensor
O Cliff Sensors

O
Side Brush
o
Side Wheels
o
Nose Wheel
Battery Compartment
2-in-l Roller Brush
o
2-in-l Dustbin & Water Tank
Dustbin Release Button
Cleaning Scraper
Charging Pins

o
High Performance Filter
O High-efficiency Filter Cover
O
Sponge Filter
O Water Inlet Plug
o
Dustbin Button
o
Dust Outlet
*Note:
When filled with water, the robot’s ability to climb over obstacles may be slightly reduced.

o
Top Cover
o
Charging Pins
o
Dust Bag
O Status Indicator Light
O
Lens Sensor
O Dust Inlet

Remote Control Guide

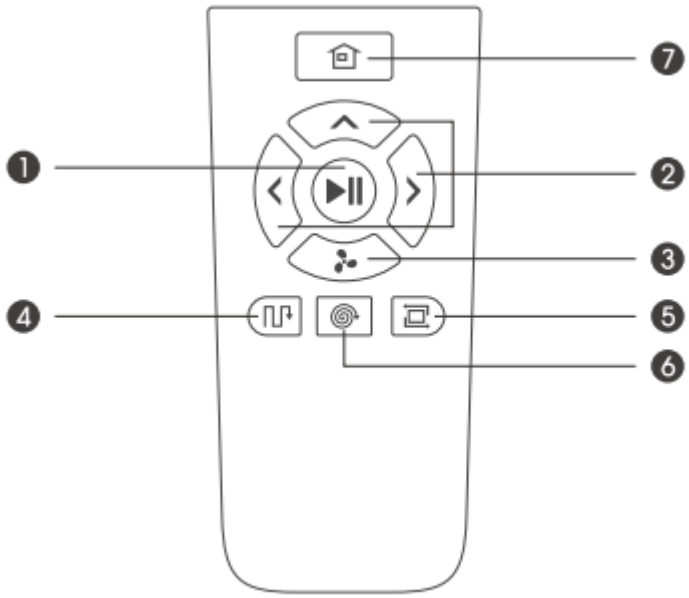

• Remote Control Buttons
Button
o
Power
O Direction
o
Suction
Function
Wake the robot from sleep / Start or pause cleaning
In standby mode: Forward, Left, Right
(Not functional during running)
Switch Suction Level by Each Press:
Standard Strong -o Max —s Silent -o Standard

Important Pre-Cleaning Notes
Daily Use Encouraged
Frequent use helps the robot learn your home layout for more efficient path planning and reduced missed spots.
Follow these guidelines before each use to protect your home and maximize the
robot’s cleaning efficiency:
A. Remove loose items from the floor
Clear cables, clothing, or small objects that
could get tangled in the wheels or brushes.

Placement Guidelines

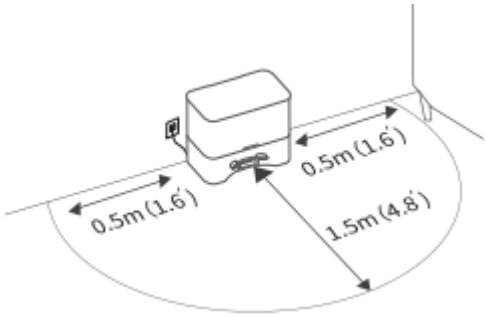

• Placement Guidelines
1. Place the station on a hard, flat surface against a wall.
2. Ensure there are no obstacles within 1.5 meters in front and 0.5 meters on
both sides.
3. Avoid placing it in areas with
strong sunlight or reflective surfaces.
4. Keep it away from places where
pets sleep to avoid noise disturbance.
• Power Connection
Plug in the power cable. Once powered,
the station’s indicator light Will turn on.
• Dust Bag Installation
1. Open the top cover of the station.
2. Install the new dust bag into the station and ensure that the dust bag handle is not pulled out.
3. Close the cover.

Charging Steps

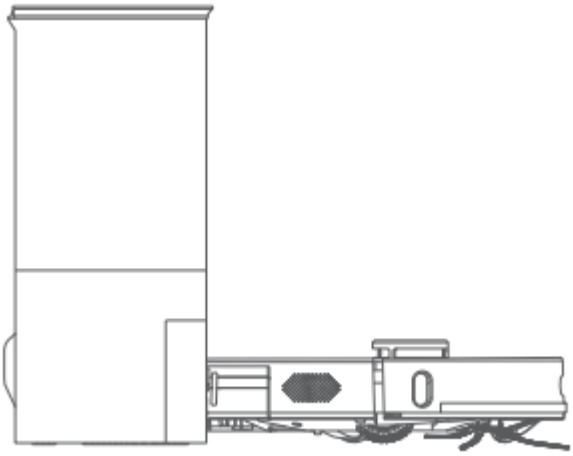

• Proper P acement
Align the robot with the charging pins
on the station.
When connected properly, the robot's
orange charging light Will blink slowly,
indicating it is charging.
• Charging Completes
When all indicator lights turn Off, the battery is fully charged.
Tip: Recharge the robot after each use to extend battery life.
Important Notes
In Daily Use
I. Make sure the charging pins on the robot and station remain clean to avoid poor contact.
2. Store the robot on the station with the station powered on.
• When Not in Use
For long-term storage, fully charge the robot, turn it off (press and hold power for 3 seconds), and store it in a dry, ventilated place.

Important Safety Instructions
This appliance can be used by children aged from 8 years and above and persons With reduced physical, sensory or mental capabilities or lack Of experience and knowledge if they have been given supervision or instruction
concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
Remove hazards such as power cords, small items, or loose objects from the
floor before cleaning.

Fold carpet tassels under the rug and lift hanging curtains or tablecloths off
the floor.
For staircases or elevated areas, test whether the robot detects edges. Use barriers if necessary.
Use only manufacturer-recommended accessories and original rechargeable
battery and charging dock.
Ensure the voltage matches the specifications on the charging dock.
This device is for indoor home use only. Do not use outdoors or in commercial
environments.
Do not use water to rinse the device or wipe it with a wet cloth.
Do not operate the robot on wet or flooded surfaces.
DO not use near open flames or fragile items.
Keep hair, fingers, and loose clothing away from moving parts and openings.
Do not vacuum hard, sharp, flammable, or burning objects.
Do not use a damaged charging dock or power cord.
Keep the power cord away from heat sources and do not allow the robot to
run over it.
If the power cord is damaged, have it replaced by a qualified technician.
Ensure the dustbin and filter are installed correctly before use.
DO not operate in a room where an infant is sleeping.
Stop using the device if it has been dropped, damaged, exposed to water, or used outdoors. Contact customer service.
Not suitable for high-pile carpets or certain dark-colored carpets.

Documents / Resources



T20s Ultra Robotic Vacuum Cleaner

User Manual · T20s Ultra Robotic Vacuum Cleaner, T20s Ultra, Robotic Vacuum Cleaner, Vacuum Cleaner, Cleaner